

WASHER ANY MODE

	ACTION
	GO to step 2.
	LOCATE and REPAIR open in WHT (93) wire from switch to fuse block.
	GO to step 3.
or both	REPLACE wiper/washer switch.
	LOCATE and REPAIR open in WHT (91) and PPL (92) wires between wiper/washer switch and wiper motor module.
	REPAIR wiper motor module. Refer to Section 8D in Service Manual.

SPEED INOPERATIVE)

	ACTION
	REPAIR wiper motor module. Refer to Section 8D in Service Manual.
	GO to step 2.
	LOCATE and REPAIR open in PPL (92) wire from wiper switch to wiper motor module.
	REPLACE wiper switch.

SPEED INOPERATIVE)

	ACTION
	REPAIR wiper motor module. Refer to Section 8D in Service Manual.
	GO to step 2.
	LOCATE and REPAIR open in GRA (91) wire from wiper switch to wiper motor module.

WIPERS WILL NOT PARK

TEST	RESULT	ACTION
1. Turn ignition switch to RUN. Connect test lamp from WHT (93) wire at wiper motor module connector or C155 to ground.	Test lamp lights.	GO to step 2.
	Test lamp does not light.	LOCATE and REPAIR open in WHT (93) wire between wiper motor module and connector C100.
2. Connect test lamp from ORN (98) wire to ground.	Test lamp lights.	GO to step 3.
	Test lamp does not light.	REPAIR wiper motor module. Refer to Section 8D of Service Manual.
3. Disconnect wiper/washer switch connector C340. Connect test lamp from ORN (98) wire at C340 to ground.	Test lamp lights.	REPLACE wiper/washer switch.
	Test lamp does not light.	LOCATE and REPAIR open in ORN (98) wire between wiper motor module and wiper/washer switch.

WIPERS WILL NOT SHUT OFF

TEST	RESULT	ACTION
1. Disconnect wiper motor module. Connect fused jumper between ORN (98) terminal of wiper module and GRY (91) terminal of wiper module. Connect fused jumper from WHT (93) terminal of wiper module and battery positive.	Wiper motor parks and turns off.	REPLACE wiper/washer switch.
	Wiper motor continues to run.	REPAIR wiper motor module.

WASHER WILL NOT OPERATE (W/O PULSE WIPERS)

TEST	RESULT	ACTION
1. Disconnect washer pump motor connector C154. Place ignition switch ACCY and washer switch to ON. Connect test lamp from PNK (94) wire at washer pump motor connector C154 to ground.	Test lamp lights.	GO to step 2.
	Test lamp does not light.	GO to step 3.
2. Connect test lamp from PNK (94) wire to BLK (150) wire at washer pump motor connector C154.	Test lamp lights.	REPLACE washer motor.
	Test lamp does not light.	LOCATE and REPAIR open in BLK (150) wire from washer pump motor to ground terminal G104.
3. Connect test lamp from PNK (94) wire at wiper switch connector C154 to ground.	Test lamp lights.	LOCATE and REPAIR open in PNK (94) wire from wiper switch to ground terminal G104.