

































 **Service and Parts Operations**

[2000 Chevrolet/Geo Blazer - 4WD - Driveline/Axle - Transfer Case - NVG 236 \(Two Speed Automatic\)](#) - Diagnostic Information and Procedures

Select a document to view:

-  [Diagnostic Starting Point](#)
-  [Scan Tool Data List](#)
-  [Scan Tool Data Definitions](#)
-  [Diagnostic System Check](#)
-  [Diagnostic Trouble Codes](#)
-  [DTC B2725 ATC Mode Switch Circuit Malfunction](#)
-  [DTC C0300 Rear Speed Sensor Malfunction](#)
-  [DTC C0305 Front Speed Sensor Malfunction](#)
-  [DTC C0308 Motor A/B Circuit Low](#)
-  [DTC C0309 Motor A/B Circuit High](#)
-  [DTC C0310 Motor A/B Circuit Open](#)
-  [DTC C0315 Motor Ground Circuit Open](#)
-  [DTC C0323 T-Case Lock Circuit Low](#)
-  [DTC C0324 T-Case Lock Circuit High](#)
-  [DTC C0327 Encoder Circuit Malfunction](#)
-  [DTC C0362 4LO Discrete Output Circuit High](#)
-  [DTC C0367 Front Axle Control Circuit High](#)
-  [DTC C0374 General System Malfunction](#)
-  [DTC C0376 Front/Rear Shaft Speed Mismatch](#)
-  [DTC C0387 Unable to Perform Shift](#)
-  [DTC C0550 ECU Malfunction](#)
-  [DTC C0611 VIN Information Error](#)
-  [Symptoms](#)
-  [Front Axle Will Not Engage](#)
-  [Front Axle Will Not Disengage](#)
-  [Transfer Case Shift Control Switch Inoperative](#)
-  [No Correction for Slip in AWD Mode](#)
-  [Switch Indicator Lamps Flash Continuously](#)
-  [Switch Indicator Lamps Remain ON - Two or More](#)
-  [Switch Indicator Lamps Do Not Light - One or More](#)
-  [Service Indicator Always On](#)
-  [Service Indicator Inoperative](#)

 [Transfer Case Mechanical System Diagnosis](#)

[\[HOME\]](#) [\[PUBLICATIONS\]](#)
[\[NUMBER SEARCH\]](#) [\[LATEST NEWS\]](#) [\[BULLETIN SEARCH\]](#) [\[HELP\]](#)