

## SHOULD THE COIL FAIL ANY OF THESE STEPS. IT MUST BE REPLACED.

- 1. COLD AND HOT PRIMARY AND SECONDARY READINGS MUST BE WITHIN SPECIFICATIONS.
- 2. LOOK FOR CORRODED OR DISCOLORED TERMINALS
- 3. LOOK FOR CARBON TRACK (BURNED) OR CRACKING ANYWHERE ON COIL.

