

<- Back

Forward ->

Document ID# 593333
2000 Chevrolet/Geo Blazer - 2WD

Print

Entertainment Components

Name	Location	Locator View	Connector End View
Body Control Module (BCM) Connector C2, (LT BLU) (24 Cavities)	Lower center of the IP, on the heater case	Body Control System Component Views in Body Control System	Body Control System Connector End Views in Body Control System
IP Fuse Block	LH of the IP, near the door jamb switch, LF	Power and Grounding Component Views in Wiring Systems	Power and Grounding Connector End Views in Wiring Systems
Powertrain Control Module (PCM) Connector C2 (2.2L Engine)	On the right side of the engine compartment	Engine Controls Component Views in Engine Controls - 2.2L	Powertrain Control Module (PCM) Connector End Views in Engine Controls - 2.2L
Radio (Except Bravada) Connector C1, (10 Cavities)	Center of IP	Entertainment Component Views	Entertainment Connector End Views
Radio (Except Bravada) Connector C2, (10 Cavities)	Center of IP	Entertainment Component Views	Entertainment Connector End Views
Radio (Except Bravada) Connector C3 (9 Cavities) (w/ Remote Audio Player)	Center of IP	Entertainment Component Views	Entertainment Connector End Views
Radio (Bravada)	Center of IP	Entertainment Component Views	Entertainment Connector End Views
Radio Antenna	Mounted on the RF fender	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker Amplifier Connector (C1) (w/ Uplevel Audio)	In the center console	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker Amplifier Connector (C2) (w/ Uplevel Audio)	In the center console	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, Front LH	Top LH of the IP	Entertainment Component Views	Entertainment Connector End Views

Radio Speaker, Front Side Door, LH	In the LH Front side door	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, Front Side Door, RH	In the RH Front side door	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, LR (2-door Utility)	Behind the LH B pillar	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, LR (Extended Cab Pickup w/o Third Door)	At the LH C pillar	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, Front RH	Top RH of the IP	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, RR (2-door Utility)	Behind the RH B pillar	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, RR (Extended Cab Pickup w/o Third Door)	At the RH C pillar	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, Rear Side Door, LH (4-door Utility)	In the LH Rear door	Entertainment Component Views	Entertainment Connector End Views
Radio Speaker, Rear Side Door, RH (4-door Utility)	In the RH Rear door	Entertainment Component Views	Entertainment Connector End Views
Rear Seat Audio Control	Rear of the center console	Entertainment Component Views	Entertainment Connector End Views
Redundant Steering Wheel Controls	Mounted on the steering wheel	Entertainment Component Views	Entertainment Connector End Views
Remote Tape/CD Player (Utility)	In the center floor console	Entertainment Component Views	Entertainment Connector End Views
Vehicle Control Module (VCM) (4.3L Engine)	RH of the engine compartment	Engine Controls Component Views in Engine Controls - 4.3L	--
Vehicle Control Module (VCM) (4.3L Engine) Connector C4 (24 Cavities)	RH of the engine compartment	Engine Controls Component Views in Engine Controls - 4.3L	VCM Connector End Views in Engine Controls - 4.3L
C101 (16 Cavities) (2.2L Engine)	Engine harness to body harness, RH of the engine compartment, near the PCM	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C201 (4 Cavities)	Steering column harness to steering wheel controls jumper harness, behind the SIR steering wheel inflator module	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C203 (116 Cavities)	Body harness to IP harness, to	Harness Routing Views in Wiring	Inline Harness Connector End Views

	the RH of the IP	Systems	in Wiring Systems
C205 (40 Cavities) (Envoy)	IP harness to Console harness, RH front of the center floor console behind access panel	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C210 (4 Cavities)	Body harness to radio steering wheel controls, Front of the IP, next to C211	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C211 (48 Cavities)	Body harness to steering column harness, in front of the IP, near the steering column	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C305 (2 Cavities) (4-Door Utility)	Body harness to LH rear door harness, near the LH rear door	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C307 (2 Cavities) (4-Door Utility)	Body harness to RH rear door harness, near the RH rear door	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C474 (24 Cavities) (Vehicle Interface Unit, Connector C1) (Envoy only)	In the rear quarter of the vehicle	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C500 (4 Cavities) (w/o Power Locks/Windows)	Body harness to LF door harness, in the LF door	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C500 (22 Cavities) (w/ Power Locks/Windows)	Body harness to LF door harness, in the LF door	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C601 (4 Cavities) (w/o Power Locks/Windows)	Body harness to RF door harness, in the RF door	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
C601 (22 Cavities) (w/ Power Locks/Windows)	Body harness to RF door harness, in the RF door	Harness Routing Views in Wiring Systems	Inline Harness Connector End Views in Wiring Systems
G200	(CKT 1850) Body harness, to the LF of the IP, above P100	Harness Routing Views in Wiring Systems	--
G201	(CKT 1850) Body harness, to the LF of the IP, above P100, above G200 and G202	Harness Routing Views in Wiring Systems	--
G203	(CKT 1050) Body harness, to the RH of the IP, between C203 and the splice packs, breakout from harness, to right of G204/G206 on bulkhead	Harness Routing Views in Wiring Systems	--
G204	(CKT 1050) Body harness, to the RH of the IP, between C203 and the splice packs, breakout	Harness Routing Views in Wiring Systems	--

	from harness, left of G203/G205	Systems	
G206	(CKT 1050) Body harness, to the RH of the IP, between C203 and the splice packs, breakout from harness, left of G203/G205	Harness Routing Views in Wiring Systems	--
G207	(CKT 1850) Steering Column harness, next to multifunction switch	Harness Routing Views in Wiring Systems	--
P100	IP Bulkhead pass-through, LH rear of the engine compartment, on the cowl	Harness Routing Views in Wiring Systems	--
P500	Body harness to the LF door pass-through, between the body and the LF door	Harness Routing Views in Wiring Systems	--
P600	Body harness to RF door pass-through, between the body and the RF door	Harness Routing Views in Wiring Systems	--
P700 (4-Door Utility) (LH Rear)	Body to LH rear door harness	Harness Routing Views in Wiring Systems	--
P800 (4-Door Utility) (RH Rear)	Body to RH rear door	Harness Routing Views in Wiring Systems	--
S205	(CKT 1220) IP harness, between the breakouts for the radio and BCM connector C3, 8 cm (3.15 in) from the breakout to the radio	Harness Routing Views in Wiring Systems	--
S240 (Utility w/ Auto A/C)	(CKT 340) IP harness, 4 cm (1.57 in) from the breakout to the BCM module connector C3 and the breakout to the instrument cluster	Harness Routing Views in Wiring Systems	--
S272 (Utility w/ Base Audio)	(CKT 117) IP harness, lower center, between the breakouts for the stereo radio and the RH courtesy lamps, 8 cm (3.15 in) from the breakout to the stereo radio	Harness Routing Views in Wiring Systems	--
S273 (Utility w/ Base Audio)	(CKT 118) IP harness, between the breakouts for the instrument cluster and the LH IP speaker, 16 cm (6.3 in) from the breakout to the instrument cluster	Harness Routing Views in Wiring Systems	--
	(CKT 200) IP harness, lower center, between the breakouts	Harness Routing	

S274 (Utility w/ Base Audio)	for the stereo radio and the RH courtesy lamps, 12 cm (4.72 in) from the breakout to the stereo radio	Views in Wiring Systems	--
S275 (Utility w/ Base Audio)	(CKT 20) IP harness, between the breakouts for the BCM connector C3 and the stereo radio, 4 cm (1.57 in) from the breakout to the stereo radio	Harness Routing Views in Wiring Systems	--
S282 (4WD Base Pickup Only)	(CKT 1382) IP harness, between the breakouts to the BCM connector C3 and the stereo radio, 6 cm (2.36 in) from the breakout to the BCM	Harness Routing Views in Wiring Systems	--
S283	(CKT 2409) IP harness, between the breakouts to the BCM connector C3 and the radio, 13 cm (5.12 in) from the breakout to the BCM	Harness Routing Views in Wiring Systems	--
S290	(CKT 1301) IP harness, between the breakout to the BCM, C3, and In-line Connector C205	Harness Routing Views in Wiring Systems	--
S350 (Envoy)	(CKT 1050) Console harness, between connector C205 and the first breakout, 7 cm (2.76 in) from the first breakout	Harness Routing Views in Wiring Systems	--
S351 (Envoy)	(CKT 314) Console harness, between the breakouts to the amplifier and audio controls, 7 cm (2.76 in) from the breakout to the amp	Harness Routing Views in Wiring Systems	--
Splice Pack SP202	(CKT 379, CKT 1850) Strapped to the body harness, at the LH center of the IP	Harness Routing Views in Wiring Systems	--
Splice Pack SP203	(CKT 1050) IP harness, on the IP, behind HVAC controls, strapped to the body harness	Harness Routing Views in Wiring Systems	--

<- Back

Forward ->

Document ID# 593333
2000 Chevrolet/Geo Blazer - 2WD

Print