

&lt;- Back

Forward -&gt;

**Document ID# 858946**  
**2003 Chevrolet Blazer - 4WD**

Print

## Master Electrical Component List

Name	Location	Locator View	Connector End View
1-2 Shift Solenoid (1-2 SS) Valve	In the automatic transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
2-3 Shift Solenoid (2-3 SS) Valve	In the automatic transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
3-2 Shift Solenoid (3-2 SS) Valve	In the automatic transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Auxiliary Power Outlet - Left	In the auxiliary power tray, to the right of the I/P	<a href="#">Power and Grounding Component Views</a>	<a href="#">Power and Grounding Connector End Views</a>
Auxiliary Power Outlet - Right	In the auxiliary power tray, to the right of the I/P	<a href="#">Power and Grounding Component Views</a>	<a href="#">Power and Grounding Connector End Views</a>
A/C Compressor Clutch	Part of the A/C compressor	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
A/C Compressor Clutch Diode (2.2L)	Approximately 20 cm (7.87 in) from the A/C compressor connector, towards the main engine harness	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	--
A/C Compressor Clutch Diode (4.3L)	In the engine harness breakout, approximately 8 cm (3.15 in) from the breakout to the A/C compressor high pressure switch	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	--
A/C High Pressure Switch (4.3L)	At the rear of the A/C compressor	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual

A/C Low Pressure Switch (4.3L)	At the A/C accumulator	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
A/C Refrigerant Pressure Sensor (2.2L)	On the A/C evaporator tube	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Air Temperature Actuator (C42/C60)	At the right top side of the heater	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Air Temperature Sensor Assembly - Inside	Within the headliner, on front passenger side	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Ambient Light Sensor	At the top left side of the I/P	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Ambient Air temperature Sensor (DIC) (w/ DIC, Long Console)	At the center front of the vehicle, behind the fascia	--	<a href="#">Instrument Panel, Gages, and Console Connector End Views</a> in Instrument Panel, Gages and Console
Ashtray Lamp	In the I/P ashtray assembly	--	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Automatic Transmission Control (Utility w/ Floor Shift)	Located in the center floor console	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Related Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Automatic Transmission Fluid Temperature (TFT) Sensor	Part of the automatic transmission fluid pressure (TFP) manual valve position switch	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Automatic Transmission Shift Lever Position Indicator (Utility w/ Floor Shift)	Part of the automatic transmission controller	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Automatic Transmission Fluid Pressure Manual Valve Position Switch	In the automatic transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
		<a href="#">Automatic</a>	<a href="#">Automatic</a>

Automatic Transmission Shift Lock Actuator ( Column Shift)	In the steering column, on the center lower side	<a href="#">Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Transmission Related Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Automatic Transmission Shift Lock Actuator (w/ Floor Shift)	Part of the shift control assembly, in the center floor console	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Related Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Backup Lamp Switch (w/ M50)	On the left side of transmission	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Backup Lamp Switch (w/ M30)	Part of park/neutral position switch, on the left side of the transmission	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Backup Lamp - Left	At the LR of the vehicle, in the tail lamp	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Backup Lamp - Right	At the RR of the vehicle, in the tail lamp	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Battery	At the RF of the engine compartment	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	--
Battery Fuse	On the lower right side of the radiator support, below the battery	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	--
Blower Motor	At the RR of the engine compartment	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Blower Motor Relay	At the center rear of the engine compartment, on the plenum front panel	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Blower Motor Resistor Assembly (Non-A/C)	At the LR of the engine compartment, on the blower case	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Blower Motor Resistor Assembly (Manual A/C)	At the LR of the engine compartment, on the blower case	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Body Control Module (BCM)	Behind the center of the I/P, on the heater case	<a href="#">Body Control System Component Views</a> in Body Control System	<a href="#">Body Control System Connector End Views</a> in Body Control System
	In the left rear corner of the		

Brake Fluid Level Switch	engine compartment, underneath the brake fluid reservoir, near the EBCM	<a href="#">Hydraulic Brakes Component Views</a> in Hydraulic Brakes	<a href="#">Hydraulic Brakes Connector End Views</a> in Hydraulic Brakes
Brake Pressure Modulator Valve (BPMV)	Part of the EBCM, in the rear top left corner of the engine compartment, near the brake master cylinder	--	--
Camshaft Position (CMP) Sensor (2.2L)	On the right side of the engine, forward of the coil packs	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2 L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2 L
Camshaft Position (CMP) Sensor (4.3L)	At the rear of the engine, near the back of the distributor	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3 L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3 L
Cargo Lamp	In the top rear center of the liftgate/endgate opening	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Center High Mounted Stop Lamp (Pickup)	At the top rear center of the cab	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Center High Mounted Stop Lamp (Utility)	At the top rear center of the vehicle	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Center High Mounted Stop Lamp Resistor (Utility)	In the body harness, approximately 10 cm (3.9 in) before the breakout to the cargo and center high mounted stop lamps	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
Central Sequential Fuel Injection - Central SFI	Top center of the engine, forward of the distributor	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Cigar Lighter	In the I/P tray assembly, in the center of the I/P	<a href="#">Power and Grounding Component Views</a>	<a href="#">Power and Grounding Connector End Views</a>
Clutch Pedal Position (CPP) Switch	On the clutch pedal support bracket	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	<a href="#">Engine Electrical Connector End Views</a> in Engine Electrical
Compass Sensor (w/ Short Console)	In the headliner, to the right of the overhead console	--	<a href="#">Instrument Panel, Gages, and Console Connector End Views</a> in Instrument Panel, Gages and Console
Compass Sensor (w/ Long Console)	Part of the driver information center (DIC)	--	--
		<a href="#">Lighting Systems</a>	<a href="#">Lighting Systems</a>

Courtesy Lamp (Left Console)	In the lower left corner of the I/P	<a href="#">Component Views</a> in Lighting Systems	<a href="#">Connector End Views</a> in Lighting Systems
Courtesy Lamp (Right Console)	In the lower right corner of the I/P	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Crankshaft Position (CKP) Sensor (2.2L)	Right side of the engine, below the coil packs	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2 L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2 L
Crankshaft Position (CKP) Sensor (4.3L)	Below the RF of the engine, near the harmonic balancer	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3 L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3 L
Cruise Control Module (CCM)	At the LR of the engine compartment, on the cowl	<a href="#">Cruise Control Component Views</a> in Cruise Control	<a href="#">Cruise Control Connector End Views</a> in Cruise Control
Data Link Connector (DLC)	At the lower left corner of the I/P	<a href="#">Data Link Communications Component Views</a> in Data Link Communications	<a href="#">Data Link Communications Connector End Views</a> in Data Link Communications
Daytime Running Lamps (DRL) Relay (ZR2)	Taped to the body harness, near the breakout for the rear washer hose	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Dome Lamp (Utility)	In the center of the headliner, above the front seats	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Door Handle Switch - Right	Part of the door latch assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Door Jamb Switch - Driver	At the left side of the I/P	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Door Jamb Switch - Front Passenger	Right side of the I/P	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Door Jamb Switch - LR	In the left B-pillar	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Door Jamb Switch - RR	In the right B-pillar	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Door Lock and Window Switch - Driver	In the left door trim panel, near the armrest	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Door Lock and		<a href="#">Power Door Systems</a>	<a href="#">Power Door Systems</a>

Window Switch - Front Passenger	In the right door trim panel, near the armrest	<a href="#">Component Views</a> in Doors	<a href="#">Connector End Views</a> in Doors
Door Lock Cylinder Switch - Driver	Part of the driver door latch assembly	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Door Lock Cylinder Switch - Front Passenger	Part of the front passenger door latch assembly	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Driver Information Center (DIC)	In the passenger compartment, in the front overhead console	--	<a href="#">Instrument Panel, Gages, and Console Connector End Views</a> in Instrument Panel, Gages, and Console
Electronic Brake Control Module (EBCM)	Attached to the brake pressure modulator valve (BPMV), in the LR corner of the engine compartment	<a href="#">ABS Component Views</a> in Antilock Brake System	<a href="#">ABS Connector End Views</a> in Antilock Brake System
Engine Coolant Temperature (ECT) Sensor (2.2L)	At the top front of the engine, in the coolant pipe	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Engine Coolant Temperature (ECT) Sensor (4.3L)	On the left side of engine, near the spark plugs, on the left cylinder head	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Engine Oil Pressure (EOP) Sensor (2.2L)	On the right side of engine, forward of coil pack	<a href="#">Instrument Panel, Gages, and Console Component Views</a> in Instrument Panel, Gages, and Console	<a href="#">Instrument Panel, Gages, and Console Connector End Views</a> in Instrument Panel, Gages, and Console
Engine Oil Pressure (EOP) Sensor (4.3L)	At the rear of the engine, below the distributor	<a href="#">Instrument Panel, Gages, and Console Component Views</a> in Instrument Panel, Gages, and Console	<a href="#">Instrument Panel, Gages, and Console Connector End Views</a> in Instrument Panel, Gages, and Console
Evaporative Emission (EVAP) Canister Purge Solenoid (2.2L)	On the right side of engine, above the coil packs	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Evaporative Emission (EVAP) Canister Purge Solenoid (4.3L)	On the top right center of the engine, near the fuel injector connector	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Evaporative Emission (EVAP) Canister Vent Solenoid (2.2L)	Near the fuel tank, mounted on the center of the rear crossmember	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L



Evaporative Emission (EVAP) Canister Vent Solenoid (4.3L)	Near the fuel tank, mounted on the center of the rear crossmember	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Fog Lamp - LF	In the LF headlamp assembly, in the inside lower corner	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Fog Lamp - LR (Export)	At the bottom of the LR tail lamp	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Fog Lamp - RF	In the RF headlamp assembly, in the inside lower corner	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Fog Lamp - RR (Export)	At the bottom of the RR tail lamp	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Fog Lamp Switch - Front	On the left side of the I/P, attached to the headlamp switch assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Front Axle Indicator Switch (NP1)	At the front axle, at the right side of the differential	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 233 (NP1)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 233 (NP1)
Front Axle Indicator Switch (NP8)	At the front axle, at the right of the differential	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Front Axle Vacuum Solenoid (NP8)	On the cowl, approximately 16.5 cm (6.5 in) from the breakout to the windshield wiper motor	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Fuel Injectors (2.2L)	On the lower manifold assembly	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	--
Fuel Injectors (4.3L)	Part of the central sequential fuel injection (Central SFI)	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	--
Fuel Pump and Sender Assembly (2.2L)	Inside the fuel tank, connects at the top of the fuel tank	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Fuel Pump and Sender Assembly (4.3L)	Inside the fuel tank, connects at the top of the fuel tank	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
			<a href="#">Engine Controls</a>

Fuel Tank Pressure (FTP) Sensor (2.2L)	Inside the fuel tank, connects at the top of the fuel tank	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Connector End Views</a> in Engine Controls - 2.2L
Fuel Tank Pressure (FTP) Sensor (4.3L)	Inside the fuel tank, connects at the top of the fuel tank	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Fuse Block - I/P	At the left side of the I/P, near the left door jamb switch	<a href="#">Power and Grounding Component Views</a>	--
Fuse Block - Underhood	In the engine compartment, on top of the left inner wheel well	<a href="#">Power and Grounding Component Views</a>	--
Fuse Holder	On the lower right side of the radiator support, below the battery	<a href="#">Power and Grounding Component Views</a>	--
Fusible Link	In line between the battery fuse stud and the generator B terminal	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	<a href="#">Engine Electrical Connector End Views</a> in Engine Electrical
Garage Door Opener	In the headliner, part of the overhead console	<a href="#">Garage Door Opener Component Views</a> in Garage Door Opener	<a href="#">Garage Door Opener Connector End Views</a> in Garage Door Opener
Generator (2.2L)	Located at the RF corner of the engine	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	<a href="#">Engine Electrical Connector End Views</a> in Engine Electrical
Generator (4.3L)	Located at the RF corner of the engine	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	<a href="#">Engine Electrical Connector End Views</a> in Engine Electrical
Hazard Switch	Located on the top of the steering column, serviced as part of the multifunction switch	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
Headlamp Ambient Light Sensor	On the top left side of the I/P pad	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp - High Beam - Left	At the LF corner of the vehicle, the inboard headlamp bulb	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp - High Beam - Right	At the RF corner of the vehicle, the inboard headlamp bulb	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp Leveling Actuator - Left (Export)	At the LF corner of the vehicle, behind the left headlamp	--	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp Leveling Actuator - Right (Export)	At the RF corner of the vehicle, behind the right headlamp	--	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems



Headlamp Leveling Switch (Export)	On the left side of the I/P, near the fog lamp switch	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp - Low Beam - Left	At the LF corner of the vehicle, the outboard headlamp bulb	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp - Low Beam - Right	At the RF corner of the vehicle, the outboard headlamp bulb	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp Switch	On the left side of the I/P, below the left air vent	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Headlamp Washer Fluid Pump (Export)	In the washer fluid reservoir, under the front bumper	--	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Headlamp Washer Fluid Pump Relay (Export)	Mounted on the center radiator core support	--	--
Heated Oxygen Sensor (HO2S) Bank 1, Sensor 2 (2.2L)	In the exhaust pipe, at the rear of the catalytic converter	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Heated Oxygen Sensor (HO2S) Bank 1, Sensor 1 (4.3L)	On the left side exhaust pipe, to the left of the transmission	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Heated Oxygen Sensor (HO2S) Bank 1, Sensor 2 (4.3L)	Behind the catalytic converter, at the top of the exhaust pipe	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Heated Oxygen Sensor (HO2S) Bank 2, Sensor 1 (4.3L)	On the right side exhaust pipe, in front of the catalytic converter	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Heated Seat Control Module - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Heated Seat Control Module - Front Passenger	Under the right seat	--	<a href="#">Power Seat Systems Connector End Views</a> in Seats
HVAC Control Assembly (C42/C60)	In the center of the I/P	<a href="#">HVAC Component Views</a> in HVAC Systems - Manual	<a href="#">HVAC Connector End Views</a> in HVAC Systems - Manual
Horn - Left	In the left fender well	<a href="#">Horns Component Views</a> in Horns	<a href="#">Horns Connector End Views</a> in Horns

Horn - Right	In the right fender well	<a href="#">Horns Component Views</a> in Horns	<a href="#">Horns Connector End Views</a> in Horns
Horn Switch	Part of the steering wheel pad assembly	<a href="#">Horns Component Views</a> in Horns	--
Idle Air Control (IAC) Valve (2.2L)	On the top of the engine, on the throttle body	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Idle Air Control (IAC) Valve (4.3L)	On the top of the engine, on the throttle body	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Ignition Coil (4.3L)	On the top right corner of the engine	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Ignition Control Module (ICM) (2.2L)	On the RR corner of the engine, near the grounding strap	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Ignition Control Module (ICM) (4.3L)	On the top right corner of the engine	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Ignition Key Alarm Switch	At the ignition switch, part of the lock module	--	--
Ignition Lock Cylinder Control Actuator (w/ A/T Floor Shift)	On the lower side of the steering column	<a href="#">Automatic Transmission Shift Lock Control Component Views</a> in Shift Lock Control	<a href="#">Automatic Transmission Shift Lock Control Connector End Views</a> in Shift Lock Control
Ignition Switch	On the right side of the steering column	<a href="#">Power and Grounding Component Views</a>	--
Inflatable Restraint Front End Discriminating Sensor - Left	On the front frame crossmember, on the bottom left side	<a href="#">SIR Component Views</a> in SIR	<a href="#">SIR Connector End Views</a> in SIR
Inflatable Restraint Front End Discriminating Sensor - Right	On the front frame crossmember, on the bottom right side	<a href="#">SIR Component Views</a> in SIR	<a href="#">SIR Connector End Views</a> in SIR
Inflatable Restraint I/P Module	Behind the right side of the I/P	<a href="#">SIR Component Views</a> in SIR	<a href="#">SIR Connector End Views</a> in SIR
Inflatable Restraint I/P Module Disable Switch (Pickup)	In the center of the I/P, next to the radio	<a href="#">SIR Component Views</a> in SIR	<a href="#">SIR Connector End Views</a> in SIR

Inflatable Restraint Sensing and Diagnostic Module (SDM)	Between the front seats, below the console and carpet	<a href="#">SIR Component Views</a> in SIR	<a href="#">SIR Connector End Views</a> in SIR
Inflatable Restraint Steering Wheel Module	In the steering wheel, part of the steering wheel pad	<a href="#">SIR Component Views</a> in SIR	<a href="#">SIR Connector End Views</a> in SIR
Inflatable Restraint Steering Wheel Module Coil	In the steering column, below the steering wheel and pad	--	<a href="#">SIR Connector End Views</a> in SIR
Inside Rearview Mirror	At the windshield centerline, attached to the windshield	<a href="#">Stationary Windows Component Views</a> in Stationary Windows	<a href="#">Stationary Windows Connector End Views</a> in Stationary Windows
Instrument Panel Cluster (IPC)	In the I/P, in front of the steering column	<a href="#">Instrument Panel, Gages, and Console Component Views</a> in Instrument Panel, Gages and Console	<a href="#">Instrument Panel, Gages, and Console Connector End Views</a> in Instrument Panel, Gages and Console
Intake Air Temperature (IAT) Sensor (2.2L)	At the LF corner of the engine compartment, in the air intake duct	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Intake Air Temperature (IAT) Sensor (4.3L)	At the LF corner of the engine compartment, in the air intake duct	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
I/P Dimmer Switch	Part of the headlamp switch, on the left side of the I/P	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Knock Sensor (KS) (2.2L)	On the lower right side of the engine, below the coil packs	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Knock Sensor (KS) (4.3L)	On the top rear of the engine, above the transmission bell housing, on the left side	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
License Lamp	On the rear bumper, located above or beside the license plate	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Liftglass/Endgate Lock Cylinder Switch	At the top center of the endgate	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Liftgate/Endgate Window Release Actuator	Inside the top of the endgate	<a href="#">Body Rear End Component Views</a> in Body Rear End	<a href="#">Body Rear End Connector End Views</a> in Body Rear End

Lumbar Switch - Driver	On the lower left side of the driver seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Lumbar Switch - Passenger	On the lower right side of the front passenger seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Manifold Absolute Pressure (MAP) Sensor (2.2L)	On the top right side the engine, on the intake manifold	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Manifold Absolute Pressure (MAP) Sensor (4.3L)	On the top center of the engine	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Marker Lamp - LF	At the LF corner of the vehicle, on the outboard side of the headlamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Marker Lamp - RF	At the RF corner of the vehicle, on the outboard side of the headlamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Marker Lamp - LR	At the LR corner of the vehicle, on the outboard side of the tail lamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Marker Lamp - RR	At the RR corner of the vehicle, on the outboard side of the tail lamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Mass Air Flow (MAF) Sensor (4.3L)	In the LF of the engine compartment, on the air intake duct	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Memory Seat Module - Driver	Under the driver seat	<a href="#">Power Seat Systems Component Views</a> in Seats	--
Multifunction Switch (T/SIG, HDLP/ DM, and WSW)	On the left side of the steering column	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
Outside Rearview Folding Mirror Switch (Export w/DR7)	On the top of the left door trim panel, near the front of the left window	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Outside Rear View Mirror - Driver	On the driver door, pigtail connector behind the door trim panel	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Outside Rear View Mirror - Passenger	On the passenger door, pigtail connector behind the door trim panel	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
		<a href="#">Power Door Systems</a>	<a href="#">Power Door Systems</a>

Outside Rear View Mirror Switch	On the left door trim panel, near the armrest	<a href="#">Component Views</a> in Doors	<a href="#">Connector End Views</a> in Doors
Oxygen Sensor, Bank 1 Sensor 1 (2.2L)	On the left side of engine, in the exhaust manifold crossover pipe	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Park/Turn Signal Lamp - LF	In the headlamp assembly, below the low beam bulb	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Park/Turn Signal Lamp - LR	At the LR of the vehicle, in the tail lamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Park/Turn Signal Lamp - RF	In the headlamp assembly, below the low beam bulb	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Park/Turn Signal Lamp - RR	At the RR of the vehicle, in the tail lamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Park Brake Switch	On the park brake bracket, under the left side of the I/P	<a href="#">Hydraulic Brakes Component Views</a> in Hydraulic Brakes	<a href="#">Hydraulic Brakes Connector End Views</a> in Hydraulic Brakes
Park/Neutral Position (PNP) Switch	On the left side of the transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Related Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Park Switch (w/ Column Shift)	In the steering column	--	--
Passlock™ Sensor	At the ignition switch, part of the lock module	<a href="#">Theft Deterrent System Component Views</a> in Theft Deterrent	--
Power Recliner Motor - Driver	In the left seat back, mounted to the frame	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Power Recliner Motor - Front Passenger	In the right seat back, mounted to the frame	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Powertrain Control Module (PCM)	On the right side of the engine compartment	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Powertrain Control Module (PCM) Connector End Views</a> in Engine Controls - 2.2L
		<a href="#">Automatic Transmission</a>	<a href="#">Automatic Transmission Internal</a>



Pressure Control Solenoid (PC SOL) Valve	In the automatic transmission	<a href="#">Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Propshaft Speed Sensor - Front (NP8)	Top left rear of the transfer case	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Propshaft Speed Sensor - Rear (NP8)	Top RR of the transfer case, near the rear propshaft	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Radio	In the center of I/P	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Radio Antenna	Mounted on the RF fender	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Rear Window Defogger Grid (Utility)	Part of the liftglass window	<a href="#">Stationary Windows Component Views</a> in Stationary Windows	--
Rear Window Defogger Switch (Utility)	Part of the HVAC control assembly, in the center of the I/P	--	--
Rear Window Wiper Cutout and Liftglass Ajar Jamb Switch (Utility)	In the liftgate/endgate assembly, near the latch	<a href="#">Wiper/Washer System Component Views</a> in Wipers/Washer Systems	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Rear Wiper/Washer and Endgate/Liftgate Window Release Switch (Utility)	On the I/P, to the left of the radio	--	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Relay Block - Body	Left side of the I/P, to the right of the I/P fuse block	<a href="#">Power and Grounding Component Views</a>	<a href="#">Power and Grounding Connector End Views</a>
Remote Control Door Lock Receiver (RCDLR)	Behind the left I/P sound insulator	<a href="#">Keyless Entry Component Views</a> in Keyless Entry	<a href="#">Keyless Entry Connector End Views</a> in Keyless Entry
Repeater Lamp - Left (Export)	On the left fender, behind the wheel opening	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Repeater Lamp - Right (Export)	On the side of the right fender	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Seat Adjuster Switch - Driver	On the left side of the LF lower seat cushion	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats

Seat Adjuster Switch - Front Passenger	On the right side of the RF lower seat cushion	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Belt Switch	In the left seat belt buckle	--	<a href="#">Seat Belt Connector End Views</a> in Seat Belts
Seat Front Vertical Motor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Front Vertical Motor - Front Passenger	Under the right seat	--	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Front Vertical Position Sensor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Horizontal Motor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Horizontal Motor - Front Passenger	Under the right seat	--	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Horizontal Position Sensor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Lumbar Motor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Lumbar Motor - Front Passenger	Under the right seat	--	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Rear Vertical Motor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Rear Vertical Motor - Front Passenger	Under the right seat	--	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Seat Rear Vertical Position Sensor - Driver	Under the left seat	<a href="#">Power Seat Systems Component Views</a> in Seats	<a href="#">Power Seat Systems Connector End Views</a> in Seats
Secondary Air Injection (AIR) Fuse Block (2.2L)	Mounted to the RF fender, next to the battery	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	--
Secondary Air Injection (AIR) Pump (2.2L)	In the lower right front corner of the engine compartment	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L

Shift Control Assembly (w/ Floor Shift)	In the center floor console, the gear shifter	--	--
Speaker - LF	In the top left corner of the I/P	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - LF Door	In the LF door	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - LR (2-door Utility)	On the left door pillar	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - LR (Extended Cab Pickup w/o 3rd Door)	On the left rear pillar	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - RF	In the top right corner of the I/P	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - RF Door	In the RF door	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - LR Door (4-door Utility)	In the LR door	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - RR Door (4-door Utility)	In the LR door	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Speaker - RR (Extended Cab Pickup w/o 3rd Door)	On the right rear pillar	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Starter (2.2L)	On the lower left side of the engine	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	--
Starter (4.3L)	On the lower right side of the engine	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	--
Starter Solenoid	Mounted on the starter	<a href="#">Engine Electrical Component Views</a> in Engine Electrical	--
Stop Lamp Switch	On the brake pedal, under the left side of the I/P	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Sunroof Harness Fuse Holder ( w/ ZXR/Extreme Early Production)	Under the left side of the I/P, near the body relay block	--	--

Sunroof Module (w/o ZXR/Extreme)	In the headliner, at the front of the sunroof assembly	<a href="#">Power Roof Systems Component Views</a> in Roof	<a href="#">Power Roof Systems Connector End Views</a> in Roof
Sunroof Motor	In the headliner, at the front of the sunroof assembly	<a href="#">Power Roof Systems Component Views</a> in Roof	<a href="#">Power Roof Systems Connector End Views</a> in Roof
Sunroof Opening Position Switch-Limit Switch (w/o ZXR/Extreme)	In the headliner, at the front of the sunroof assembly	--	<a href="#">Power Roof Systems Connector End Views</a> in Roof
Sunroof Switch	In the headliner, at the front of the sunroof assembly	<a href="#">Power Roof Systems Component Views</a> in Roof	--
Steering Wheel Controls	On the steering wheel	<a href="#">Entertainment Component Views</a> in Entertainment	<a href="#">Entertainment Connector End Views</a> in Entertainment
Tail/Stop Lamp - Left (Export)	In the LR tail lamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Tail/Stop Lamp - Right (Export)	In the RR tail lamp assembly	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Throttle Position (TP) Sensor (2.2L)	On the top left of the engine, on the throttle body	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Throttle Position (TP) Sensor (4.3L)	On the top left of the engine, on the throttle body	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Torque Converter Clutch (TCC) Solenoid Valve	In the automatic transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Torque Converter Clutch Pulse Width Modulation Solenoid (TCC PWM SOL) Valve	In the automatic transmission	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-E/4L65-E	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-E/4L65-E
Tow/Haul Switch (Utility w/ Floor Shift)	In the floor console, next to the shifter	<a href="#">Automatic Transmission Electronic Component Views</a> in Automatic Transmission - 4L60-	<a href="#">Automatic Transmission Internal Connector End Views</a> in Automatic Transmission - 4L60-

		E/4L65-E	E/4L65-E
Trailer Wiring Provision (2-Door Utility)	Coiled at the RR of the rear crossmember	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
Trailer Wiring Provision (4-Door Utility)	Coiled in the LR crossmember	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
Transfer Case Encoder Motor (NP1)	Behind the automatic transmission	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 233 (NP1)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 233 (NP1)
Transfer Case Encoder Motor (NP8)	Right side of the ATC, below the rear transfer case speed sensor connector	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Transfer Case Shift Control Switch (NP1)	On the right side of the IPC	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 233 (NP1)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 233 (NP1)
Transfer Case Shift Control Switch (NP8)	On the right side of the IPC	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Transfer Case Shift Control Module (NP8)	Behind the RF kick panel	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 236 (NP8)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 236 (NP8)
Transfer Case Shift Control Module (NP1)	Behind the RF kick panel	<a href="#">Transfer Case Control Component Views</a> in Transfer Case - NVG 233 (NP1)	<a href="#">Transfer Case Control Connector End Views</a> in Transfer Case - NVG 233 (NP1)
Turn Signal Lamp/Hazard Flasher Module	On the right side of the I/P, next to C203	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Turn Signal Switch	Part of the multifunction switch, on the left side of the steering column	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
Vanity Mirror Lamp - Left	In the left sunshade	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Vanity Mirror Lamp - Right	In the right sunshade	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	<a href="#">Lighting Systems Connector End Views</a> in Lighting Systems
Vehicle Speed Sensor (VSS) (2.2L w/ A/T)	At the RR of the automatic transmission	<a href="#">Engine Controls Component Views</a> in	<a href="#">Engine Controls Connector End Views</a> in Engine Controls -



		Engine Controls - 2.2L	2.2L
Vehicle Speed Sensor (VSS) (2.2L Engine w/ M/T)	At the LR of the manual transmission	<a href="#">Engine Controls Component Views</a> in Engine Controls - 2.2L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 2.2L
Vehicle Speed Sensor (VSS) (4.3L w/ A/T)	At the RR of the automatic transmission	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Vehicle Speed Sensor (VSS) (4.3L w/ M/T)	At the LR of the manual transmission	<a href="#">Engine Controls Component Views</a> in Engine Controls - 4.3L	<a href="#">Engine Controls Connector End Views</a> in Engine Controls - 4.3L
Wheel Speed Sensor (WSS) - LF	Part of the left wheel knuckle and hub	<a href="#">ABS Component Views</a> in Antilock Brake System	<a href="#">ABS Connector End Views</a> in Antilock Brake System
Wheel Speed Sensor (WSS) - RF	Part of the right wheel knuckle and hub	<a href="#">ABS Component Views</a> in Antilock Brake System	<a href="#">ABS Connector End Views</a> in Antilock Brake System
Window Lockout Switch	On the LF door trim, at the front at the armrest	<a href="#">Power Door Systems Component Views</a> in Doors	<a href="#">Power Door Systems Connector End Views</a> in Doors
Windshield Washer Fluid Pump	In the LF corner of the engine compartment, in the washer fluid reservoir	<a href="#">Wiper/Washer System Component Views</a> in Wipers/Washer Systems	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Window Washer Fluid Pump - Rear (Utility)	In the LF side of the engine compartment, the upper pump in the washer fluid reservoir	<a href="#">Wiper/Washer System Component Views</a> in Wipers/Washer Systems	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Windshield Wiper Motor	At the center rear of the engine compartment, on the cowl	<a href="#">Wiper/Washer System Component Views</a> in Wipers/Washer Systems	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Window Wiper Motor - Rear (Utility)	In the liftgate/endgate, near the latch	<a href="#">Wiper/Washer System Component Views</a> in Wipers/Washer Systems	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
Window Wiper Motor Controller - Rear (Utility)	Part of the rear window wiper motor	<a href="#">Wiper/Washer System Component Views</a> in Wipers/Washer Systems	<a href="#">Wiper/Washer System Connector End Views</a> in Wipers/Washer Systems
C100 (6 cavities) (4.3L)	Engine harness to the heated oxygen sensor extension harness, at the rear of the engine compartment, near the	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>

	A/C accumulator		
C101 (16 cavities) (2.2L)	Engine harness to the body harness, at the right side of the engine compartment, near the PCM	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C101 (10 cavities) (4.3L)	Engine harness to the body harness, at the right side of the engine compartment, near the PCM	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C102 (2 cavities) (4.3L w/4WD)	Engine harness to the body harness, at the right side of the engine compartment, near the PCM	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C104 (6 cavities)	Engine Harness to chassis harness, left of the engine compartment, near the Fuel Tank Pressure (FTP) sensor	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C106 (6 cavities)	Forward lamp harness to the body harness, inside the LF fender, near the underhood fuse block	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C106 (8 cavities) (Export)	Forward lamp harness to the body harness, inside the LF fender, near the underhood fuse block	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C108 (7 cavities) (NP1)	Transfer case extension harness to the body harness, at the LR side of the engine compartment, near P100	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C108 (16 cavities) (w/o Auto 4WD)	Transfer case extension harness to the body harness, at the LR side of the engine compartment, near P100	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C116 C1 (2 cavities) (4WD)	Active transfer case harness to the VSS jumper harness, near the transfer case encoder motor C1	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C116 C2 (2 cavities) (w/ M/T 4WD)	Engine harness to the active transfer case harness, near the backup lamp switch	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C116 C2 (2 cavities) (w/ A/T 4WD)	Engine harness to the active transfer case harness	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C117 (2 cavities)	Engine harness to A.I.R. harness, near the secondary A.I.R. fuse block, next to the battery on the RF fender	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>

C200 (2 cavities)	I/P harness to the body harness, behind the lower right side of the I/P, next to C203	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C201 (4 cavities)	Steering column harness to the redundant steering wheel controls harness, on the steering wheel, behind the SIR steering wheel inflator module	--	<a href="#">Inline Harness Connector End Views</a>
C203 (116 cavities)	Body harness to the I/P harness, behind the lower right side of the I/P	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C204 (7 cavities) (Utility)	Floor shifter harness to the body harness, at the lower front center the I/P, in front of the shift control assembly	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C209 (16 cavities)	Body harness to the dome lamp harness, at the LF corner of the I/P, near the LF window	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C210 (4 cavities)	Body harness to the redundant steering wheel controls harness, at the left front of the I/P, next to C211	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C211 (48 cavities)	Body harness to steering column harness, a 4 part connector near the stop lamp switch, at the base of the steering column	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C217 (4 cavities)	Body harness to the I/P harness, near the LF window pillar below the I/P fuse block	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C223 (2 cavities)	I/P harness to auxiliary power tray harness, behind the lower right side of the I/P, to the left of C203	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C224 (4 cavities)	Body harness to the I/P tray harness, in the center of the I/P, at the rear of the ashtray	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C229 (4 cavities)	Body harness to the dome lamp harness, at the base of the LF window pillar, near C209	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C300 (2 cavities) (Utility w/Sunroof)	Dome harness to the sunroof harness, at the front of the sunroof module	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C301 (4 cavities) (Utility)	Dome lamp harness to the overhead console harness, near	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>

	the DIC in the headliner		
C304 (6 cavities) (4 Door)	Body harness to the left rear door harness, in the LR door jamb	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C305 (2 cavities) (4 Door)	Body harness to the left rear door harness, near C304	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C306 (6 cavities) (4 Door)	Body harness to the right rear door harness, in the RR door jamb	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C307 (2 cavities) (4 Door)	Body harness to the right rear door harness, near C306	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C308 (4 cavities)	In the driver heated seat harness, under the seat cushion	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C309 (4 cavities)	In the front passenger heated seat harness, under the seat cushion	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C310 (1 cavity) (w/ ZXR/Extreme)	Sunroof jumper wire harness to the sunroof harness, near the body relay block and the I/P fuse block	--	<a href="#">Inline Harness Connector End Views</a>
C315 (6 cavities) (4- Door Utility w/Power Seats)	Body harness to RF seat harness, under the RF seat	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C317 (6 cavities)	Body harness to the driver seat harness, under the driver seat	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C401 (5 cavities)	Chassis harness to the tail lamp harness, at the rear of the left side frame rail	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C402 (4 cavities) (Utility)	Body harness to the right tail lamp harness, at the RR corner of the vehicle	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C403 (4 cavities) (Utility)	Body harness to the left tail lamp harness, at the LR corner of the vehicle	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C411 (2 cavities) (Utility)	Body harness to the endgate harness, at the top rear of the vehicle, near the top of the endgate, next to C412 and C413	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C412 (4 cavities) (Utility)	Body harness to the endgate harness, at the top rear of the vehicle, near the top of the endgate, next to C411 and C413	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
	Body harness to the endgate		

C413 (6 cavities) (Utility)	harness, at the top rear of the vehicle, near the top of the endgate, next to C411 and C412	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C430 (4 cavities) (Utility)	Chassis harness to the license lamp harness, at the LR of the vehicle, on the back of the rear crossmember	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C430 (2 cavities) (Sportside Pickup)	Chassis harness to the license lamp harness, at the LR of the vehicle, on the back of the rear crossmember	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C432 (1 Cavity) (Utility)	Body harness to the left defogger grid coiled cord harness, at the upper LR corner of the vehicle, near the endgate liftglass	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C433 (1 Cavity) (Utility)	Body harness to the right defogger grid coiled cord harness, at the upper RR corner of the vehicle, near the endgate liftglass	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C500 (4 cavities) (w/o AU3/A31)	Body harness to the LF door harness, at the front of the LF door	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C500 (22 cavities) (w/AU3/A31)	Body harness to the LF door harness, in the front of the LF door	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C501 (16 cavities) (4-Door Utility)	Body harness to the LF door harness, in the front of the LF door	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C601 (4 cavities) (w/o AU3/A31)	Body harness to the RF door harness, in the front of the RF door	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
C601 (22 cavities) (w/AU3/A31)	Body harness to the RF door harness, in the front of the RF door	<a href="#">Harness Routing Views</a>	<a href="#">Inline Harness Connector End Views</a>
G100 (w/California Emissions)	(CKT 1550) In the AIR harness, on the lower right radiator support	<a href="#">Harness Routing Views</a>	--
G102 (2.2L)	(CKT 350) In the engine harness, on the RF side of the engine block, under the generator	<a href="#">Harness Routing Views</a>	--
G102 (4.3L)	(CKT 350) In the engine harness, on the RR side of the	<a href="#">Harness Routing Views</a>	--



	cylinder head		
G103 (2.2L)	(CKT 351) In the engine harness, on the RF side of the engine block, under the generator	<a href="#">Harness Routing Views</a>	--
G103 (4.3L)	(CKT 351) In the engine harness, on the RR side of the cylinder head	<a href="#">Harness Routing Views</a>	--
G104 (4.3L)	(CKT 450) In the engine harness, on the LR side of the cylinder head	<a href="#">Harness Routing Views</a>	--
G105 (2.2L)	(CKT 450, CKT 451) In the engine harness, on the RR side of the engine block, near the ignition control module	<a href="#">Harness Routing Views</a>	--
G105 (4.3L)	(CKT 450, CKT 451) In the engine harness, on the LR side of the cylinder head	<a href="#">Harness Routing Views</a>	--
G106	(CKT 1550) In the negative battery harness, on the right side frame rail, forward of the RF wheel	<a href="#">Harness Routing Views</a>	--
G107	(CKT 750) In the negative battery harness, to the RF of the engine block	<a href="#">Harness Routing Views</a>	--
G108	(CKT 250) In the negative battery harness, to the right of the radiator support, next to the battery fuse	<a href="#">Harness Routing Views</a>	--
G110	(CKT 150) In the body harness, near the windshield washer pump	<a href="#">Harness Routing Views</a>	--
G111	(CKT 150) In the forward lamp harness, to the left of the radiator support, near SP100	<a href="#">Harness Routing Views</a>	--
G112	(CKT 250) In the forward lamp harness, near the right side radiator support, near SP101	<a href="#">Harness Routing Views</a>	--
G117	(CKT 850) In the body harness, in the LR corner of the engine compartment, near the cruise control module (CCM)	<a href="#">Harness Routing Views</a>	--
G200	(CKT 1850) In the body harness, in the LF corner of	<a href="#">Harness Routing</a>	--

	the I/P, above P100	<a href="#">Views</a>	
G201	(CKT 1850) In the body harness, in the LF corner of the I/P, above P100	<a href="#">Harness Routing Views</a>	--
G202	(CKT 1850) In the body harness, in the LF corner of the I/P, above P100	<a href="#">Harness Routing Views</a>	--
G203	(CKT 1050) In the body harness, on the right side of the I/P, between C203 and the splice packs	<a href="#">Harness Routing Views</a>	--
G204	(CKT 1050) In the body harness, on the right side of the I/P, between C203 and the splice packs	<a href="#">Harness Routing Views</a>	--
G205	(CKT 1050) In the body harness, on the right side of the I/P, between C203 and the splice packs	<a href="#">Harness Routing Views</a>	--
G206	(CKT 1050) In the body harness, on the right side of the I/P, between C203 and the splice packs	<a href="#">Harness Routing Views</a>	--
G207	(CKT 1850) In the steering column harness, next to the multifunction switch	<a href="#">Harness Routing Views</a>	--
G300 (ZXR/Extreme w/ CF5)	In the sunroof switch harness, at the center front of the headliner, attached to the roof rail	<a href="#">Power Roof Systems Component Views in Roof</a>	--
G402 (Utility)	(CKT 22, CKT 1650) In the chassis harness, at the rear of the left side frame rail	<a href="#">Harness Routing Views</a>	--
G402 (Pickup)	(CKT 1750) In the chassis harness, near the top center of the second crossmember from the rear, with the fuel filler neck ground strap	<a href="#">Harness Routing Views</a>	--
G420 (Utility)	(CKT 1450) In the body harness, in the RR corner, near C402	<a href="#">Harness Routing Views</a>	--
G420 (Pickup)	(CKT 2250) In the chassis harness, at the rear of the right side frame rail	<a href="#">Harness Routing Views</a>	--
G450 (Utility)	(CKT 1350) In the body harness, in the LR corner, near	<a href="#">Harness Routing</a>	--

	C403	<u>Views</u>	
G475 (Pickup)	(Circuit 1750) In the tail lamp harness, at the rear of the left frame rail near SP402	<u>Harness Routing Views</u>	--
P100	I/P bulkhead pass-through, at the LR corner of the engine compartment, on the cowl	<u>Harness Routing Views</u>	--
P402 (Utility)	In the left tail lamp jumper, at the LR of the vehicle, near the left park/turn signal lamp	<u>Harness Routing Views</u>	--
P403 (Utility)	In the right tail lamp jumper, at the RR of the vehicle, near the right park/turn signal lamp	<u>Harness Routing Views</u>	--
P404 (4-Door Utility w/ Engate)	Roof to endgate pass-through, at the top of the endgate, below the roof panel	<u>Harness Routing Views</u>	--
P500	LF door pass-through, between the body and the LF door	<u>Harness Routing Views</u>	--
P501	In the LF door, near the driver outside rearview mirror	<u>Harness Routing Views</u>	--
P600	RF door pass-through, between the body and the RF door	<u>Harness Routing Views</u>	--
P601	In the RF door, near the passenger outside rearview mirror	<u>Harness Routing Views</u>	--
P900	Roof to endgate pass-through, at the top of the endgate	<u>Harness Routing Views</u>	--
S100 (4.3L)	(CKT 539) In the oxygen sensor jumper, between C100 and the HO2S Bank 2 Sensor 1 connector breakout, approximately 36 cm (14 in) from C100	<u>Harness Routing Views</u>	--
S103 (4.3L)	(CKT 350) In the engine harness, between the underhood fuse block and C104 breakouts, approximately 19.5 cm (7.6 in) from TP sensor	<u>Harness Routing Views</u>	--
S104 (w/California Emissions)	(CKT 1550) In the AIR jumper harness, between G100 and the AIR pump, approximately 20 cm (7.8 in) from C2 of the AIR pump	<u>Harness Routing Views</u>	--

S105 (w/California Emissions)	(CKT 78) In the AIR jumper harness, between G100 and the breakout to the engine harness, approximately 5 cm (2 in) from the engine harness breakout	<a href="#">Harness Routing Views</a>	--
S106 (2.2L)	(CKT 351) In the engine harness, between the PCM and fuel injector connector breakouts, approximately 25 cm (10 in) from the PCM breakouts	<a href="#">Harness Routing Views</a>	--
S106 (4.3L)	(CKT 351) In the engine harness, between the breakouts to the rear HO2S connector and the body harness connector, approximately 7 cm (2.8 in) from the breakout to the HO2S connector	<a href="#">Harness Routing Views</a>	--
S107	(CKT 189) In the forward lamp harness, between the left headlamp leveling actuator and C106 breakouts, approximately 26 cm (10.2 in) from the left fog lamp breakout	<a href="#">Harness Routing Views</a>	--
S108 (E09)	(CKT 350) In the forward lamp harness, between the right horn connector and SP101 breakouts, approximately 16 cm (6.4 in) from the horn - right connector breakout	<a href="#">Harness Routing Views</a>	--
S109 (2.2L)	(CKT 1589) In the engine harness, between the PCM and C104 breakouts, approximately 42 cm (16.5 in) from C117	<a href="#">Harness Routing Views</a>	--
S113	(CKT 1020) In the body harness, between the blower motor and the blower motor relay breakouts, approximately 13 cm (5.2 in) from the blower motor breakout	<a href="#">Harness Routing Views</a>	--
S116 (4.3L)	(CKT 1020) In the engine harness, between the MAP sensor and the EOP sensor breakouts, approximately	<a href="#">Harness Routing Views</a>	--

	10 cm (4 in) from MAP sensor breakout		
S118 (4.3L)	(CKT 850) In the body harness, between the blower motor and blower motor relay breakouts	<a href="#">Harness Routing Views</a>	--
S121	(CKT 1695) In the body harness, between the electronic brake control module (EBCM) and C102 breakouts, approximately 6.5 cm (2.5 in) from S113	<a href="#">Harness Routing Views</a>	--
S129 (2.2L)	(CKT 1020) In the engine harness, between the A/C refrigerant pressure sensor and C111 breakouts, approximately 20 cm (7.9 in) from the A/C refrigerant pressure sensor breakout	<a href="#">Harness Routing Views</a>	--
S138	(CKT 420) In the body harness, near the blower motor resistor, approximately 27.5 cm (10.8 in) from the blower motor resistor breakout	<a href="#">Harness Routing Views</a>	--
S140 (2.2L w/A/T)	(CKT 450) In the engine harness, near the A/T, approximately 13 cm (5.2 in) toward the engine from the VSS breakout	<a href="#">Harness Routing Views</a>	--
S140 (4.3L w/A/T)	(CKT 450) In the engine harness, near the A/T, approximately 13 cm (5.2 in) into the VSS breakout	<a href="#">Harness Routing Views</a>	--
S140 (w/ M/T)	(CKT 450) In the engine harness, on the engine breakout to the M/T VSS, approximately 7 cm (2.8 in) from the harness breakout location	<a href="#">Harness Routing Views</a>	--
S152 (2.2L)	(CKT 351, CKT 451) In the engine harness, between C111 and the generator breakouts, approximately 7 cm (2.8 in) from the generator breakout	<a href="#">Harness Routing Views</a>	--
S152 (4.3L)	(CKT 351, CKT 451) In the engine harness, between the ICM and MAP sensor	<a href="#">Harness Routing</a>	--

	breakouts, approximately 8 cm (3.2 in) from breakout to the ICM	<a href="#">Views</a>	
S203 (Pickup)	(CKT 441) In the body harness, near SP202, approximately 17 cm (6.6 in) from SP202	<a href="#">Harness Routing Views</a>	--
S204	(CKT 300) In the I/P harness, near the I/P fuse block, approximately 4 cm (1.6 in) into the breakout to C217	<a href="#">Harness Routing Views</a>	--
S205	(CKT 1220) In the I/P harness, between the radio and the BCM C3 breakouts, approximately 8 cm (3.2 in) from the breakout to the radio	<a href="#">Harness Routing Views</a>	--
S208	(CKT 40) In the I/P harness, between the radio and to the right console courtesy lamp breakouts, approximately 4 cm (1.6 in) from the lamp breakout	<a href="#">Harness Routing Views</a>	--
S217	(CKT 341) In the I/P harness, in the breakout to the heater controller connectors, approximately 6 cm (2.4 in) into the breakout	<a href="#">Harness Routing Views</a>	--
S268	(CKT 1040) In the auxiliary power tray harness, approximately 9.5 cm (3.7 in) from the I/P inline connectors	<a href="#">Harness Routing Views</a>	--
S269	(CKT 1050) In the auxiliary power tray harness, approximately 8.5 cm (3.4 in) from the I/P inline connector	<a href="#">Harness Routing Views</a>	--
S282	(CKT 1382) In the I/P harness, between the BCM connector C3 and the radio breakouts, approximately 6.5 cm (2.6 in) from the BCM breakout	<a href="#">Harness Routing Views</a>	--
S283	(CKT 2409) In the I/P harness, between the BCM connector C3 and the radio breakouts, approximately 13 cm (5.2 in) from the BCM breakout	<a href="#">Harness Routing Views</a>	--
S290	(CKT 1301) In the I/P harness, near the breakout to C205	<a href="#">Harness Routing Views</a>	--



S302 (Utility w/Sunroof)	(CKT 1850) In the dome lamp harness, between the inside air temperature sensor and the left vanity mirror lamp breakouts, approximately 5 cm (1.9 in) from the breakout to the temperature sensor	<a href="#">Harness Routing Views</a>	--
S302 (Utility w/o Sunroof)	(CKT 1850) In the dome lamp harness, between the breakouts to the inside air temperature sensor and the left vanity mirror lamp, approximately 5 cm (1.9 in) from the breakout to the sensor	<a href="#">Harness Routing Views</a>	--
S304 (4-Door Utility)	(CKT 1440) In the body harness, before the breakout to the RR and LR doors	<a href="#">Harness Routing Views</a>	--
S305	(CKT 727) In the body harness, approximately 22.5 cm (8.9 in) before the breakout to the RR door jamb switch	<a href="#">Harness Routing Views</a>	--
S306	(CKT 1307) In the body harness, approximately 6.5 cm (2.6 in) before the breakout to door jamb switch - LR	<a href="#">Harness Routing Views</a>	--
S307	(CKT 294) In the body harness, approximately 6.5 cm (2.6 in) before the breakout to the RR door jamb switch	<a href="#">Harness Routing Views</a>	--
S308	(CKT 295) In the body harness, approximately 16.5 cm (6.5 in) before the breakout to the LR door jamb switch	<a href="#">Harness Routing Views</a>	--
S309 (Utility)	(CKT 1324) In the body harness, approximately 98 cm (38.6 in) from rear door breakout	<a href="#">Harness Routing Views</a>	--
S311 (w/ Power Seats)	(CKT 1440) In the left power seat harness	--	--
S313 (w/ Power Seats)	(CKT 1350) In the left power seat harness, approximately 15 cm (5.9 in) from C317	--	--
S314 (w/ Heated Power Seats)	(CKT 2240) In the left power seat harness, approximately 20 cm (7.8 in) from C317	--	--

S315	(CKT 557,569) In the left power seat harness, approximately 5 cm (2 in) from breakout for seat motors, toward the driver seat lumbar motor	--	--
S320 (w/ Power Seats)	(CKT 1350) In the right power seat harness, approximately 15 cm (5.9 in) from C315	--	--
S321 (w/ Heated Power Seats)	(CKT 2240) In the right power seat harness, approximately 20 cm (7.8 in) from C315	--	--
S332	(CKT 1732) In the dome lamp harness, approximately 7 cm (2.8 in) from C300	<a href="#">Lighting Systems Component Views</a> in Lighting Systems	--
S335 (Utility w/ Floor Shift A/T)	(CKT 1850) In the floor shift extension harness, between the in-line connector and the PRNDL lamp breakout, approximately 7 cm (2.8 in) from the PRNDL lamp breakout	<a href="#">Harness Routing Views</a>	--
S336 (Utility w/ Floor Shift A/T)	(CKT 1220) In the floor shift extension harness, between the A/T shift lock actuator and the PRNDL lamp breakout, approximately 7 cm (2.8 in) from the PRNDL lamp breakout	<a href="#">Harness Routing Views</a>	--
S404 (Utility)	(CKT 1350) In the body harness, approximately 10 cm (3.9 in) before the center high mounted stop lamp breakout	<a href="#">Harness Routing Views</a>	--
S405 (Utility)	(CKT 1320) In the body harness, approximately 10 cm (3.9 in) before the center high mounted stop lamp breakout	<a href="#">Harness Routing Views</a>	--
S406 (E09)	(CKT 1320) In the body harness, approximately 10 cm (3.9 in) from the C403 breakout, toward the center high mounted stop lamp	<a href="#">Harness Routing Views</a>	--
S417 (Utility)	(CKT 18) In the left tail lamp jumper harness, near C403, approximately 18 cm (7.1 in) from P402	<a href="#">Harness Routing Views</a>	--
	(CKT 18) In the right tail lamp		

S418 (Utility)	jumper harness, near C402, approximately 18 cm (7.1 in) from P403	<a href="#">Harness Routing Views</a>	--
S419 (Utility)	(CKT 150) In the left tail lamp jumper harness, approximately 8 cm (3.2 in) toward C403 from P402	<a href="#">Harness Routing Views</a>	--
S420 (Utility)	(CKT 150) In the right tail lamp jumper harness, approximately 8 cm (3.2 in) toward C402 from P403	<a href="#">Harness Routing Views</a>	--
S422 (Pickup)	(CKT 470) In the chassis harness, approximately 20 cm (8 in) from the fuel pump and sender assembly breakout	<a href="#">Harness Routing Views</a>	--
S422 (Utility)	(CKT 470) In the chassis harness, approximately 8 cm (3.2 in) from fuel pump and sender assembly breakout, toward the breakout for C104	<a href="#">Harness Routing Views</a>	--
S423 (Utility)	(CKT 1650) In the chassis harness, approximately 8 cm (3.2 in) from the fuel pump and sender assembly breakout	<a href="#">Harness Routing Views</a>	--
S424 (Utility)	(CKT 2109) In the chassis harness, approximately 8 cm (3.2 in) from the breakout to G402	<a href="#">Harness Routing Views</a>	--
S425 (Export)	(CKT 2109) In the license lamp harness, between the breakouts for the left and center license lamps, approximately 16.5 cm (6.5 in) from the left license lamp breakout	<a href="#">Harness Routing Views</a>	--
S426 (Export)	(CKT 1650) In the license lamp harness, between the breakouts for the left and center license lamps, approximately 6.5 cm (2.6 in) from the left license lamp breakout	<a href="#">Harness Routing Views</a>	--
S427 (Crew Cab Pickup)	(CKT 1850) In the LR body harness	<a href="#">Harness Routing Views</a>	--
S427 (Utility)	(CKT 1350, CKT 1450) In the LR body harness, approximately 7 cm (2.8 in)	<a href="#">Harness Routing Views</a>	--

	below the breakout to the left tail lamp connector C403		
S501	(CKT 1850) In the left door harness, between breakout to the door speaker and door lock/side window switch	<a href="#">Harness Routing Views</a>	--
S502	(CKT 2409) In the left door harness, between breakout to the door speaker and door lock/side window switch	<a href="#">Harness Routing Views</a>	--
S601	(CKT 1050) In the right door harness	<a href="#">Harness Routing Views</a>	--
Splice Pack SP100	(CKT 150) In the forward lamp harness, near the LR side of the radiator support	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP101	(CKT 250) In the forward lamp harness, to the right inside of the radiator support	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP200	(CKT 41, CKT 241, CKT 341, CKT 817) Strapped to the body harness, under carpet in the RH dash area about 30cm (12 in) from the right kick panel	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP201	(CKT 1132, CKT 1049, CKT 1133, CKT 1122, CKT 1128, CKT 1036, CKT 1048, CKT 1127, CKT 1038, CKT 1037) Strapped to the body harness, in the lower left front corner of the I/P, near the body relay block	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP202	(CKT 1850) Strapped to the body harness at the left center of the I/P	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP203	(CKT 1050) In the I/P harness, in front of the ashtray, strapped to the body harness	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP204	(CKT 584, CKT 1414, CKT 1415, CKT 1050) Strapped to the body harness, in the front center of the I/P, to the left of SP200	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP400 (Pickup)	(CKT 1324, CKT 2509, CKT 2609) In the tail lamp harness, on the rear center of the rear crossmember	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>

Splice Pack SP401	(CKT 2250) In the tail lamp harness, on the end of the right frame rail	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>
Splice Pack SP402	(CKT 1750) In the tail lamp harness, on the end of the left frame rail	<a href="#">Harness Routing Views</a>	<a href="#">Splice Pack Connector End Views</a>

---

[<- Back](#)[Forward ->](#)

**Document ID# 858946**  
**2003 Chevrolet Blazer - 4WD**

[Print](#)