

TABLE OF CONTENTS

Volume 1

| | |
|---|---------|
| Preface | 1 |
| Cautions and Notices | 3 |
| General Information | 0-1 |
| General Information | 0-3 |
| Maintenance and Lubrication | 0-36 |
| Vibration Diagnosis and Correction | 0-55 |
| HVAC | 1-1 |
| Heating, Ventilation and Air Conditioning | 1-5 |
| HVAC System - Manual | 1-54 |
| HVAC System - Automatic | 1-172 |
| Steering | 2-1 |
| Power Steering System | 2-7 |
| Steering Linkage (Non-Rack & Pinion) | 2-82 |
| Steering Wheel and Column - Standard | 2-113 |
| Steering Wheel and Column - Tilt | 2-209 |
| Suspension | 3-1 |
| Suspension General Diagnosis | 3-5 |
| Wheel Alignment | 3-22 |
| Front Suspension | 3-29 |
| Rear Suspension | 3-80 |
| Tires and Wheels | 3-99 |
| Automatic Level Control | 3-117 |
| Driveline/Axle | 4-1 |
| Propeller Shaft | 4-5 |
| Wheel Drive Shafts | 4-26 |
| ✓ Front Drive Axle | 4-47 |
| Rear Drive Axle | 4-98 |
| ✓ Rear Drive Axle - Locking/Limited Slip | |
| Rear Axle | 4-145 |
| Transfer Case - NVG 136-NP4 | |
| (One Speed Automatic) | 4-155 |
| Transfer Case - NVG 233-NP1 | |
| (Two Speed Selectable) | 4-202 |
| → Transfer Case - NVG 236 (Two Speed | |
| Automatic) <i>(N.P. 3)</i> | 4-239 |
| Brakes | 5-1 |
| Hydraulic Brakes | 5-5 |
| Disc Brakes | 5-72 |
| Drum Brakes | 5-108 |
| Park Brake | 5-120 |
| Antilock Brake System | 5-133 |
| INDEX | INDEX-1 |

Volume 2

| | |
|----------------------------|---|
| Preface | 1 |
| Cautions and Notices | 3 |

| | |
|---------------------------------------|---------|
| Engine | 6-1 |
| Engine Mechanical - 2.2 L | 6-11 |
| Engine Mechanical - 4.3 L | 6-174 |
| Engine Cooling | 6-442 |
| Engine Electrical | 6-496 |
| Engine Controls - 2.2 L | 6-596 |
| Engine Controls - 4.3 L | 6-997 |
| Engine Exhaust | 6-1611 |
| Transmission/Transaxle | 7-1 |
| Manual Transmission - NV 1500 | 7-5 |
| Manual Transmission - NV 3500 | 7-18 |
| Automatic Transmission - 4L60-E | 7-33 |
| Clutch | 7-315 |
| INDEX | INDEX-1 |

Volume 3

| | |
|--|---------|
| Preface | 1 |
| Cautions and Notices | 3 |
| Body and Accessories | 8-1 |
| Data Link Communications | 8-15 |
| Lighting Systems | 8-45 |
| Wipers/Washer Systems | 8-232 |
| Entertainment | 8-271 |
| Wiring Systems | 8-357 |
| Cellular Communication | 8-621 |
| Body Control System | 8-629 |
| Instrument Panel, Gauges and Console | 8-759 |
| Keyless Entry | 8-887 |
| Horns | 8-901 |
| Theft Deterrent | 8-915 |
| Cruise Control | 8-961 |
| Retained Accessory Power | 8-991 |
| Garage Door Opener | 8-1001 |
| Exterior Trim | 8-1008 |
| Waterleaks | 8-1021 |
| Stationary Windows | 8-1025 |
| Bumpers | 8-1062 |
| Body Front End | 8-1076 |
| Doors | 8-1101 |
| Roof | 8-1207 |
| Seats | 8-1228 |
| Interior Trim | 8-1312 |
| Body Rear End | 8-1343 |
| Plastic Panel Information and Repair | 8-1401 |
| Paint/Coatings | 8-1428 |
| Frame and Underbody | 8-1436 |
| Restraints | 9-1 |
| Seat Belts | 9-3 |
| SIR | 9-18 |
| INDEX | INDEX-1 |

- Front Cover Installation
 Engine (2.2L) 6-152
- Front Cover Removal
 Engine (2.2L) 6-103
- Front Cover Replacement
 Engine (2.2L) 6-66
- Front Cover Seal Installation
 Engine Crankshaft (2.2L) 6-152
- Front Drive Axle
 Components 4-48
 Description 4-95
 Diagnosis
 Noise Diagnosis 4-52
 Noise Source Determination 4-51
- Differential (Carrier) Assembly
 Replacement 4-67
- Differential Carrier Bushing Replacement 4-66
- Drive Pinion Yoke Replacement 4-62
- Inner Axle Housing Shaft and Housing
 Replacement 4-54, 4-56
- Inner Shaft Seal and Bearing
 Replacement 4-59
- Pinion Oil Seal Replacement 4-65
- Special Tools 4-95
- Specifications
 Fastener Tightening 4-47
 GM SPO Group Numbers 4-47
 Lubrication 4-47
 Pinion Preload and Backlash 4-47
- Unit Repair
 Backlash Inspection and Adjustment 4-87
 Bearings Inspection 4-71
 Differential Assembly Installation 4-81
 Differential (Carrier) Final Assembly 4-89, 4-92
 Differential (Carrier) Overhaul 4-71, 4-76
 Differential Case Assembly Assemble 4-86
 Pinion Bearing Cup Installation 4-83
 Pinion Depth Adjustment 4-83
 Pinion Installation 4-85
 Ring and Pinion Gear Inspection 4-70
 Thrust Washers, Shims, and Adjuster
 Sleeves 4-71
- Vacuum Actuator Replacement 4-60
- Vent Hose Replacement 4-52
- Front Fender
 Front Molding Replacement 8-1010
- Front Fender Replacement 8-1088
- Front Foglamp - Park/Turn Signal Assembly
 Replacement 8-201
- Front Suspension
 Description
 General 3-78
- Diagnosis
 Ball Joint Wear Check 3-31
- Special Tools 3-78
- Specifications
 Fastener Tightening 3-29
 GM SPO Group Numbers 3-30
- Front Wheel Opening
 Flare Replacement 8-1011
- Fuel Filler Tube Replacement (4.3L) 6-1500,
 6-1501, 6-1503
- Fuel Filter Replacement, In-Line (2.2L) 6-930
- Fuel Filter Replacement, In-Line (4.3L) 6-1484
- Fuel Hose/Pipes
 Assembly Replacement (2.2L) 6-941
 Assembly Replacement (4.3L) 6-1509, 6-1512,
 6-1515
- Fuel Hose/Pipes Replacement
 Engine Compartment (4.3L) 6-1506
- Fuel Injector
 Balance Test (2.2L) 6-895
 Replacement (2.2L) 6-945
- Fuel Injector Coil Test
 ECT Between 10-35 Degrees C (2.2L) 6-898
 ECT Outside 10-35 Degrees C (2.2L) 6-900
- Fuel Injector Replacement (4.3L) 6-1527
- Fuel Level Sender Replacement (4.3L) 6-1504
- Fuel Level Sensor Replacement (2.2L) 6-940
- Fuel Meter Body Assembly
 Replacement (4.3L) 6-1523
- Fuel Pressure Connection Valve
 Replacement (2.2L) 6-942
- Fuel Pressure Connection Valve
 Replacement (4.3L) 6-1521
- Fuel Pressure Regulator
 Replacement (2.2L) 6-944
- Fuel Pressure Regulator
 Replacement (4.3L) 6-1521
- Fuel Pressure Relief Procedure (2.2L) 6-933
- Fuel Pressure Relief Procedure (4.3L) 6-1478
- Fuel Pump
 Relay Replacement (2.2L) 6-932
 Strainer Replacement (2.2L) 6-939
- Fuel Pump Relay Replacement (4.3L) 6-1528
- Fuel Rail Assembly Replacement (2.2L) 6-942
- Fuel Sender Assembly Replacement (2.2L) 6-937
- Fuel Sender Assembly Replacement (4.3L) 6-1505
- Fuel System Cleaning (2.2L) 6-941
- Fuel System Cleaning (4.3L) 6-1520
- Fuel Tank
 Draining Procedure (2.2L) 6-934
 Draining Procedure (4.3L) 6-1486
 Leak Check (2.2L) 6-902
 Pressure Sensor Replacement (2.2L) 6-936
 Pressure Sensor Replacement (4.3L) 6-1499
 Replacement (2.2L) 6-934
 Replacement (4.3L) 6-1486, 6-1491, 6-1495
- Fuse Block Replacement -
 Underhood (UBEC) 6-574

G

- Garage Door Opener
 Component Location 8-1003
- Description
 Circuit 8-1007
 Operation 8-1007
- Diagnosis
 Inoperative 8-1004
 System Check 8-1004
- Schematic
 Icons 8-1001
 References 8-1001
- Schematics 8-1002
- Specification
 Fastener Tightening 8-1001
 GM SPO Group Numbers 8-1001