

Courtesy or Dome Lamps Always On

Step	Action	Value(s)	Yes	No
Important: The BCM monitors the courtesy lamp relay control CKT 690 (GRY/BLK) for faults. If this circuit is open or shorted to power or ground, a DTC will set. ↑ 8-67				
1	Did you perform the Interior Lamps System Check?	—	Go to Step 2	Go to Interior Lamps System Check
2	Use the scan tool in order to inspect for DTCs. Are any DTCs present?	—	Go to Diagnostic Trouble Code (DTC) List/Type in Body Control System	Go to Step 3
3	Inspect for the following related BCM data parameters. Refer to <i>Scan Tool Data List</i> in Body Control System for typical values and definitions. <ul style="list-style-type: none"> • The door handle switch • The driver door jamb switch • The rear pass door/liftglass jamb switch • The rear gate/door • The liftglass switch • The courtesy lamp relay • The inadvertent power relay • The dome override switch Did you find and correct a problem?	—	Go to Interior Lamps System Check	Go to Step 4
4	Disconnect the courtesy lamp relay from the body relay block. Did the courtesy/dome lamps turn OFF?	—	Go to Step 6	Go to Step 5
5	Repair the short to ground in CKT 156. Is the repair complete?	—	Go to Interior Lamps System Check	—
6	Replace the courtesy lamp relay. Is the repair complete?	—	Go to Interior Lamps System Check	—