

<- Back


Forward ->

Document ID# 603161
2000 Chevrolet/Geo Blazer - 4WD

Print

Ignition Switch Replacement - On Vehicle

Removal Procedure

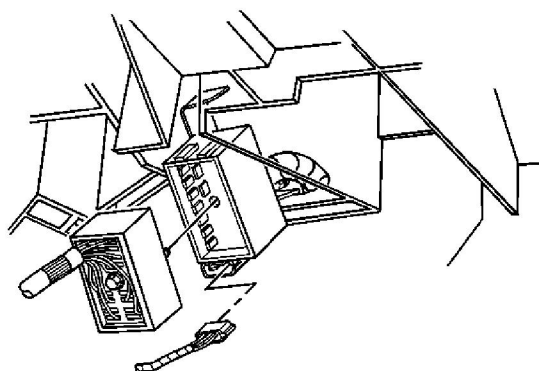

Caution

This vehicle is equipped with a Supplemental Inflatable Restraint (SIR) System. Failure to follow the correct procedure could cause the following conditions:


- i Air bag deployment**
- i Personal injury**
- i Unnecessary SIR system repairs**

In order to avoid the above conditions, observe the following guidelines:


- i Refer to SIR Component Views in order to determine if you are performing service on or near the SIR components or the SIR wiring.**
- i If you are performing service on or near the SIR components or the SIR wiring, disable the SIR system. Refer to [Disabling the SIR System in SIR](#).**

1. Disable the SIR system. Refer to [Disabling the SIR System](#) in SIR.
2. Remove the steering column trim covers from the steering column. Refer to [Steering Column Trim Cover Replacement - On Vehicle](#) .


3. Disconnect the steering column electrical connectors.

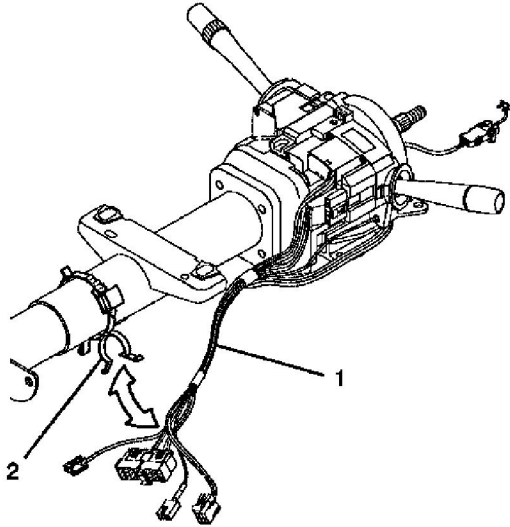


4. Remove the wire harness assembly (1) from the wire harness straps (2) and the steering column.

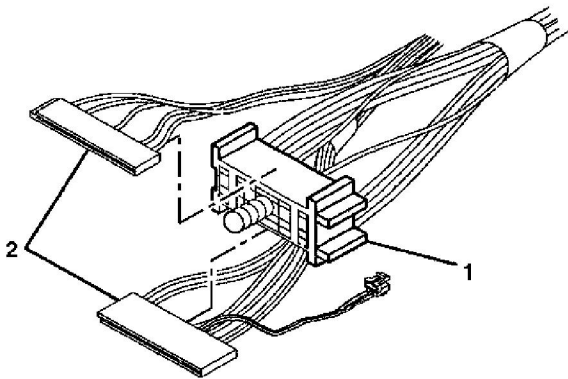

5. Slide the 2 connectors (2) of the turn signal and multifunction switch assembly out of the bulkhead connector (1).

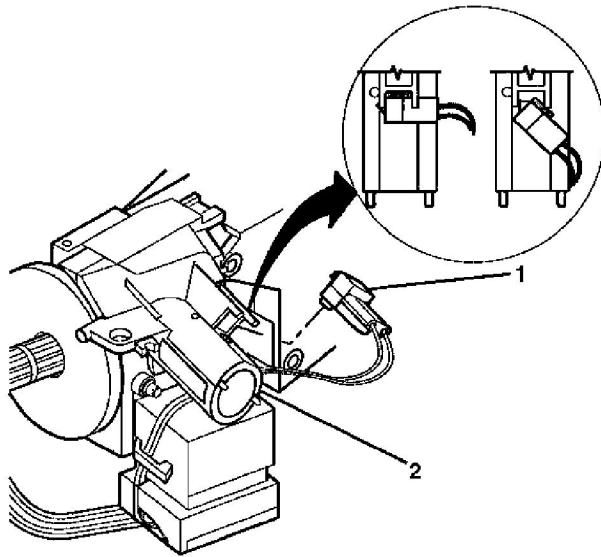

6. Remove the key alarm connector (1) from the lock module assembly (2) in the following way:
 - A. Rotate the key alarm connector (1) 90 degrees.
 - B. Pull the key alarm connector (1) out of the lock module assembly (2).
 - C. Remove the passkey connector from the lock module assembly (2).

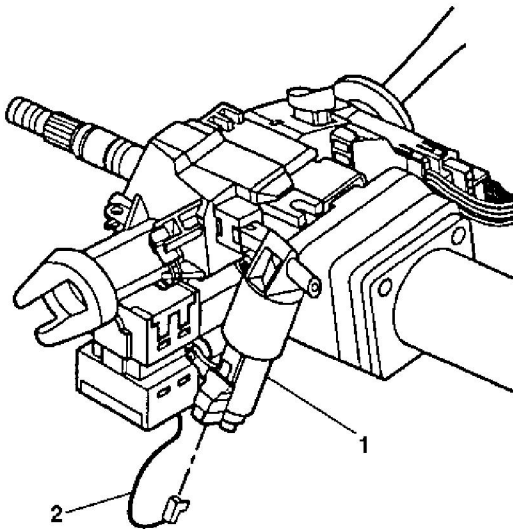

7. Remove the connector (2) from the electric park lock (1), for vehicle equipped with floor shifters.