


Service and Parts Operations


[2002 Chevrolet Blazer - 4WD - Bulletins - Technical](#)

Select a document to view:

-  [#04-08-50-017 Power Seat Inoperative Fore/Aft After Being Moved All the Way Rearward \(Install C-Spacer\) - \(Aug 31, 2004\)](#)
-  [#04-06-04-055 DTC P0446 \(Restricted/Blocked EVAP Vent Path\) Set, Service Engine Soon \(SES\) Lamp Illuminated \(Replace Vent Solenoid and Bracket\) - \(Jul 28, 2004\)](#)
-  [#04-07-30-028 4T65-E Automatic Transmission Fluid Leak From Reverse Servo Cover \(Replace Reverse Servo Cover and Seal\) - \(Jun 15, 2004\)](#)
-  [#04-06-04-015 Check Engine Light On, DTC P0410 Set \(Replace AIR Pump, Install New Hose Assembly\) - \(Mar 22, 2004\)](#)
-  [#03-06-01-024B Rattle Noise in Engine \(Install Timing Tensioner Kit\) - \(Mar 4, 2004\)](#)
-  [#03-08-49-008A Erratic or Inaccurate Compass Operation with Use of Power Sunroof \(Replace Compass Sensor Mounting Bracket and Calibrate Compass\) - \(Feb 26, 2004\)](#)
-  [#01-07-30-038B DTC P0757 Set, SES Lamp Illuminated, Poor Performance of Transmission, Transmission Slipping \(Clean Transmission Valve Body and Case Oil Passages of Debris\) - \(Jan 26, 2004\)](#)
-  [#03-08-49-014A Fuel Gauge Fluctuates Between E and 1/4 Tank, Goes from 1/4 to Empty Too Quickly, Excessive Empty Fuel Reserve \(Reprogram PCM\) - \(Oct 2, 2003\)](#)
-  [#03-06-04-041 Poor Engine Performance - Misfire, Rough Idle, Service Engine Soon/Check Engine Light Illuminated, DTC P0300 Set \(Inspect Distributor Ignition \(DI\) System Components and Replace As Necessary\) - \(Aug 26, 2003\)](#)
-  [#01-07-30-002C Malfunction Indicator Lamp \(MIL\) On, Transmission Stuck in Third Gear, Instrument Cluster Inoperative \(Replace Ignition Switch\) - \(Aug 21, 2003\)](#)
-  [#03-01-38-009 HVAC Mode Switch Inoperative or Stuck in Vent Mode, Oil in HVAC Control Head and/or Vacuum Lines \(Replace Transfer Case Vacuum Switch and Contaminated HVAC Components\) - \(Jun 25, 2003\)](#)
-  [#02-04-21-005A Slips in 4-Wheel Drive, Noise, Vibration, Leaks, Hot Odor \(Diagnose and Repair Front Differential and/or Transfer Case\) - \(Feb 11, 2003\)](#)
-  [#00-06-04-003B Rough Idle After Start, And/Or A Service Engine Soon \(SES\) Light \(Unstick And Clean Central Sequential Fuel Injection \(CSFI\) Poppet Valves or Convert to MFI\) - \(Jan 30, 2003\)](#)
-  [#02-06-04-059 Engine Runs Rough, Service Engine Soon Light On, DTC P0300 or P0335 Set \(Shim Crankshaft Sensor\) - \(Dec 16, 2002\)](#)
-  [#02-05-25-006A Antilock Brake \(ABS\) Activation At Low Speeds \(Clean Wheel Speed Sensor Mounting Surface\) - \(Nov 26, 2002\)](#)
-  [#02-06-03-006A No Start, No Crank, Battery, Batteries, Generator, Gages, SES, SIR, Brake, Security, Theft, ABS, Hot, DIC Messages, Lamp, Light, Battery and Generator Diagnostic Testing, and Cadillac Roadside Service - \(Nov 26, 2002\)](#)
-  [#02-08-57-004 General Water Leak Guide - \(Jun 5, 2002\)](#)
-  [#02-06-05-002 Exhaust Boom/Groan Noise in Passenger Compartment \(Install Exhaust Bracket and Dampers to Exhaust System\) - \(Apr 30, 2002\)](#)
-  [#02-06-04-015 Intermittent No Crank, No Start \(Clean Battery Side Terminal Stripped](#)

[Threads, Replace Battery Cable Bolt\) - \(Mar 8, 2002\)](#)

 [#01-06-05-006 Exhaust System Rumble/Rattle Noise \(Replace Exhaust Pipe Seals and Modify Exhaust Pipe Ring Flanges\) - \(Nov 2, 2001\)](#)

 [#01-08-63-001A Hood Hinge Rattle \(Install Spring Washer\) - \(Aug 14, 2001\)](#)

 [#99-01-39-004A Air Conditioning Odor \(Install Kit\) - \(May 22, 2001\)](#)

[\[HOME\]](#) [\[PUBLICATIONS\]](#)
[\[NUMBER SEARCH\]](#) [\[LATEST NEWS\]](#) [\[BULLETIN SEARCH\]](#) [\[HELP\]](#)