

Heated Seat Always On

Step	Action	Yes	No
<i>Schematic Reference: Heated Seats Schematics</i>			
1	Did you review Diagnostic System Check - Power Seat Systems ?	Go to Step 2	Go to Diagnostic System Check - Power Seat Systems
2	Verify the fault is present. Does the system operate normally?	Go to Testing for Intermittent Conditions and Poor Connections in Wiring Systems	Go to Step 3
3	Disconnect the affected heated seat switch. Does the seat stop heating?	Go to Step 7	Go to Step 5
5	Test for an short to battery positive voltage on the heated seat switch signal circuit. Did you find and correct the condition?	Go to Step 8	Go to Step 6
6	Replace the seat heater module. Did you complete the replacement?	Go to Step 8	--
7	Replace the appropriate heated seat switch. Did you complete the replacement?	Go to Step 8	--
8	Operate the system in order to verify the repair. Did you correct the condition?	System OK	Go to Step 3

