


< - Back

Forward ->


Document ID# 358529
2005 Chevrolet Blazer - 4WD

Print

Oil Level Indicator and Tube Removal

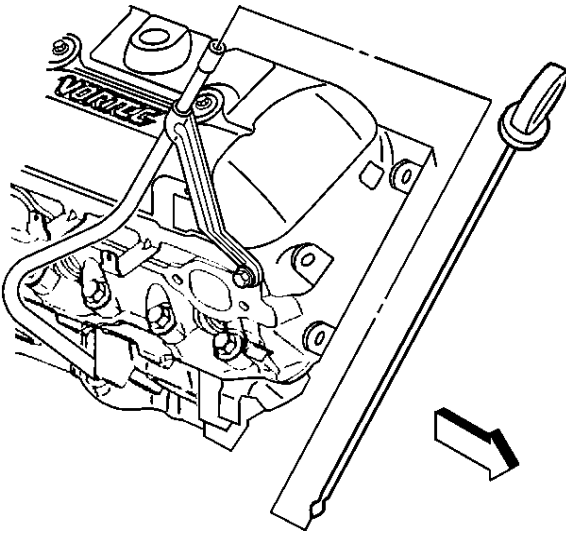

1. Remove the oil level indicator from the oil level indicator tube, if required.

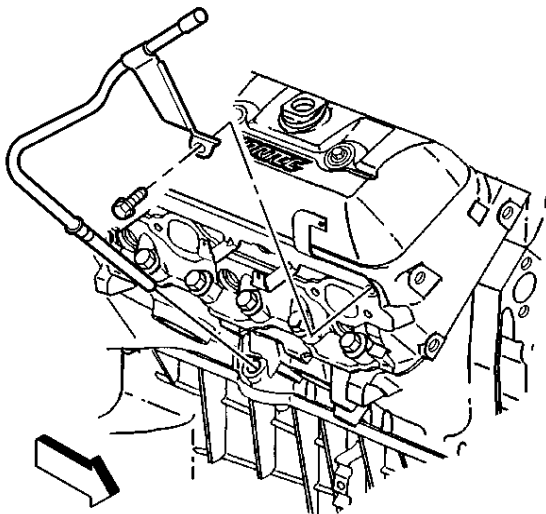

2. Remove the oil level indicator tube bolt.
3. Remove the oil level indicator tube from the engine block.

< - Back

Forward ->

Document ID# 358529
2005 Chevrolet Blazer - 4WD

Print