

Transfer Case

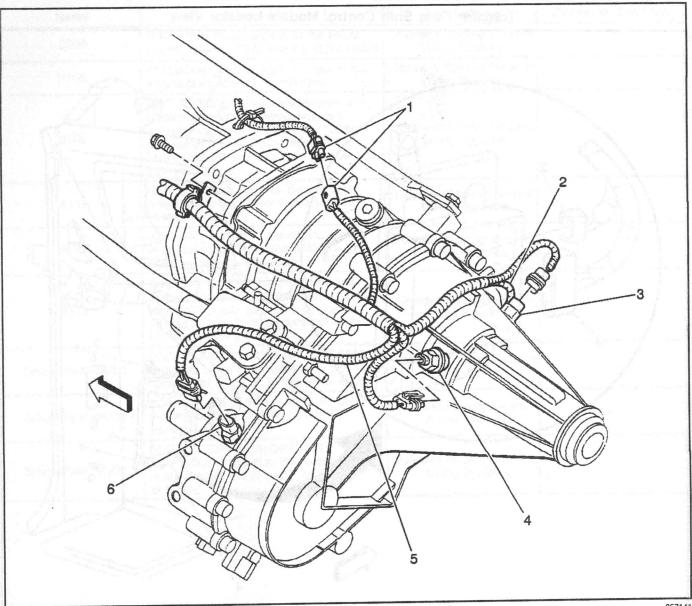

- (1) C116
- (2) Transfer Case Encoder Motor
- (3) Transfer Case Rear Propshaft Speed Sensor and Connector
- (4) Vehicle Speed Sensor (VSS) and Connector
- (5) S134
- (6) Transfer Case Front Propshaft Speed Sensor and Connector

Transfer Case, RH Rear (Bravada)

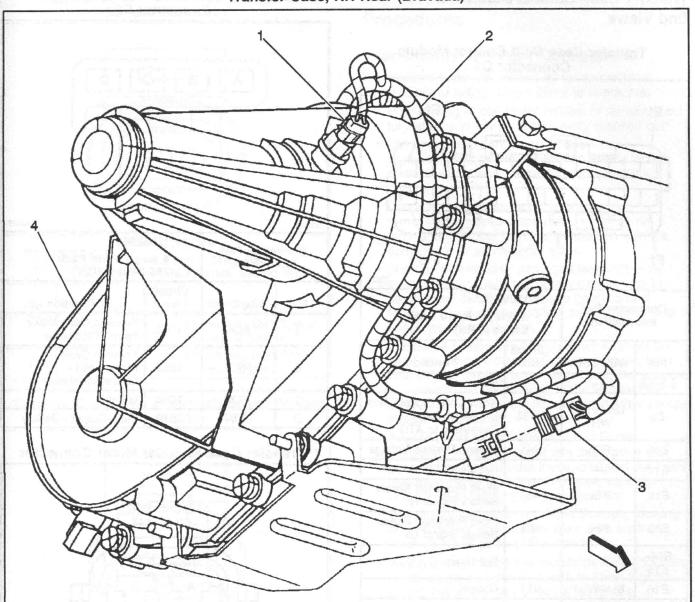


421497

- (1) Transfer Case Rear Propshaft Speed Sensor and Connector
- (2) Active Transfer Case Harness

- (3) Transfer Case Encoder Motor and Connector
- (4) Transfer Case (NP4)

Electric Shift Transfer Case Locator View

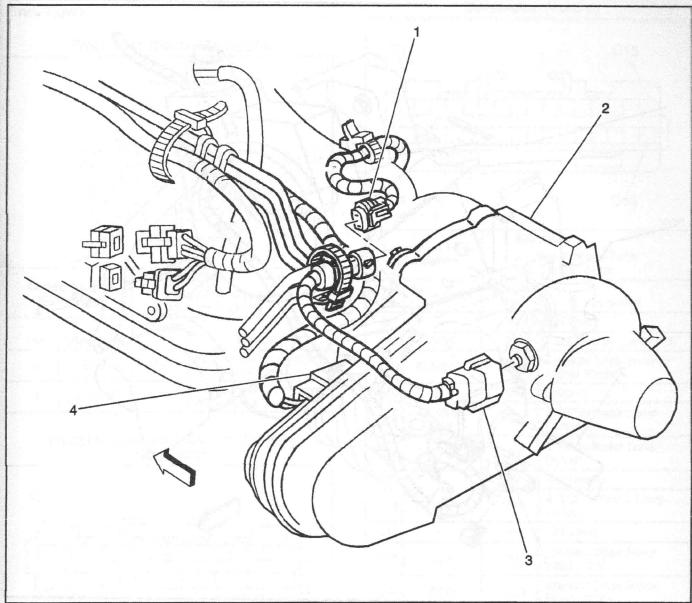


203300

- (1) Connector C116 (Engine Harness to VSS Extension Harness)
- (2) Selectable Transfer Case


- (3) Vehicle Speed Sensor
- (4) Selectable Transfer Case extension harness connector

Transfer Case

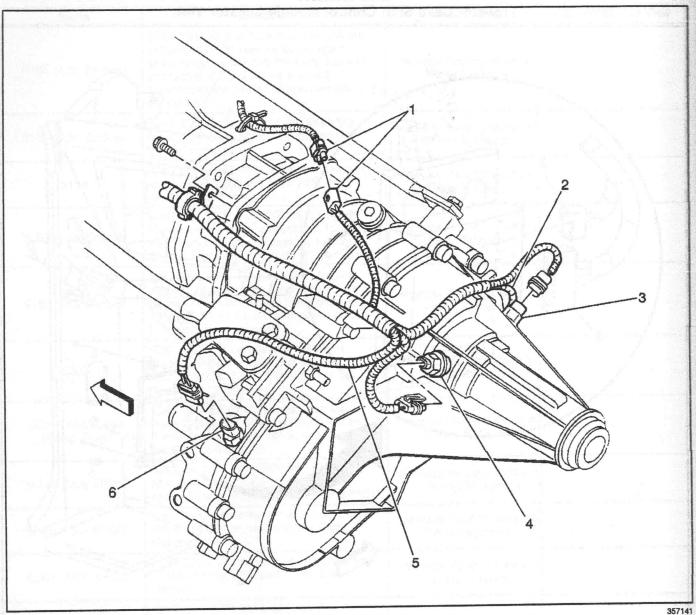

- (1) C116
- (2) Transfer Case Encoder Motor
- (3) Transfer Case Rear Propshaft Speed Sensor and Connector
- (4) Vehicle Speed Sensor (VSS) and Connector
- (5) S134
- (6) Transfer Case Front Propshaft Speed Sensor and Connector

Transfer Case, RH Rear (Bravada)

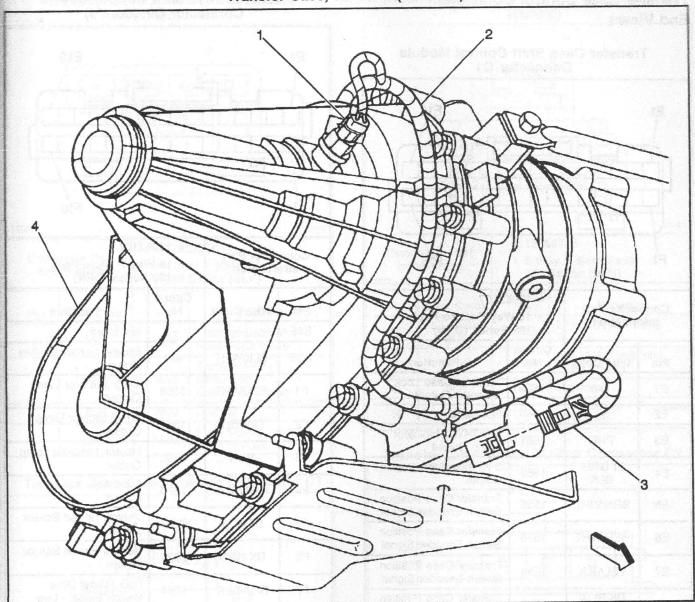

421497

- (1) Transfer Case Rear Propshaft Speed Sensor and Connector
- (2) Active Transfer Case Harness

- (3) Transfer Case Encoder Motor and Connector
- (4) Transfer Case (NP4)