

- 1 Rear Output Shaft Seal
- 2 Extension Housing Bushing
- 3 Extension Housing Bolt
- 4 Extension Housing
- 5 Retainer
- 6 Rear Output Bearing
- 7 Pump Retainer Housing Bolt
- 8 Pump Retainer Housing
- 9 Encoder Motor Bolt
- 10 Encoder Motor
- 11 Speedometer Tone Wheel
- 12 Oil Pump
- 13 Oil Pump Seal
- 14 Pick-Up Tube "O" Ring Seal
- 15 Drain/Fill Plugs
- 16 Case Half Bolt
- 17 Rear Case Half
- 18 Oil Pick-Up Tube
- 19 Mainshaft
- 20 Drive Sprocket
- 21 Front Output Shaft
- 22 Shift Rail Spacer
- 23 Shift Rail Washer
- 24 Front Output Rear Bearing
- 25 Magnet
- 26 Coil Pick-Up Tube Connector
- 27 Washer
- 28 Synchronizer Ring
- 29 Synchronizer Sleeve
- 30 Synchronizer Insert
- 31 Synchronizer Hub
- 32 Synchronizer Insert Spring
- 33 Alignment Dowel
- 34 Range Shift Hub
- 35 Pump Pick-Up Screen
- 36 Planetary Carrier
- 37 Thrust Washer
- 38 Input Gear
- 39 Snap Ring
- 40 Input Bearing
- 41 Shift Rail Spring Washer
- 42 Input Bearing Retainer Seal
- 43 Input Bearing Retainer Bolt
- 44 Input Bearing Retainer
- 45 Front Case Half
- 46 Vacuum Switch
- 47 "O" Ring Seal
- 48 Shift Rail
- 49 Range & Mode Shift Fork Pad
- 50 Range & Mode Shift Fork Center Pad
- 51 Range Shift Fork
- 52 Mode Shift Fork Spring
- 53 Range Shift Fork Pin
- 54 Mode Shift Fork
- 55 Shift Sector
- 56 Shift Rail Bushing
- 57 Range Fork Bracket
- 58 Drive Chain
- 59 Snap Ring Retainer
- 60 Snap Ring Retainer
- 61 Front Output Bearing
- 62 Annulus Gear
- 63 Snap Ring Retainer
- 64 "O" Ring Seal
- 65 Shift Fork Spring
- 66 Shift Fork Spring Cup
- 67 Mode Fork Guide Pin
- 68 Detent Plug
- 69 "O" Ring Seal
- 70 Detent Pin
- 71 Detent Spring
- 72 Front Output Shaft Seal
- 73 Front Output Shaft Seal Deflector
- 74 Front Output Yoke
- 75 Rubber Sealing Washer
- 76 Front Output Yoke Washer
- 77 Front Output Yoke Nut
- 78 Carrier Lock Ring
- 79 Oil Pump Screw
- 80 Snap Ring Retainer
- 81 Synchronizer Assembly
- 82 Drive Sprocket Bearings
- 83 Snap Ring Retainer
- 84 Marshall Pilot Bearing
- 85 Tone Wheel Retainer
- 86 Speed Sensor

