

<- Back

Forward ->

Document ID# 767538
2002 Chevrolet Blazer - 4WD

Print

Master Electrical Component List

| Name | Location | Locator View | Connector End View |
|--|---|--|--|
| 1-2 Shift Solenoid (1-2 SS) Valve | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| 2-3 Shift Solenoid (2-3 SS) Valve | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| 3-2 Shift Solenoid (3-2 SS) Valve | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| Accessory Power Outlet - Left | In the auxiliary power tray, to the right of the I/P | Power and Grounding Component Views | Power and Grounding Connector End Views |
| Accessory Power Outlet - Right | In the auxiliary power tray, to the right of the I/P | Power and Grounding Component Views | Power and Grounding Connector End Views |
| Accessory Power Outlet - Rear-Utility Only | In the right rear quarter harness | Power and Grounding Component Views | Power and Grounding Connector End Views |
| A/C Compressor Clutch | Part of the A/C compressor | HVAC Component Views in HVAC Systems - Manual or HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Manual or HVAC Connector End Views in HVAC Systems - Automatic |
| A/C Compressor Clutch Diode (2.2L) | 20 cm (7.87 in) toward the main engine harness from the A/C compressor connector | HVAC Component Views in HVAC Systems - Manual | -- |
| A/C Compressor Clutch Diode (4.3L) | In the engine harness breakout, 8 cm (3.15 in) from the breakout to the A/C compressor high pressure switch | HVAC Component Views in HVAC Systems - Manual or HVAC Component Views in HVAC Systems - Automatic | -- |

| | | | |
|--|--|--|--|
| A/C Compressor Clutch Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| A/C High Pressure Switch (4.3L) | Rear of the A/C compressor | HVAC Component Views in HVAC Systems - Manual or HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Manual or HVAC Connector End Views in HVAC Systems - Automatic |
| A/C Low Pressure Switch (4.3L) | At the A/C accumulator | HVAC Component Views in HVAC Systems - Manual or HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Manual or HVAC Connector End Views in HVAC Systems - Automatic |
| A/C Refrigerant Pressure Sensor (2.2L) | On the A/C evaporator tube | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Air Temperature Actuator (C42/C60) | Right top of the heater | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Air Temperature Actuator (C68) | Right top of the heater | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Air Temperature Sensor Assembly - Inside | Within headliner on front passenger side | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Air Temperature Sensor Assembly - Inside-w/ Auto A/C | In the roof area over the driver's side door | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Air Temperature Sensor - Lower | Left side of floor air outlet assembly, under the dash, near the BCM | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Air Temperature Sensor - Upper | Center of the I/P, above the radio, in air distributor duct, center outlet | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Ambient Air Temperature Sensor (HVAC) | Front center of vehicle, to the left of the hood latch support | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Ambient Light Sensor | Top LH side of the I/P | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Ashtray Lamp | In the I/P ashtray | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |

| | | | |
|--|--|---|---|
| Audio Amplifier | In the center console | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Automatic Transmission Control-Utility w/ Floor Shift | Located in center floor console | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Related Connector End Views in Automatic Transmission |
| Automatic Transmission Fluid Temperature (TFT) Sensor | Part of the automatic transmission fluid pressure (TFP) manual valve position switch | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| Automatic Transmission Shift Lever Position Indicator-Utility w/ Floor Shift | Part of the automatic transmission controller | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Automatic Transmission Fluid Pressure Manual Valve Position Switch | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| Automatic Transmission Shift Lock Solenoid-w/ Column Shift | In the steering column | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Related Connector End Views in Automatic Transmission |
| A/T Shift Lock Solenoid-w/ Floor Shift | Part of the automatic transmission controller, in the center floor console | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Related Connector End Views in Automatic Transmission |
| Backup Lamp Switch (w/ M50) | Left side of transmission | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Backup Lamp Switch (w/ M30) | Part of park/neutral position switch, left side of transmission | Engine Electrical Component Views in Engine Electrical | Lighting Systems Connector End Views in Lighting Systems |
| Backup Lamp - Left | LR of the vehicle, in the tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Backup Lamp - Right | RR of the vehicle, in the tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Battery | RF of the engine compartment | Engine Electrical Component Views in Engine Electrical | -- |

| | | | |
|--|--|--|--|
| Battery Fuse | On the lower right side of the radiator support, below the battery | Engine Electrical Component Views in Engine Electrical | -- |
| Blower Motor (C42) | RR of the engine compartment | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Blower Motor (C60) | RR of the engine compartment | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Blower Motor (C68) | RR of the engine compartment | HVAC Component Views in HVAC Systems - Automatic | -- |
| Blower Motor Control Processor | On the evaporator case | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Blower Motor Relay | Center rear of the engine compartment, on the plenum front panel | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Blower Motor Resistor Assembly-Non-A/C | LR of the engine compartment, on the blower box | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Blower Motor Resistor Assembly-Manual A/C | LR of the engine compartment, on the blower box | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Body Control Module (BCM) | Lower rear of the I/P, on the heater | Body Control System Component Views in Body Control System | -- |
| Brake Fluid Level Switch | On the master cylinder | ABS Component Views in Antilock Brake System | ABS Connector End Views in Antilock Brake System |
| Brake Pressure Modulator Valve (BPMV)-Part of EBCM | Part of the EBCM, on the left front fenderwell | ABS Component Views in Antilock Brake System | ABS Connector End Views in Antilock Brake System |
| Camshaft Position (CMP) Sensor (2.2L) | RH of the engine, forward of the coil packs | Engine Controls Component Views in Engine Controls - 2.2 L | Engine Controls Connector End Views in Engine Controls - 2.2 L |
| Camshaft Position (CMP) Sensor (4.3L) | Rear of the distributor | Engine Controls Component Views in Engine Controls - 4.3 L | Engine Controls Connector End Views in Engine Controls - 4.3 L |
| Cargo Lamp | In the top rear center of the liftgate/endgate opening | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Center High Mounted Stop Lamp-Pickup | Rear center top of the cab | Lighting Systems Component Views in | Lighting Systems Connector End Views |

| | | | |
|--|--|---|--|
| | | Lighting Systems | in Lighting Systems |
| Center High Mounted Stop Lamp-Utility | At the top rear center of the vehicle | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Center High Mounted Stop Lamp Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Center High Mounted Stop Lamp Resistor-Utility | Body harness, 10 cm (3.9 in) before the breakout to the cargo and high mount stop lamp | Lighting Systems Component Views in Lighting Systems | -- |
| Central Sequential Fuel Injection-Central SFI | Top center of the engine, forward of the distributor | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Cigar Lighter | In the I/P tray assembly | Power and Grounding Component Views | Power and Grounding Connector End Views |
| Clutch Pedal Position (CPP) Switch | On the clutch pedal support bracket | Engine Electrical Component Views in Engine Electrical | Engine Electrical Connector End Views in Engine Electrical |
| Compass Sensor-w/ Short Console | Under the headliner, to the right of the overhead console | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages and Console | -- |
| Compass Sensor-w/ Long Console | Internal to the driver information center | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages and Console | -- |
| Courtesy Lamp - Left Console | Lower left of the I/P | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Courtesy Lamp - Right Console | Lower right of the I/P | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Courtesy Lamp Relay | In the relay block - body | Power and Grounding Component Views | Electrical Center Identification Views |
| Crankshaft Position (CKP) Sensor (2.2L) | Right side of the engine, below the coil packs | Engine Controls Component Views in Engine Controls - 2.2 L | Engine Controls Connector End Views in Engine Controls - 2.2 L |
| Crankshaft Position (CKP) Sensor (4.3L) | Below the RF of the engine, near the harmonic balancer | Engine Controls Component Views in Engine Controls - 4.3 L | Engine Controls Connector End Views in Engine Controls - 4.3 L |

| | | | |
|---|---|--|--|
| Cruise Control Module (CCM) | LR of the engine compartment, on the cowl | Cruise Control Component Views in Cruise Control | Cruise Control Connector End Views in Cruise Control |
| Data Link Connector (DLC) | Lower left of the I/P | Data Link Communications Component Views in Data Link Communications | Data Link Communications Connector End Views in Data Link Communications |
| Daytime Running Lamps (DRL) Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Daytime Running Lamps (DRL) Relay (ZR2) | Taped to the body harness, near the breakout for the rear washer hose | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Dome Lamp-Utility | Overhead, between the front seats | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Door Handle Switch - Left | Part of the door latch assembly | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Door Handle Switch - Right | Part of the door latch assembly | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Door Jamb Switch - Driver | Left side of the I/P | Body Control System Component Views in Body Control System | Body Control System Connector End Views in Body Control System |
| Door Jamb Switch - Front Passenger | Right side of the I/P | Body Control System Component Views in Body Control System | Body Control System Connector End Views in Body Control System |
| Door Jamb Switch - LR | In the left B-pillar | Body Control System Component Views in Body Control System | Body Control System Connector End Views in Body Control System |
| Door Jamb Switch - RR | In the right B-pillar | Body Control System Component Views in Body Control System | Body Control System Connector End Views in Body Control System |
| Door Lock and Window Switch - Driver | In the left door trim panel, near the armrest | Power Door Systems Component Views in Doors | -- |
| Door Lock and Window Switch - Front Passenger | In the right door trim panel, near the armrest | Power Door Systems Component Views in Doors | -- |
| Door Lock Cylinder Switch - Driver | Part of the door latch assembly | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views |

| | | | |
|--|--|--|--|
| | | | in Doors |
| Door Lock Cylinder Switch - Front Passenger | Part of the door latch assembly | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views in Doors |
| Door Lock Relay | In the relay block - body | Power and Grounding Component Views | Electrical Center Identification Views |
| Door Unlock Relay | In the relay block - body | Electrical Center Identification Views | Electrical Center Identification Views |
| Door Unlock Relay - Driver | In the relay block - body | Electrical Center Identification Views | Electrical Center Identification Views |
| Driver Information Center (DIC) | Front overhead console, in the passenger compartment | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages and Console | -- |
| Electronic Brake Control Module (EBCM) | On the brake pressure modulator valve (BPMV), toward the rear of the LF fenderwell | ABS Component Views in Antilock Brake System | ABS Connector End Views in Antilock Brake System |
| Endgate Lock Cylinder Switch | Top center of the endgate | Body Rear End Component Views in Body Rear End | Power Door Systems Connector End Views in Doors |
| Engine Coolant Temperature (ECT) Sensor (2.2L) | Front of the engine, in the coolant piping | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Engine Coolant Temperature (ECT) Sensor (4.3L) | LH side of engine, at the spark plugs | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Engine Oil Pressure (EOP) Sensor-2.2L Engine | RH side of engine, forward of coil pack | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages, and Console | Instrument Panel, Gages, and Console Connector End Views in Instrument Panel, Gages, and Console |
| Engine Oil Pressure (EOP) Sensor-4.3L Engine | Below distributor | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages, and Console | Instrument Panel, Gages, and Console Connector End Views in Instrument Panel, Gages, and Console |
| Evaporative Emission (EVAP) Canister Purge Solenoid (2.2L) | Right side of engine, above the coil packs | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Evaporative Emission (EVAP) Canister Purge Solenoid (4.3L) | Top right center of the engine, near the fuel injector connector | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - |

| | | | |
|---|--|--|--|
| | | | 4.3L |
| Evaporative Emission (EVAP) Canister Vent Solenoid (2.2L) | Crossmember area of the fuel tank, rear center of the crossmember behind fuel tank | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Evaporative Emission (EVAP) Canister Vent Solenoid (4.3L) | Crossmember area of the fuel tank, rear center of the crossmember behind fuel tank | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Fog Lamp - LF | LF of the vehicle, lower inside of the headlamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Fog Lamp - LR-Export | In the left rear tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Fog Lamp - RF | RF of the vehicle, lower inside of the headlamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Fog Lamp - RR-Export | In the RR tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Fog Lamp Relay - Front | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Fog Lamp Relay - Rear-Export | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Fog Lamp Switch - Front | Left side of the I/P, part of the headlamp switch | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Front Axle Indicator Switch (NP1) | At the front axle, to the right of the differential | Transfer Case Control Component Views in Transfer Case - NVG 233 (NP1) | Transfer Case Control Connector End Views in Transfer Case - NVG 233 (NP1) |
| Front Axle Indicator Switch (NP8) | At the front axle, to the right of the differential | Transfer Case Control Component Views in Transfer Case - NVG 236 (NP8) | Transfer Case Control Connector End Views in Transfer Case - NVG 236 (NP8) |
| Front Axle Vacuum Solenoid (NP8) | On the cowl, 16.5 cm (6.5 in) from the breakout to the windshield wiper motor | Transfer Case Control Component Views in Transfer Case - NVG 236 (NP8) | Transfer Case Control Connector End Views in Transfer Case - NVG 236 (NP8) |
| Fuel Composition Sensor (2.2L) | Engine harness, to the right side of the engine | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Fuel Injector 1 (2.2L) | On the lower manifold assembly | Engine Controls Component Views in | -- |

| | | | |
|--|--|---|---|
| | | Engine Controls - 2.2L | |
| Fuel Injector 2 (2.2L) | On the lower manifold assembly | Engine Controls Component Views in Engine Controls - 2.2L | -- |
| Fuel Injector 3 (2.2L) | On the lower manifold assembly | Engine Controls Component Views in Engine Controls - 2.2L | -- |
| Fuel Injector 4 (2.2L) | On the lower manifold assembly | Engine Controls Component Views in Engine Controls - 2.2L | -- |
| Fuel Injector 1 (4.3L) | Part of the central sequential fuel injection (Central SFI) (4.3L) | Engine Controls Component Views in Engine Controls - 4.3L | -- |
| Fuel Injector 2 (4.3L) | Part of the central sequential fuel injection (Central SFI) (4.3L) | Engine Controls Component Views in Engine Controls - 4.3L | -- |
| Fuel Injector 3 (4.3L) | Part of the central sequential fuel injection (Central SFI) (4.3L) | Engine Controls Component Views in Engine Controls - 4.3L | -- |
| Fuel Injector 4 (4.3L) | Part of the central sequential fuel injection (Central SFI) (4.3L) | Engine Controls Component Views in Engine Controls - 4.3L | -- |
| Fuel Injector 5 (4.3L) | Part of the central sequential fuel injection (Central SFI) (4.3L) | Engine Controls Component Views in Engine Controls - 4.3L | -- |
| Fuel Injector 6 (4.3L) | Part of the central sequential fuel injection (Central SFI) (4.3L) | Engine Controls Component Views in Engine Controls - 4.3L | -- |
| Fuel Pump and Sender Assembly (2.2L) | Internal to the fuel tank | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls -2.2L |
| Fuel Pump and Sender Assembly (4.3L) | Internal to the fuel tank | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Fuel Pump (FP) Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Fuel Tank Pressure (FTP) Sensor (2.2L) | The three wire connector at the top of the fuel tank | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Fuel Tank Pressure (FTP) Sensor (4.3L) | The three wire connector at the top of the fuel tank | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |

| | | | |
|---|--|--|--|
| Fuse Block - I/P | LH of the I/P, near the door jamb switch - LF | Power and Grounding Component Views | -- |
| Fuse Block - Underhood | On the top of the left inner wheelwell | Power and Grounding Component Views | -- |
| Fuse Holder | On the lower right side of the radiator support, below the battery | Power and Grounding Component Views | -- |
| Fusible Link | Inline between the battery fuse stud and the generator B terminal | Engine Electrical Component Views in Engine Electrical | Engine Electrical Connector End Views in Engine Electrical |
| Garage Door Opener | Part of the driver information center | -- | -- |
| Generator (2.2L) | RF of the engine | Engine Electrical Component Views in Engine Electrical | Engine Electrical Connector End Views in Engine Electrical |
| Generator (4.3L) | RF of the engine | Engine Electrical Component Views in Engine Electrical | Engine Electrical Connector End Views in Engine Electrical |
| Hazard Switch | Top of the steering column upper shroud | Lighting Systems Component Views in Lighting Systems | -- |
| Headlamp Ambient Light Sensor | Top LH side of the I/P | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp - High Beam - Left | The inner headlamp bulb | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp Leveling Actuator - Left-Export | Behind the left headlamp | -- | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp Leveling Actuator - Right-Export | Behind the right headlamp | -- | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp Leveling Switch-Export | To the left of the I/P, near the fog lamp switch | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp - Low Beam - Left | The outer headlamp bulb | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp Power Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Headlamp, RH High Beam | The inner headlamp bulb | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |

| | | | |
|---|---|--|--|
| Headlamp - Low Beam - Right | The outer headlamp bulb | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp and Panel Dimmer Switch | LF of the I/P | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Headlamp Washer Fluid Pump | In the reservoir, under the front bumper | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Headlamp Washer Fluid Pump Relay | Mounted on the center radiator core support | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Heated Oxygen Sensor (HO2S) Bank 1, Sensor 2 (2.2L) | In the exhaust pipe, to the rear of the catalytic converter | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Heated Oxygen Sensor (HO2S) Bank 1, Sensor 1 (4.3L) | LR of the exhaust pipe, to the left of the transmission | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Heated Oxygen Sensor (HO2S) Bank 1, Sensor 3 (4.3L) | Rear of the catalytic converter, in the exhaust pipe | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Heated Oxygen Sensor (HO2S) Bank 2, Sensor 1 (4.3L) | Right side of the engine, in the exhaust pipe | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Heated Seat Control Module - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Heated Seat Control Module - Front Passenger | Under the right seat | -- | Power Seat Systems Connector End Views in Seats |
| HVAC Control Assembly (C42/C60) | In the center of the I/P | HVAC Component Views in HVAC Systems - Manual | HVAC Connector End Views in HVAC Systems - Manual |
| Horn - Left | In the left fenderwell | Horns Component Views in Horns | Horns Connector End Views in Horns |
| Horn - Right | In the right fenderwell | Horns Component Views in Horns | Horns Connector End Views in Horns |
| Horn Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |

| | | | |
|--|--|---|---|
| Horn Switch | Part of the steering column | Horns Component Views in Horns | -- |
| HVAC Control Module | The center of the I/P, below the radio | HVAC Component Views in HVAC System - Automatic | HVAC Connector End Views in HVAC System - Automatic |
| HVAC Vacuum Control Solenoid Valve-w/ Auto A/C) | On the lower rear of the heater assembly, near the body control module (BCM) | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Idle Air Control (IAC) Valve (2.2L) | Top of the engine, on the throttle body | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Idle Air Control (IAC) Valve (4.3L) | Top of the engine, on the throttle body | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Ignition Coil (4.3L) | Top right of the engine | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Ignition Control Module (ICM) (2.2L) | RR of the engine, near the grounding strap | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Ignition Control Module (ICM) (4.3L) | Top right of the engine | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Ignition Key Alarm Switch | At the ignition switch, part of the lock module | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages and Console | -- |
| Ignition and Start Switch | To the right of the steering column | Power and Grounding Component Views | -- |
| Inadvertent Power Relay | In the relay block - body | Electrical Center Identification Views | Electrical Center Identification Views |
| Inflatable Restraint Front End Discriminating Sensor - Left | On the front frame crossmember | SIR Component Views in SIR | SIR Connector End Views in SIR |
| Inflatable Restraint Front End Discriminating Sensor - Right | On the front frame crossmember | SIR Component Views in SIR | SIR Connector End Views in SIR |
| Inflatable Restraint I/P Module | Behind the RH I/P | SIR Component Views in SIR | SIR Connector End Views in SIR |

| | | | |
|---|---|---|---|
| Inflatable Restraint I/P Module Disable Switch-Pickup | In the center of the I/P | SIR Component Views in SIR | SIR Connector End Views in SIR |
| Inflatable Restraint Sensing and Diagnostic Module (SDM) | Between the LF and RF seats, below the console and the carpeting | SIR Component Views in SIR | SIR Connector End Views in SIR |
| Inflatable Restraint Steering Wheel Module | In the steering wheel | SIR Component Views in SIR | SIR Connector End Views in SIR |
| Inflatable Restraint Steering Wheel Module Coil | In the steering column | SIR Component Views in SIR | SIR Connector End Views in SIR |
| Inside Rear View Mirror-Automatic Day/Night Mirror w/ Map Lamps | At the windshield centerline | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Inside Rear View Mirror-w/ Map Lamps | At the windshield centerline | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Instrument Panel Cluster (IPC) | In the I/P, ahead of the steering column | Instrument Panel, Gages, and Console Component Views in Instrument Panel, Gages and Console | Instrument Panel, Gages, and Console Connector End Views in Instrument Panel, Gages and Console |
| Intake Air Temperature (IAT) Sensor (2.2L) | LF of the engine compartment, in the air intake duct | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Intake Air Temperature (IAT) Sensor (4.3L) | LF of the engine compartment, in the air intake duct | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| I/P Compartment Lamp | In the I/P compartment | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| I/P Dimmer Switch | Part of the headlamp switch | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Knock Sensor (KS) (2.2L) | Lower RH of the engine, below the coil packs | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Knock Sensor (KS) (4.3L) | Top rear of the engine, above the transmission bell housing, on the LH side | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| License Lamp (Sportside Pickup) | Above the rear license plate | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |

| | | | |
|--|---|---|---|
| License Lamp - Left-Fleetside Pickup | Left of the rear license plate | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| License Lamp - Left-Utility | On the rear bumper | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| License Lamp - Center-Export | On the rear bumper | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| License Lamp - Right-Fleetside Pickup | Right of the rear license plate | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| License Lamp - Right-Utility | On the rear bumper | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Liftglass Ajar Switch | Part of the liftglass latch assembly | Body Rear End Component Views in Body Rear End | Body Rear End Connector End Views in Body Rear End |
| Liftglass Relay | In the fuse block - underhood | Electrical Center Identification Views | Electrical Center Identification Views |
| Liftglass Release Actuator | Inside the top of the endgate | Body Rear End Component Views in Body Rear End | Body Rear End Connector End Views in Body Rear End |
| Lumbar Switch - Driver | Left side seat, lower | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Lumbar Switch - Passenger | Right side seat, lower | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Manifold Absolute Pressure (MAP) Sensor (2.2L) | Top RH of the engine, on the intake manifold | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Manifold Absolute Pressure (MAP) Sensor (4.3L) | Top center of the engine | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Marker Lamp - LF | LF of the vehicle, the outer part of the headlamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Marker Lamp - RF | RF of the vehicle, the outer part of the headlamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Marker Lamp - LR | LR of the vehicle, in the tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |

| | | | |
|--|--|---|---|
| Marker Lamp - RR | RR of the vehicle, in the tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Mass Air Flow (MAF) Sensor (4.3L) | LF of the engine compartment, on the air intake duct | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Memory Seat Module - Driver | Under the left seat | Power Seat Systems Component Views in Seats | -- |
| Multifunction Switch (T/SIG, HDLP/ DM, and WSW) | Left side of the steering column | Lighting Systems Component Views in Lighting Systems | -- |
| Outside Rear View Folding Mirror Switch | On the top of the left door trim panel | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views in Doors |
| Outside Rear View Mirror - Driver-10 Cavities | Door harness to outside rear view mirror pigtail connector | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views in Doors |
| Outside Rear View Mirror - Passenger-10 Cavities | Door harness to outside rear view mirror pigtail connector | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views in Doors |
| Outside Rear View Mirror Switch | In the left door trim panel, beside the armrest | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views in Doors |
| Oxygen Sensor, Bank 1 Sensor 1 (2.2L) | LH side of engine, in the exhaust manifold crossover pipe | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Park/Turn Signal Lamp - LF | In the headlamp, below the low beam bulb | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Park/Turn Signal Lamp - LR | LR of the vehicle, in the tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Park/Turn Signal Lamp - RF | In the headlamp, below the low beam bulb | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Park/Turn Signal Lamp - RR | RR of the vehicle, in the tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Park Brake Switch | On the park brake bracket | Hydraulic Brakes Component Views in Hydraulic Brakes | Hydraulic Brakes Connector End Views in Hydraulic Brakes |
| Park Lamp Relay | In the relay block - body | Power and Grounding Component Views | Electrical Center Identification Views |

| | | | |
|--|---|---|---|
| Park Lock Solenoid-w/ Floor Shift A/T only | In the steering column | Automatic Transmission Shift Lock Control Component Views in Shift Lock Control | Automatic Transmission Shift Lock Control Connector End Views in Shift Lock Control |
| Park/Neutral Position (PNP) Switch | Left of the transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Related Connector End Views in Automatic Transmission |
| Park Switch-w/ Column Shift A/T | In the steering column | -- | -- |
| Passlock™ Sensor | At the ignition switch, part of the lock module | Theft Deterrent System Component Views in Theft Deterrent | -- |
| Power Recliner Motor - Driver | In the left seat back, mounted to the frame | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Power Recliner Motor - Front Passenger | In the right seat back, mounted to the frame | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Powertrain Control Module (PCM) | On the right side of the engine compartment | Engine Controls Component Views in Engine Controls - 2.2L | Powertrain Control Module (PCM) Connector End Views in Engine Controls - 2.2L |
| Pressure Control Solenoid-PC SOL-Valve | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| Propshaft Speed Sensor - Front (NP8) | Top LH rear of the transfer case | Transfer Case Control Component Views in Transfer Case | Transfer Case Control Connector End Views in Transfer Case |
| Propshaft Speed Sensor - Rear (NP8) | Top RH rear of the transfer case, near the rear propshaft | Transfer Case Control Component Views in Transfer Case | Transfer Case Control Connector End Views in Transfer Case |
| Radio | Center of I/P | Entertainment Component Views in Entertainment | -- |
| Radio Connector C1-10 Cavities | Center of I/P | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Radio Connector C2-10 Cavities | Center of I/P | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |

| | | | |
|---|--|---|--|
| Radio Connector C3-9 Cavities-w/ Remote Audio Player | Center of I/P | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Radio Antenna | Mounted on the RF fender | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Rear Seat (RSA) Audio Controller | Rear of the center console | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Rear Window Defogger Grid-Utility | Part of the liftglass window | Stationary Windows Component Views in Stationary Windows | -- |
| Rear Window Defogger Relay-Utility | In the fuse block - underhood | Power and Grounding Component Views | -- |
| Rear Window Defogger Switch-Utility-w/ Manual A/C | Part of the HVAC control assembly | HVAC Component Views in HVAC Systems - Manual | Stationary Windows Connector End Views in Stationary Windows |
| Rear Window Defogger Switch-Utility-w/ Auto A/C | Part of the HVAC control module | HVAC Component Views in HVAC Systems - Automatic | Stationary Windows Connector End Views in Stationary Windows |
| Rear Window Wiper Cutout and Liftglass Ajar Jamb Switch-Utility | In the liftgate/endgate, near the latch | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Rear Wiper/Washer and Endgate/Liftgate Window Release Switch | On the I/P, to the left of the radio | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Relay Block - Body | Left side of the dash, to the right of the I/P fuse block | Power and Grounding Component Views | Power and Grounding Connector End Views |
| Remote Control Door Lock Receiver (RCDLR) | On the left I/P sound insulator | Keyless Entry Component Views in Keyless Entry | Keyless Entry Connector End Views in Keyless Entry |
| Remote Playback Device - CD or Cassette Player | In the center of the floor console | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Repeater Lamp - Left-Export | On the side of the left fender | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Repeater Lamp - Right- Export | On the side of the right fender | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Retained Accessory Power (RAP) Relay | In the relay block - body | Power and Grounding Component Views | Electrical Center Identification Views |

| | | | |
|--|--|---|---|
| Seat Adjuster Switch - Driver-8-Way w/ Memory-12 Cavities | On the left side of the LF lower seat cushion | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Adjuster Switch - Driver-6 or 8-Way w/o Memory | On the left side of the LF lower seat cushion | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Adjuster Switch - Front Passenger-6 or 8-Way w/o Memory | On the right side of the RF lower seat cushion | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Belt Switch | In the left seat belt buckle | -- | Seat Belt Connector End Views in Seat Belts |
| Seat Front Vertical Motor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Front Vertical Motor - Front Passenger | Under the right seat | -- | Power Seat Systems Connector End Views in Seats |
| Seat Front Vertical Position Sensor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Horizontal Motor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Horizontal Motor - Front Passenger | Under the right seat | -- | Power Seat Systems Connector End Views in Seats |
| Seat Horizontal Position Sensor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Lumbar Motor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Lumbar Motor - Front Passenger | Under the right seat | -- | Power Seat Systems Connector End Views in Seats |
| Seat Rear Vertical Motor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |
| Seat Rear Vertical Motor - Front Passenger | Under the right seat | -- | Power Seat Systems Connector End Views in Seats |
| Seat Rear Vertical Position Sensor - Driver | Under the left seat | Power Seat Systems Component Views in Seats | Power Seat Systems Connector End Views in Seats |

| | | | |
|---|--|---|---|
| Secondary Air Injection Reactor (AIR) Fuse Block (2.2L) | Mounted to the RF fender, next to the battery | Engine Controls Component Views in Engine Controls - 2.2L | -- |
| Secondary Air Injection (AIR) Pump (2.2L) | In the lower right front engine compartment area | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Speaker - LF | Top LH of the IP | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - LF Door | In the LH Front side door | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - LR-2-door Utility | Behind the LH B pillar | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - L-Extended Cab Pickup w/o Third Door | At the LH C pillar | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - RF | Top RH of the IP | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - RF | In the RH Front side door | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - LR Door - 4-door Utility | In the RH Rear door | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - RR Door - 4-door Utility | Rear of the center console | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Speaker - RR - Extended Cab Pickup w/o 3rd Door | At the RH C pillar | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Starter (2.2L) | Lower left of the engine | Engine Electrical Component Views in Engine Electrical | -- |
| Starter (4.3L) | Lower RH of the engine | Engine Electrical Component Views in Engine Electrical | -- |
| Starter Relay | In the fuse block - underhood | Engine Electrical Component Views in Engine Electrical | Electrical Center Identification Views |
| Starter Solenoid | Mounted on the starter | Engine Electrical Component Views in Engine Electrical | -- |

| | | | |
|---|---|---|---|
| Stop Lamp Switch | Mounted on the brake pedal | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Sunload Sensor-Utility w/ Auto A/C | Top front center of the IP | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Sunroof Motor | In front of the sunroof | Power Roof Systems Component Views in Roof | Power Roof Systems Connector End Views in Roof |
| Sunroof Switch | LH of the sunroof module at the front of the sunroof | Power Roof Systems Component Views in Roof | -- |
| Steering Wheel Controls | Mounted on the steering wheel | Entertainment Component Views in Entertainment | Entertainment Connector End Views in Entertainment |
| Sunroof Module | At the front of the sunroof | Power Roof Systems Component Views in Roof | -- |
| Sunroof Motor Connector | Dome harness to sunroof harness overhead, near the sunroof express module | Power Roof Systems Component Views in Roof | Power Roof Systems Connector End Views in Roof |
| Tail/Stop Lamp - Right-Export | At the LR tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Tail/Stop Lamp - Right-Export | At the RR tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Throttle Position (TP) Sensor (2.2L) | Top LH of the engine, on the throttle body | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Throttle Position (TP) Sensor (4.3L) | Top LH of the engine, on the throttle body | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Torque Converter Clutch (TCC) Solenoid Valve | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| Torque Converter Clutch Pulse Width Modulation Solenoid-TCC PWM SOL-Valve | In the automatic transmission | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |

| | | | |
|--|--|---|---|
| Tow/Haul Switch | In the steering column | Automatic Transmission Electronic Component Views in Automatic Transmission | Automatic Transmission Internal Connector End Views in Automatic Transmission |
| Trailer Wiring Provision - 2-Door Utility | Coiled at the RR of the rear crossmember | Lighting Systems Component Views in Lighting Systems | -- |
| Trailer Wiring Provision - 4-Door Utility | Coiled in the LR crossmember | Lighting Systems Component Views in Lighting Systems | -- |
| Transfer Case Encoder Motor (NP1) | Behind the automatic transmission | Transfer Case Control Component Views in Transfer Case - NVG 233 (NP1) | Transfer Case Control Connector End Views in Transfer Case - NVG 233 (NP1) |
| Transfer Case Encoder Motor (NP8) | Right side of the ATC, below the rear transfer case speed sensor connector | Transfer Case Control Component Views in Transfer Case - NVG 236 (NP8) | Transfer Case Control Connector End Views in Transfer Case - NVG 236 (NP8) |
| Transfer Case Shift Control Switch (NP1) | Right of the instrument cluster | Transfer Case Control Component Views in Transfer Case - NVG 233 (NP1) | Transfer Case Control Connector End Views in Transfer Case - NVG 233 (NP1) |
| Transfer Case Shift Control Switch (NP8) | Right of the instrument cluster | Transfer Case Control Component Views in Transfer Case - NVG 236 (NP8) | Transfer Case Control Connector End Views in Transfer Case - NVG 236 (NP8) |
| Transfer Case Shift Control Module (NP8) | Behind the RF kick panel, the lower connector | Transfer Case Control Component Views in Transfer Case - NVG 236 (NP8) | Transfer Case Control Connector End Views in Transfer Case - NVG 236 (NP8) |
| Transfer Case Shift Control Module (NP1) | Behind the RF kick panel | Transfer Case Control Component Views in Transfer Case - NVG 233 (NP1) | Transfer Case Control Connector End Views in Transfer Case - NVG 233 (NP1) |
| Turn Signal Lamp - LR-Export | At the LR tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Turn Signal Lamp - RR-Export | At the RR tail lamp | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Turn Signal Lamp/Hazard Flasher Module-Pickup | Right side of the I/P, mounted next to C203 | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Turn Signal Lamp/Hazard Flasher Module-Utility | Right side of the I/P, mounted next to C203 | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |

| | | | |
|--|--|--|--|
| Turn Signal Switch | Part of the multifunction switch | Lighting Systems Component Views in Lighting Systems | -- |
| Vacuum Control Assembly | On the front of the heater case | HVAC Component Views in HVAC Systems - Automatic | HVAC Connector End Views in HVAC Systems - Automatic |
| Vanity Mirror Lamp - Left | In the left sunshade | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Vanity Mirror Lamp - Right | In the right sunshade | Lighting Systems Component Views in Lighting Systems | Lighting Systems Connector End Views in Lighting Systems |
| Vehicle Speed Sensor (VSS) (2.2L w/ A/T) | RR of the A/T | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Vehicle Speed Sensor (VSS) (2.2L Engine w/ M/T) | LR of the M/T | Engine Controls Component Views in Engine Controls - 2.2L | Engine Controls Connector End Views in Engine Controls - 2.2L |
| Vehicle Speed Sensor (VSS) (4.3L w/ A/T) | RR of the A/T | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Vehicle Speed Sensor (VSS) (4.3L w/ M/T) | To the LR of the M/T | Engine Controls Component Views in Engine Controls - 4.3L | Engine Controls Connector End Views in Engine Controls - 4.3L |
| Wheel Speed Sensor (WSS) - LF | Part of the left wheel knuckle and hub | ABS Component Views in Anitlock Brake System | ABS Connector End Views in Anitlock Brake System |
| Wheel Speed Sensor (WSS) - RF | Part of the right wheel knuckle and hub | ABS Component Views in Anitlock Brake System | ABS Connector End Views in Anitlock Brake System |
| Window Lockout Switch | The second connector from the front at the LF armrest | Power Door Systems Component Views in Doors | Power Door Systems Connector End Views in Doors |
| Windshield Washer Fluid Pump | LF of the engine compartment, in the washer fluid reservoir | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Window Washer Pump - Rear- Utility | LF of the engine compartment, the upper pump in the washer fluid reservoir | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |

| | | | |
|--|--|--|--|
| Windshield Wiper Motor | Center rear of the engine compartment, on the cowl | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Window Wiper Motor - Rear- Utility | In the liftgate/endgate, near the latch | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| Window Wiper Motor Controller - Rear - Utility | Part of the window wiper motor - rear | Wiper/Washer System Component Views in Wipers/Washer Systems | Wiper/Washer System Connector End Views in Wipers/Washer Systems |
| C100 - 6 Cavities (4.3L) | Engine harness to heated oxygen sensor extension harness, rear of engine compartment, near the A/C accumulator | Harness Routing Views | Inline Harness Connector End Views |
| C101 - 16 Cavities (2.2L) | Engine harness to body harness, right of the engine compartment, near the PCM | Harness Routing Views | Inline Harness Connector End Views |
| C101 - 10 Cavities (4.3L) | Engine harness to body harness, right of the engine compartment, near the PCM | Harness Routing Views | Inline Harness Connector End Views |
| C102 - 2 Cavities (4.3L w/4WD) | Engine harness to body harness, right of the engine compartment, near the PCM | Harness Routing Views | Inline Harness Connector End Views |
| C104 | Engine harness to chassis harness, left side of transmission, near the Park Neutral Position (PNP) switch | Harness Routing Views | Inline Harness Connector End Views |
| C106 - 4 Cavities | Forward lamps to body harness, inside the LF fender, near the underhood fuse block | Harness Routing Views | Inline Harness Connector End Views |
| C106 - 4 Cavities (E09) | Forward lamps to body harness, inside the LF fender, near the fuse block - underhood | Harness Routing Views | Inline Harness Connector End Views |
| C108 - 7 Cavities (NP1) | Transfer case extension harness to body harness, LR engine compartment near cowl penetration P100 | Harness Routing Views | Inline Harness Connector End Views |
| C108 - 16 Cavities (w/o Auto 4WD) | Transfer case extension harness to body harness, LH rear engine compartment near cowl penetration P100 | Harness Routing Views | Inline Harness Connector End Views |

| | | | |
|---|--|---------------------------------------|--|
| C116 C1 - 2 Cavities (4WD) | Active transfer case harness to VSS jumper harness, near transfer case encoder motor C1 | Harness Routing Views | Inline Harness Connector End Views |
| C116 C2 - 2 Cavities (w/ manual trans, 4WD) | Engine harness to active transfer case harness, near backup lamp switch | Harness Routing Views | Inline Harness Connector End Views |
| C116 C2 - 2 Cavities (w/ auto trans, 4WD) | Engine harness to active transfer case harness, | Harness Routing Views | Inline Harness Connector End Views |
| C117 - 2 Cavities | Engine harness to A.I.R. jumper harness, near Secondary A.I.R. fuse block | Harness Routing Views | Inline Harness Connector End Views |
| C200 - 2 Cavities | SIR I/P harness to body harness connector, right of the I/P, next to C203 | Harness Routing Views | Inline Harness Connector End Views |
| C201 - 4 Cavities | Steering column harness to steering wheel controls jumper harness, behind the SIR steering wheel inflator module | -- | Inline Harness Connector End Views |
| C203 - 116 Cavities | Body harness to I/P harness, to the right of the I/P | Harness Routing Views | Inline Harness Connector End Views |
| C204 - 7 Cavities - Utility | Body harness to floor shifter harness, in the I/P, in front of the automatic transmission controller | Harness Routing Views | Inline Harness Connector End Views |
| C207 - 9 Cavities | Radio jumper harness to I/P harness, near radio C3 | Harness Routing Views | Inline Harness Connector End Views |
| C209 - 16 Cavities | Body harness to dome harness, at the LF of the I/P, at the LF window | Harness Routing Views | Inline Harness Connector End Views |
| C210 - 4 Cavities | Body harness to radio steering wheel controls, front of the I/P, next to C211 | Harness Routing Views | Inline Harness Connector End Views |
| C211 - 48 Cavities | Body harness to steering column harness, near stoplamp switch | Harness Routing Views | Inline Harness Connector End Views |
| C217 - 4 Cavities | Body harness to I/P harness, at the top LF of the I/P, near the LF window pillar below the I/P fuse block | Harness Routing Views | Inline Harness Connector End Views |
| C223 - 2 Cavities | I/P harness to auxiliary power tray, in the I/P, left of C203 | Harness Routing Views | Inline Harness Connector End Views |

| | | | |
|--|---|---------------------------------------|--|
| C224 - 4 Cavities | Body harness to I/P tray harness, in front of the I/P, to the rear of the ashtray | Harness Routing Views | Inline Harness Connector End Views |
| C229 - 4 Cavities | Body harness to dome lamp harness, near C209 | Harness Routing Views | Inline Harness Connector End Views |
| C300 - 2 Cavities - Utility w/Sunroof | Dome harness to sunroof harness overhead, near the sunroof module | Harness Routing Views | Inline Harness Connector End Views |
| C301 - 4 Cavities - Utility | Near the driver information center | Harness Routing Views | Inline Harness Connector End Views |
| C304 - 6 Cavities | Body harness to LH door harness, near door jamb switch - LF | Harness Routing Views | Inline Harness Connector End Views |
| C305 - 2 Cavities | Body harness to door harness, near C304 | Harness Routing Views | Inline Harness Connector End Views |
| C308 - 4 Cavities | In the driver heated seat harness, under the seat cushion | Harness Routing Views | Inline Harness Connector End Views |
| C309 - 4 Cavities | In the front passenger heated seat harness, under the seat cushion | Harness Routing Views | Inline Harness Connector End Views |
| C315 - 6 Cavities - 4-Door Utility w/Power Seats | Body harness to RF seat pigtail connector, under the RF seat | Harness Routing Views | Inline Harness Connector End Views |
| C317 - 6 Cavities | Body harness to LF seat belt switch and power seats, under the LF seat | Harness Routing Views | Inline Harness Connector End Views |
| C401 - 5 Cavities | In the rear, left side of the frame rail | Harness Routing Views | Inline Harness Connector End Views |
| C402 - 4 Cavities - Utility | Body harness to right tail lamp harness, at the RR of the vehicle | Harness Routing Views | Inline Harness Connector End Views |
| C403 - 4 Cavities - Utility | Body harness to left tail lamp harness, to the LR of the vehicle | Harness Routing Views | Inline Harness Connector End Views |
| C411 - 2 Cavities - Utility | Body harness to endgate harness, to the rear of the left center of the body, at the endgate | Harness Routing Views | Inline Harness Connector End Views |
| C412 - 4 Cavities - Utility | Body harness to endgate harness, to the rear left center of the body, at the endgate | Harness Routing Views | Inline Harness Connector End Views |
| C413 - 6 Cavities - Utility | Body harness to endgate harness, to the rear left center of the body, at the | Harness Routing Views | Inline Harness Connector End Views |

| | | | |
|--------------------------------------|---|---------------------------------------|--|
| | endgate | | |
| C430 - 4 Cavities - Utility | Chassis harness to license lamp harness, inside the rear crossmember, in front of the license plate | Harness Routing Views | Inline Harness Connector End Views |
| C430 - 2 Cavities - Sportside Pickup | Chassis harness to license lamp harness, inside the rear crossmember, in front of the license plate | Harness Routing Views | Inline Harness Connector End Views |
| C433 - 1 Cavity - Utility | Body harness to endgate coiled cord connector, RH, at the RR upper body, near the endgate liftglass | Harness Routing Views | -- |
| C500 - 4 Cavities (w/o AU3/A31) | Body harness to LF door harness, in the LF door | Harness Routing Views | Inline Harness Connector End Views |
| C500 - 22 Cavities (w/AU3/A31) | Body harness to LF door harness, in the LF door | Harness Routing Views | Inline Harness Connector End Views |
| C501 - 16 Cavities - 4-Door Utility | Body harness to LF door harness, in the LF door | Harness Routing Views | Inline Harness Connector End Views |
| C601 - 4 Cavities (w/o AU3/A31) | Body harness to RF door harness, in the RF door | Harness Routing Views | Inline Harness Connector End Views |
| C601 - 22 Cavities (w/AU3/A31) | Body harness to RF door harness, in the RF door | Harness Routing Views | Inline Harness Connector End Views |
| G100 - w/California Emissions | (CKT 1550) Air harness on the lower right radiator support | Harness Routing Views | -- |
| G102 (2.2L) | (CKT 350) At the engine harness, RF of the engine block, under the generator | Harness Routing Views | -- |
| G102 (4.3L) | (CKT 350) Engine harness, RR of the cylinder head | Harness Routing Views | -- |
| G103 (2.2L) | (CKT 351) Engine harness, RF of the engine block, under the generator | Harness Routing Views | -- |
| G103 (4.3L) | (CKT 351) Engine harness, RR of the cylinder head | Harness Routing Views | -- |
| G104 (4.3L) | Engine harness, LR of the cylinder head | Harness Routing Views | -- |
| G105 (2.2L) | (CKT 450, CKT 451) Engine harness, to the RR of the engine block, near the ignition control module | Harness Routing Views | -- |
| G105 (4.3L) | (CKT 450, CKT 451) Engine harness, LR of the cylinder head | Harness Routing Views | -- |

| | | | |
|------|--|---------------------------------------|----|
| G106 | (CKT 1550) Battery negative harness, at the right side frame rail, forward of the RF wheel | Harness Routing Views | -- |
| G107 | (CKT 750) Battery negative harness, to the RF of the engine block | Harness Routing Views | -- |
| G108 | (CKT 250) Battery negative harness, to the right of the radiator support, next to the battery fuse | Harness Routing Views | -- |
| G110 | (CKT 150) Body harness, near the windshield washer pump | Harness Routing Views | -- |
| G111 | (CKT 150) Forward lamps harness, to the left of the radiator support, near SP100 | Harness Routing Views | -- |
| G112 | (CKT 250) Forward lamps harness, to the right inside of the radiator support, near SP101 | Harness Routing Views | -- |
| G117 | (CKT 850) Body harness, to the LR of the engine compartment, near the cruise control module (CCM) | Harness Routing Views | -- |
| G200 | (CKT 1850) Body harness, to the LF of the I/P, above P100 | Harness Routing Views | -- |
| G201 | (CKT 1850) Body harness, to the LF of the I/P, above P100 | Harness Routing Views | -- |
| G202 | (CKT 1850) Body harness, to the LF of the I/P, above P100 | Harness Routing Views | -- |
| G203 | (CKT 1050) Body harness, to the right of the I/P, between C203 and the splice packs | Harness Routing Views | -- |
| G204 | (CKT 1050) Body harness, to the right of the I/P, between C203 and the splice packs | Harness Routing Views | -- |
| G205 | (CKT 1050) Body harness, to the right of the I/P, between C203 and the splice packs | Harness Routing Views | -- |

| | | | |
|-----------------------|---|---------------------------------------|----|
| G206 | (CKT 1050) Body harness, to the right of the I/P, between C203 and the splice packs | Harness Routing Views | -- |
| G207 | (CKT 1850) Steering column harness, next to the multifunction switch | Harness Routing Views | -- |
| G402 - Utility | (CKT 22, CKT 1650) Chassis harness, in the rear of the left side frame rail | Harness Routing Views | -- |
| G402 - Pickup | (CKT 1750) Chassis harness, near the top center of the second crossmember from rear, with the fuel filler neck ground strap | Harness Routing Views | -- |
| G420 - Utility | (CKT 1450) Body harness, in the RR body corner, near C402 to the tail lamp harness | Harness Routing Views | -- |
| G420 - Pickup | (CKT 2250) Chassis harness, in the rear of the right side frame rail | Harness Routing Views | -- |
| G450 - Utility | (CKT 1350) Body harness, in the LR body corner, near C403 to the tail lamp harness | Harness Routing Views | -- |
| G475 - Pickup | (Circuit 1750) Tail lamp harness, in the rear of the LH frame rail near SP402 | Harness Routing Views | -- |
| P100 | I/P bulkhead pass-through, LR of the engine compartment, on the cowl | Harness Routing Views | -- |
| P402 - Utility | LH tail lamp jumper, to the LR of the vehicle, near the park/turn signal lamp - LF | Harness Routing Views | -- |
| P403 - Utility | RH tail lamp jumper, to the RR of the vehicle, near the park/turn signal lamp - RF | Harness Routing Views | -- |
| P404 - 4-Door Utility | Body w/ endgate to the LH CHMSL/cargo lamp, below the roof panel | Harness Routing Views | -- |
| P500 | Body harness to the LF door pass-through, between the body and the LF door | Harness Routing Views | -- |
| P501 | LF door to outside rear view mirror - driver, in the LF door, at the outside rearview | Harness Routing Views | -- |

| | | | |
|-------------------------------|---|---------------------------------------|----|
| | mirror - driver | | |
| P600 | Body harness to RF door pass-through, between the body and the RF door | Harness Routing Views | -- |
| P601 | RF door to outside rearview mirror, in the RF door, at the outside rearview mirror - front passenger | Harness Routing Views | -- |
| P900 - Utility | Body to the endgate, between the body harness and the endgate | Harness Routing Views | -- |
| S103 (4.3L) | (CKT 350) Engine harness between the breakouts for fuse block - underhood and C104, 19.5 cm (7.6 in) from Throttle Position (TP) Sensor | Harness Routing Views | -- |
| S104 - w/California Emissions | (CKT 1550) AIR jumper, between G100 and secondary air injection reactor (AIR) pump, 20 cm (7.8 in) from the secondary air injection (AIR) pump, C2 | Harness Routing Views | -- |
| S105 - w/California Emissions | (CKT 78) AIR jumper, between G100 and the breakout to the engine harness, 5 cm (2 in) from the breakout to the engine harness | Harness Routing Views | -- |
| S106 (2.2L) | (CKT 351) Engine harness, between the breakouts to the PCM and to the fuel injector connector, 25 cm (10 in) from the breakouts to the PCM | Harness Routing Views | -- |
| S106 (4.3L) | (CKT 351) Engine harness, between the breakouts to the rear heated oxygen sensors connector and the body harness connector, 7 cm (2.8 in) from the breakout to the heated oxygen sensor connector | Harness Routing Views | -- |
| S107 | (CKT 189) Forward lamps harness, between the breakouts to the headlamp leveling actuator - left and | Harness Routing Views | -- |

| | | | |
|-------------|--|---------------------------------------|----|
| | C106, 26 cm (10.2 in) from the breakout to Fog Lamp - LF | | |
| S108 (E09) | (CKT 350) In the forward lamp harness between the breakouts to the horn - right connector and SP101, 16 cm (6.4 in) from the horn - right connector breakout | Harness Routing Views | -- |
| S109 (2.2L) | (CKT 1589) In the engine harness between the breakouts to the PCM and C104, 42 cm (16.5 in) from C117 | Harness Routing Views | -- |
| S113 | (CKT 1020) Body harness, between the blower motor breakout and the blower motor relay breakout, 13 cm (5.2 in) from the breakout to the blower motor | Harness Routing Views | -- |
| S116 (4.3L) | (CKT 1020) Engine harness, 20 cm (7.9 in) before the breakout to G102 and G103 towards the PCM | Harness Routing Views | -- |
| S118 (4.3L) | (CKT 850) Body harness, between the breakouts to the blower motor and the blower motor relay | Harness Routing Views | -- |
| S121 | (CKT 1695) Body harness, between electronic brake control module (EBCM), C1 breakout and C102 breakout, 6.5 cm (2.5 in) from S113 | Harness Routing Views | -- |
| S129 (2.2L) | (CKT 1020) Engine harness, between the A/C refrigerant pressure sensor breakout and the C111 breakout, 20 cm (7.9 in) from the breakout to the A/C refrigerant pressure sensor | Harness Routing Views | -- |
| S138 | (CKT 420), Body harness near blower motor resistor-(manual a/c, 27.5 cm (10.8 in) from the breakout to the blower motor resistor --manual a/c | Harness Routing Views | -- |

| | | | |
|-------------------|---|---------------------------------------|----|
| S140 (2.2L w/A/T) | (CKT 450) Engine harness, on the engine harness at the A/T, 13 cm (5.2 in) toward the engine from the breakout to the VSS | Harness Routing Views | -- |
| S140 (4.3L w/A/T) | (CKT 450) Engine harness, at the A/T, 13 cm (5.2 in) into the breakout to the VSS | Harness Routing Views | -- |
| S140 (w/ M/T) | (CKT 450) Engine harness, on the engine harness breakout to the M/T VSS, 7 cm (2.8 in) from the breakout | Harness Routing Views | -- |
| S152 (2.2L) | (CKT 351, CKT 413, CKT 451) Engine harness, between the breakouts for the fuel injector connector and the ignition control module, 7 cm (2.8 in) from G105 | Harness Routing Views | -- |
| S152 (4.3L) | (CKT 351, CKT 413, CKT 451) Engine harness, between the breakouts for the LR and RR engine block grounds, 13 cm (5.1 in) from the breakout to the LR engine grounds | Harness Routing Views | -- |
| S203 - Pickup | (CKT 441) Body harness near splice pack SP202, 17 cm (6.6 in) splice pack SP202 | Harness Routing Views | -- |
| S204 | (CKT 300) I/P harness, near the I/P fuse block, 4 cm (1.6 in) into the breakout to C217 | Harness Routing Views | -- |
| S205 | (CKT 1220) I/P harness, between the breakouts for the radio and BCM connector C3, 8 cm (3.2 in) from the breakout to the radio | Harness Routing Views | -- |
| S207 (Chevy/GMC) | (CKT 835) Remote cassette jumper harness, between remote playback device - cassette and C207, 37.5 cm (14.7 in) from C207 | Harness Routing Views | -- |

| | | | |
|--------------------------|--|---------------------------------------|----|
| S208 (w/o C68) | (CKT 40) IP harness, between the breakouts to the radio and to the RH console courtesy lamp, 4 cm (1.6 in) from the breakout to the lamp | Harness Routing Views | -- |
| S208 (w/C68) | (CKT 40) I/P harness, between the breakouts for the BCM connector C3 and the stereo radio, 6 cm (2.4 in) from the breakout to the BCM | Harness Routing Views | -- |
| S217 (w/o C68) | (CKT 341) I/P harness, in the breakout to the heater controller connectors, 6 cm (2.4 in) into the breakout | Harness Routing Views | -- |
| S240 - Utility w/C68 | (CKT 340) I/P harness, 4 cm (1.6 in) from the breakout to the BCM connector C3 and the breakout to the instrument cluster | Harness Routing Views | -- |
| S268 | (CKT 1040) Auxiliary power tray harness, 9.5 cm (3.7 in) from the in-line I/P connector | Harness Routing Views | -- |
| S269 | (CKT 1050) Auxiliary power tray harness, 8.5 cm (3.4 in) from the in-line I/P connector | Harness Routing Views | -- |
| S282 | (CKT 1382) I/P harness, between the breakouts to the BCM connector C3 and the radio, 6.5 cm (2.6 in) from the breakout to the BCM | Harness Routing Views | -- |
| S283 | (CKT 2409) I/P harness, between the breakouts to the BCM connector C3 and the radio, 13 cm (5.2 in) from the breakout to the BCM | Harness Routing Views | -- |
| S290 | (CKT 1301) I/P harness, between the breakout to C205 | Harness Routing Views | -- |
| S302 - Utility w/Sunroof | (CKT 1850) Dome harness between the breakouts to the inside air temperature | Harness Routing Views | -- |

| | | | |
|------------------------------|---|---------------------------------------|----|
| | sensor and the LH visor vanity mirror lamp, 5 cm (1.9 in) from the breakout to the sensor | | |
| S302 - Utility w/o Sunroof | (CKT 1850) Dome harness between the breakouts to the air temperature sensor - inside and the LH visor vanity mirror lamp, 5 cm (1.9 in) from the breakout to the sensor | Harness Routing Views | -- |
| S304 - 4-Door Utility | (CKT 1440) Body harness, before the breakout to the RR and LR doors | Harness Routing Views | -- |
| S305 | (CKT 727) Body harness, 22.5 cm (8.9 in) before the breakout to door jamb switch - RR | Harness Routing Views | -- |
| S306 | (CKT 1307) Body harness, 6.5 cm (2.6 in) before the breakout to door jamb switch - LR | Harness Routing Views | -- |
| S307 | (CKT 294) Body harness, 6.5 cm (2.6 in) before the breakout to door jamb switch - RR | Harness Routing Views | -- |
| S308 | (CKT 295) Body harness, 16.5 cm (6.5 in) before the breakout to door jamb switch - LR | Harness Routing Views | -- |
| S309 - Utility | (CKT 1324) Body harness, 98 cm (38.6 in) from rear door breakout | Harness Routing Views | -- |
| S311 - w/ Power Seats | (CKT 1440) In the LH power seat harness | -- | -- |
| S313 - w/ PowerSeats | (CKT 1350) LH power seat harness, 15 cm (5.9 in) from C317 | -- | -- |
| S314 - w/ Heated Power Seats | (CKT 2240) LH power seat harness, 20 cm (7.8 in) from C317 | -- | -- |
| S315 | (CKT 557,569) 5 cm (2 in) from breakout for seat motors, toward seat lumbar motor - driver | -- | -- |

| | | | |
|-----------------------------------|--|--|----|
| S320 - w/Power Seats | (CKT 1350) RH power seat harness, 15 cm (5.9 in) from C315 | -- | -- |
| S321 - w/Heated Power Seats | (CKT 2240) RH power seat harness, 20 cm (7.8 in) from C315 | -- | -- |
| S332 | (CKT 1732) Dome harness, 7 cm (2.8 in) from C300 | Lighting Systems Component Views in Lighting Systems | -- |
| S335 - Utility w/Floor Shift A/T | (CKT 1850) Floor shift extension harness, between the in-line connector and the lamp breakout, 7 cm (2.8 in) from the lamp breakout | Harness Routing Views | -- |
| S336 - Utility w/ Floor Shift A/T | (CKT 1220) Floor shift extension harness, between the automatic transmission shift lock solenoid and the lamp breakout, 7 cm (2.8 in) from the lamp breakout | Harness Routing Views | -- |
| S400 - OnStar | (CKT 640) Body harness, between C474 and vehicle interface unit (VIU), | Harness Routing Views | -- |
| S401 - OnStar | (CKT 1450) Body harness, between C474 and vehicle interface unit (VIU) | Harness Routing Views | -- |
| S404 - Utility | (CKT 1350) Body harness, 10 cm (3.9 in) before the breakout to the high mount stop lamp | Harness Routing Views | -- |
| S405 - Utility | (CKT 1320) Body harness, 10 cm (3.9 in) before the breakout to the high mounted stop lamp | Harness Routing Views | -- |
| S406 (E09) | (CKT 1320) In the body harness, 10 cm (3.9 in) from the C403 breakout, toward the center high mounted stop lamp | Harness Routing Views | -- |
| S417 - Utility | (CKT 18) LH tail lamp jumper harness, near C403, 18 cm (7.1 in) from P402 | Harness Routing Views | -- |
| S418 - Utility | (CKT 18) RH tail lamp jumper harness, near C402, 18 cm (7.1 in) from P403 | Harness Routing Views | -- |

| | | | |
|------------------------|--|---------------------------------------|----|
| S419-Utility | (CKT 150) LH tail lamp jumper harness, 8 cm (3.2 in) toward C403 from P402 | Harness Routing Views | -- |
| S420 - Utility | (CKT 150) RH tail lamp jumper harness, 8 cm (3.2 in) toward C402 from P403 | Harness Routing Views | -- |
| S420 - Pickup | (CKT 510) Chassis Harness, 20 cm (8 in) from the breakout for the fuel pump and sender assembly | Harness Routing Views | -- |
| S425 - Export | (CKT 2109) License lamp harness, between the breakouts for the LH and center license lamps, 16.5 cm (6.5 in) from the LH license lamp breakout | Harness Routing Views | -- |
| S426-Export | (CKT 1650) License lamp harness, between the breakouts for the LH and center license lamps, 6.5 cm (2.6 in) from the LH license lamp breakout | Harness Routing Views | -- |
| S427 - Crew Cab Pickup | (CKT 1850) LR body harness | Harness Routing Views | -- |
| S427 - Utility | (CKT 1350, CKT 1450) LR body harness, 7 cm (2.8 in) below the breakout to the left tail lamp connector C403 | Harness Routing Views | -- |
| S501 | (CKT 1850) LH door harness, between breakout to door speaker and door lock and side window switch | Harness Routing Views | -- |
| S502 | (CKT 2409) LH door harness, between breakout to door speaker and door lock and side window switch | Harness Routing Views | -- |
| S601 | (CKT 1050) RH door harness | Harness Routing Views | -- |
| Splice Pack SP100 | (CKT 150) Forward lamp harness, to the LR of the radiator support | Harness Routing Views | -- |
| Splice Pack SP101 | (CKT 250) Forward lamp harness, to the right inside of the radiator support | Harness Routing Views | -- |

| | | | |
|-----------------------------|--|---------------------------------------|----|
| Splice Pack SP200 | (CKT 41, CKT 241, CKT 341, CKT 817) Strapped to the body harness, under carpet in the RH dash area about 30cm (12 in) from the right kick panel | Harness Routing Views | -- |
| Splice Pack SP201 | (CKT 1132, CKT 1049, CKT 1133, CKT 1122, CKT 1128, CKT 1036, CKT 1048, CKT 1127, CKT 1038, CKT 1037) Strapped to the body harness, | Harness Routing Views | -- |
| Splice Pack SP202 | (CKT 379, CKT 1850) Strapped to the body harness, at the left center of the IP | Harness Routing Views | -- |
| Splice Pack SP203 | (CKT 1050) I/P harness, on the I/P, in front of the ashtray, strapped to the body harness | Harness Routing Views | -- |
| Splice Pack SP204 | (CKT 584, CKT 1414, CKT 1415, CKT 1050) Strapped to the body harness, in the center front of the I/P, to the left of SP200 | Harness Routing Views | -- |
| Splice Pack SP400 - Pickup | (CKT 1324, CKT 2509, CKT 2609) Tail lamp harness, on the center inside of the rear crossmember | Harness Routing Views | -- |
| Splice Pack SP401 | (CKT 2250) Tail lamp harness, in the rear of the right side frame rail | Harness Routing Views | -- |
| Splice Pack SP402 | (CKT 1750) Tail lamp harness, in the rear of the left side frame rail | Harness Routing Views | -- |
| Splice Pack SP423 - Utility | (CKT 470, CKT 1650, CKT 2109) Chassis harness, on top of the rear crossmember | Harness Routing Views | -- |

< - Back

Forward ->

Document ID# 767538
2002 Chevrolet Blazer - 4WD

Print