


MOUNTAIN WEST SEAT COVERS

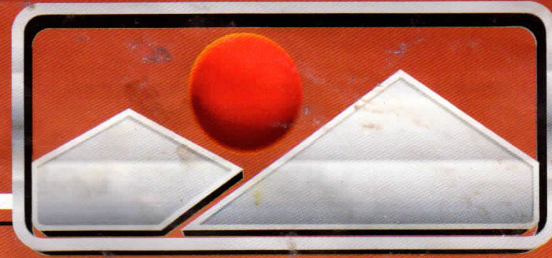

Aztec 40/20/40



A2 - 02-221

DELUXE PICKUP TRUCK SEAT COVER

- Custom Fit
- Easy Installation
- Durable Mtn. West Material
- Variety of Colors
- Machine Washable
- Winter Warm / Summer Cool

ONE PIECE

- A1-02-220
- V1-03-222

TWO PIECE

- A2-02-221
- V2-03-223

SUPER DELUXE

- PT2S-02-228
- Special




AZTEC TAUPE 3A
 Fabric Color Style
 1999 CHEVY S-10
 Year Make Model

MOUNTAIN WEST SEAT COVERS
 P.O. Box 6037
 Logan, UT, 84341-6037

Installation Instructions

One Piece Cover


- From the string provided cut 6 pieces 1 yd. each.
- Tie one string to each loop running in a row across the center of the seat cover on the reverse side.
- Position the top of the seat cover on the backrest, fitting the top corners.
- Pull seat belts through the seat belt openings.
- Pull the strings through the space between backrest and seat.
- Tie the strings to the loops at the top of backrest.

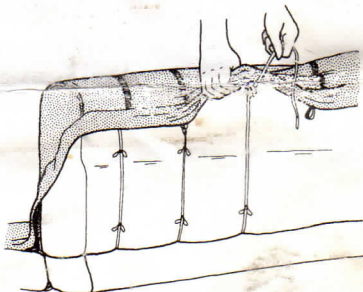

- Tie a string to each of the loops located under the front pocket. Secure each of these to a spring under the seat cushion. Or tie to the backrest strings.


Two Piece Cover

- From the string provided cut 6 pieces 1 yd. each.
- Tie one string to each loop along the back side of the bottom cover.
- Position the bottom in place, pull seat belts through the seat belt opening, and pull strings through the space between backrest and seat.
- Anchor the strings to any support under the seat, then bring forward and tie to the loops under front pockets.
- Fold corners underneath themselves and tie down the sides.

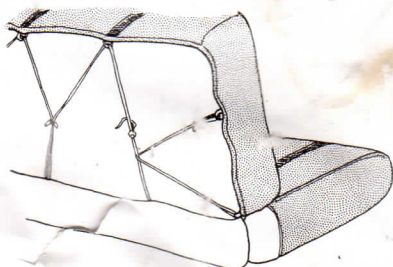


Hook & Loop Elastic Installation

- Start with installing the bottoms.
- Center the seat cover.
- Pull poly skirt bottom around the corners.
- Tuck fabric through the crack of the seat.
- Pull poly skirt elastic through loop and to the center until they meet each other and fasten together. (A attaches to B)
- Pull the long elastics (C and D) down under the seat and fasten to seat springs or side tracks. Be sure not to attach to seat wires that control side handles to slide seats forward and backwards if possible.
- Installing the backrest:
- Center the top.

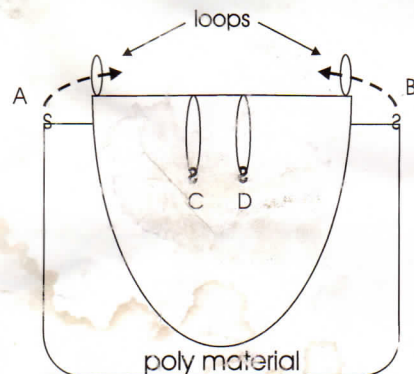

- Pull corners evenly into place.
- Pull A, B, C, and D through crack in the seat and secure to the corresponding elastic loops at the top of the backrest. Remember to follow the same instructions as step #6.

TOP OF BACKREST

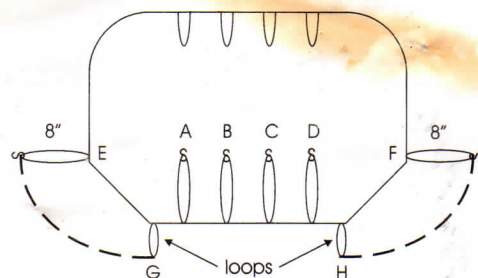

- Now pull E and F around back and hook G and H loops.

CAUTION

Keep strings and elastics clear of the seat adjustment mechanism. Strings may be tied directly to the material by spreading the weave but **DO NOT CUT THE BLANKETS.**