

Installation Kit

IMPORTANT

Before starting, compare items on your invoice with items received. Carefully check through packaging material. If an item is missing, please call:

Crutchfield Technical Assistance at 1-800-955-9094

120 99-3300

Chevrolet/GMC
Oldsmobile/Isuzu



DIN Assembly

See next page if installing a shaft receiver.

Revision 09/14/01


Page 1 of 2

1. Using a utility knife, cut out **shaft supports** in **receiver mounting bracket** to create the DIN opening as shown (Figure 1).
2. Cut out shaft supports in **insert ring** (Figure 2).
3. Place insert ring in mounting bracket and slide **DIN sleeve** into opening. Secure sleeve to assembly by bending the **securing tabs** as shown (Figure 3).
4. Slide receiver into opening.
5. Install receiver assembly following instructions in the *Mastersheet* for your particular vehicle.

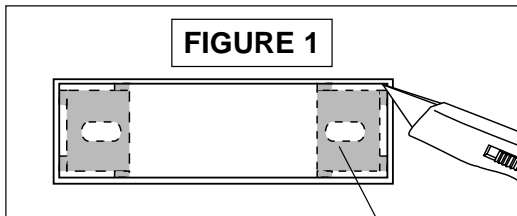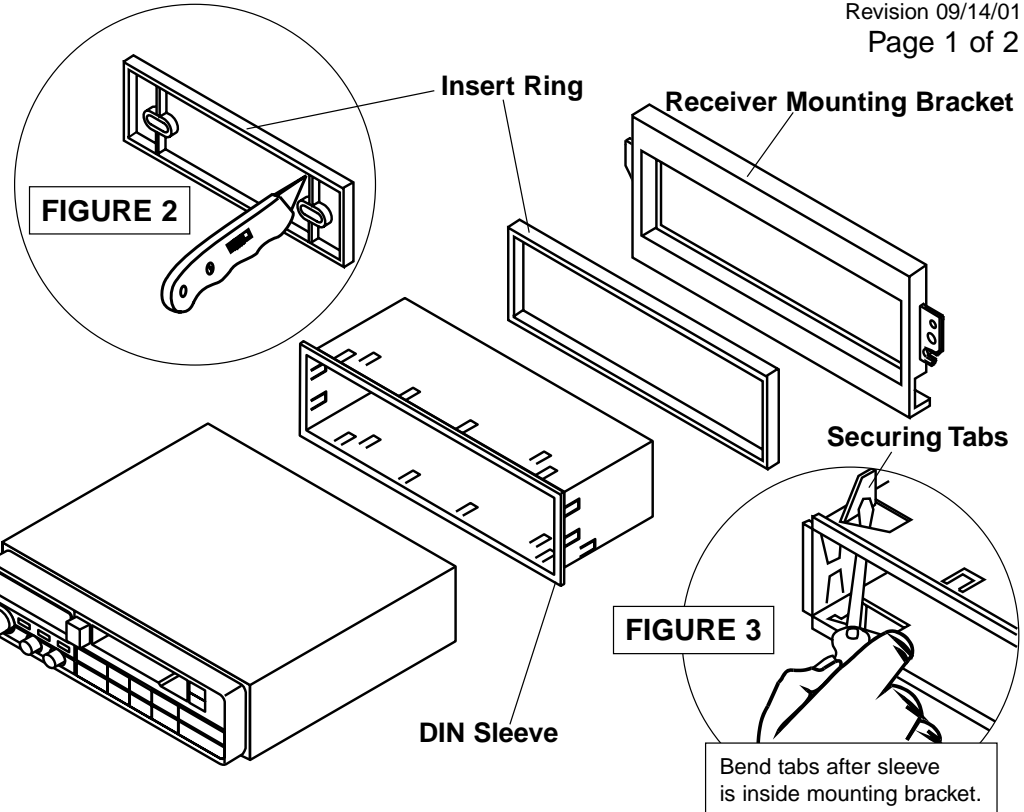


Tools Required


Flat Blade
Screwdriver

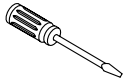


Utility Knife

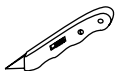

Parts
Supplied:

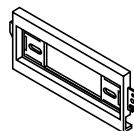

Mounting
Bracket

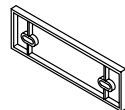

Insert Ring



* 1 2 0 9 9 3 3 0 0 *



1-800-955-9094
Technical Service

CRUTCHFIELD®

Copyright 2001 Crutchfield Corporation

Installation Kit



120 99-3300

Chevrolet/GMC
Oldsmobile/Isuzu

Shaft Assembly

1. Choose the proper **spacers** (supplied with your order) to allow receiver nosepiece to extend 1/8" to 1/4" beyond face of **receiver mounting bracket** (see inset).
2. Assemble and secure receiver, **insert ring** and **face plate** to mounting bracket with spacers and **shaftnuts** as shown.
3. Attach receiver **control knobs**.
4. Install receiver assembly following instructions in the *Mastersheet* for your particular vehicle.

Page 2 of 2

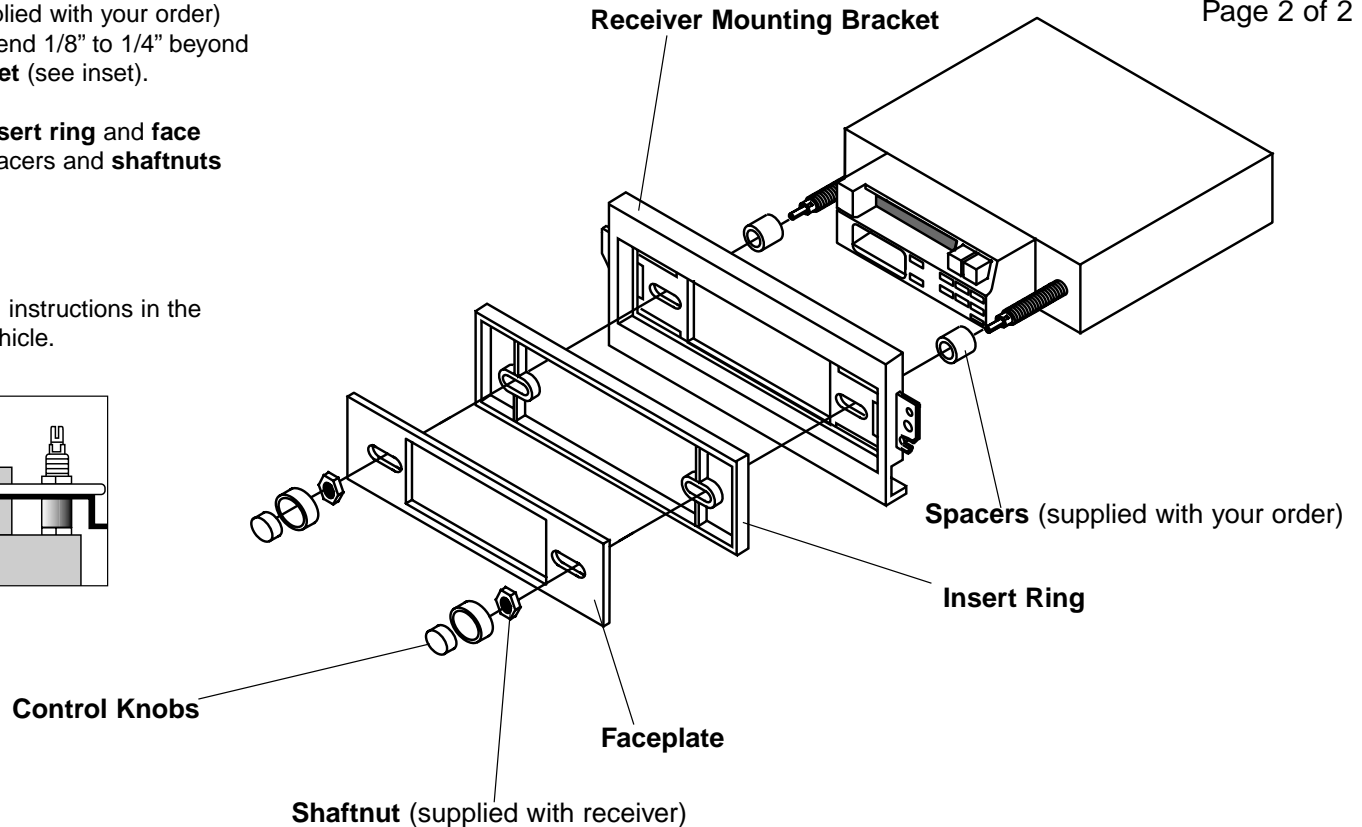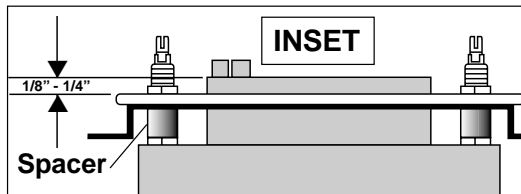

Tools Required



Deep Socket
(size depends
upon receiver)

