Service Information Page 1 of 14



Document ID# 512238 2000 Chevrolet/Geo Blazer - 4WD

Print


Intake Manifold Replacement Upper

Removal Procedure

Important

The upper intake does not have to be removed to remove the lower intake manifold.


- 1. Remove the air cleaner outlet duct from the throttle body. Refer to <u>Air Cleaner Outlet Duct Replacement</u> In Engine Controls.
- 2. Disconnect the accelerator control cable from the throttle shaft and the accelerator cable bracket. Refer to Accelerator Controls Cable Replacement in Engine Controls.
- 3. Disconnect the cruise control cable, if equipped from the throttle shaft and the accelerator cable bracket. Refer to Cruise Control. Cable Replacement in Cruise Control.

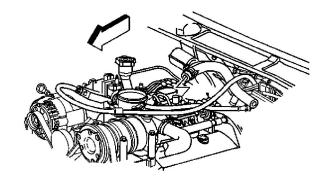




- 4. Disconnect the vacuum hose from the intake manifold for the vacuum tank.
- 5. Remove the power brake booster vacuum hose.

Service Information Page 2 of 14

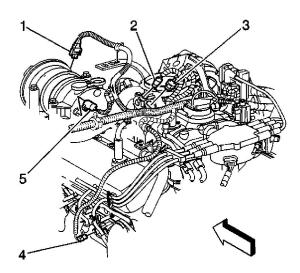



- 6. Disconnect the following electrical connectors:
 - i The A/C compressor clutch (1)
 - The A/C compressor cutoff switch (5), if equipped
 - The throttle position (TP) sensor (2)
 - i The idle air control (IAC) motor (3)

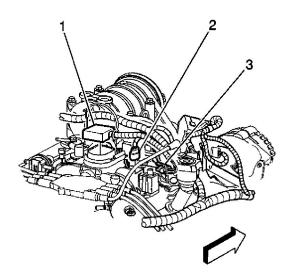



- 7. Disconnect the following electrical connectors:
 - The fuel meter body assembly (1)
 - i The manifold absolute pressure (MAP) sensor (3)
 - The EVAP canister purge solenoid valve (2)
- 8. Remove the engine wire harness clip from the accelerator cable bracket.
- 9. Move the engine wiring harness aside.