


SIR Connector End Views


Supplemental Inflatable Restraint Front End Discriminating Sensor, LH Connector

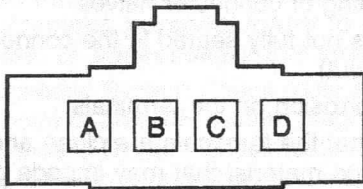

338009

Connector Part Information		<ul style="list-style-type: none"> • 12191660 • 4 Way F 280 Series Sealed (YEL) 	
Pin	Wire Color	Circuit No.	Function
A	YEL	1834	Forward Sensor Signal
B	YEL	1834	Forward Sensor Signal
C	BLK/WHT	1851	Ground
D	BLK/WHT	1851	Ground


Supplemental Inflatable Restraint Front End Discriminating Sensor, RH Connector

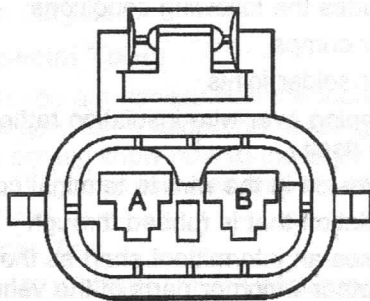

362744

Connector Part Information		<ul style="list-style-type: none"> • 12176650 • 2 Way F 280 Series Sealed (YEL) 	
Pin	Wire Color	Circuit No.	Function
A	YEL	1834	Forward Sensor Signal
B	BLK/WHT	1851	Ground


Supplemental Inflatable Restraint IP Module Switch Connector

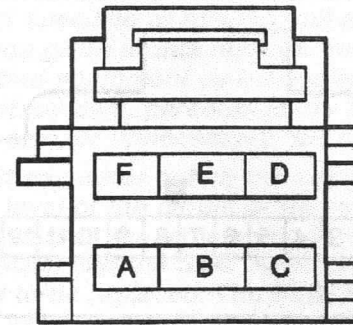

362753

Connector Part Information		<ul style="list-style-type: none"> • 15305286 • 6 Way F Clip and Strap Assembly (YEL) 	
Pin	Wire Color	Circuit No.	Function
A	TAN/BLK	371	Defeat Switch Signal - Passenger
B	YEL	1139	Fuse Output Ignition
C	PPL/WHT	1382	Dimming Signal
D	GRY	1220	Fuse Output
E	PNK	353	Defeat Indicator Lamp Output - Passenger
F	BLK	1050	Ground

Supplemental Inflatable Restraint Sensing and Diagnostic Module Connector

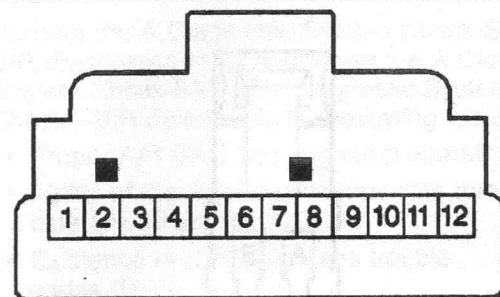

362757

Connector Part Information		<ul style="list-style-type: none"> • 15317746 • 12 Way F Micro Pack 100 Series (YEL) 	
Pin	Wire Color	Circuit No.	Function
1	WHT/BLK	1403	Inflator Feed - Passenger
2	WHT	347	Inflator Feed Drivers
3	DK GRN	348	Inflator Output Drivers
4	DK GRN/WHT	1404	Inflator Output Passengers
5	TAN	800	Serial Data Signal