

< - Back

Forward ->


Document ID# 658169
2001 Chevrolet/Geo Blazer - 4WD

Print

Entertainment Connector End Views


Table 1: [Audio Amplifier Connector C1](#)**Table 2:** [Audio Amplifier Connector C2](#)**Table 3:** [Radio \(All Except Bravada\) Connector C1](#)**Table 4:** [Radio \(All Except Bravada\) Connector C2](#)**Table 5:** [Radio \(All Except Bravada\) Connector C3 \(w/ Remote Playback Device\)](#)**Table 6:** [Radio \(Bravada\)](#)**Table 7:** [Rear Seat Audio \(RSA\) Controller \(Envoy Only\)](#)**Table 8:** [Remote Playback Device - CD or Cassette Player](#)**Table 9:** [Speaker - LF \(Pickup\)](#)**Table 10:** [Speaker - LF \(Utility\)](#)**Table 11:** [Speaker - LF Door](#)**Table 12:** [Speaker - LR \(2-Door Utility\)](#)**Table 13:** [Speaker - LR Door \(4-Door Utility\)](#)**Table 14:** [Speaker - RF \(Pickup\)](#)**Table 15:** [Speaker - RF \(Utility\)](#)**Table 16:** [Speaker - RF Door](#)**Table 17:** [Speaker - RR \(2-Door Utility\)](#)**Table 18:** [Speaker - RR Door \(4-Door Utility\)](#)**Table 19:** [Steering Wheel Controls Connector C1](#)**Table 20:** [Steering Wheel Controls Connector C2](#)

Audio Amplifier Connector C1

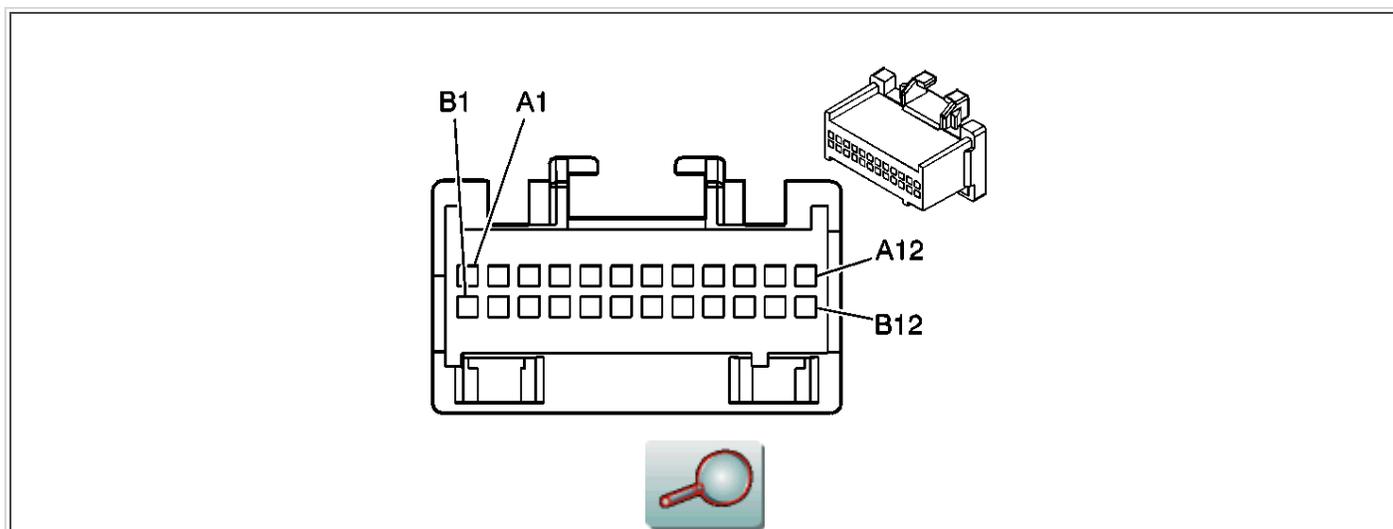

Connector Part Information		<ul style="list-style-type: none"> • 12110088 • 24-Way F Micro-Pack 100 Series (LT GRY) 	
Pin	Wire Color	Circuit No.	Function
A1	DK GRN	145	Antenna Relay Coil Supply Voltage
A2	BRN/WHT	367	Remote Radio Left Audio Signal (Envoy Only)
A3	BLK/WHT	372	Remote Radio Audio Output (Envoy Only)
A4	DK GRN/WHT	368	Remote Radio Right Audio Signal (Envoy Only)
A5	YEL	116	Left Rear Speaker Output (-)
A6	BRN	199	Left Rear Speaker Output (+)
A7	PPL	1952	Right Front Tweeter Speaker Output (-)
A8	LT GRN	1852	Right Front Tweeter Speaker Output (+)
A9	DK BLU	46	Right Rear Speaker Output (+)
A10	LT BLU	115	Right Rear Speaker Output (-)
A11	YEL	1956	Left Front Tweeter Speaker Output (-)
A12	BLK	1856	Left Front Tweeter Speaker Output (+)
B1	BARE	2011	Left Front Audio Drain Wire
B2	BARE	2012	Left Front Audio Drain Wire
B3	BARE	514	Ground (Envoy Only)
B4	PNK	314	Radio On Signal (Envoy Only)
B5	TAN	511	Left Front Low Level Audio Signal
B6	LT GRN	512	Right Front Low Level Audio Signal
B7	BRN	599	Left Rear Low Level Audio Signal
B8	DK BLU	546	Right Rear Low Level Audio Signal
B9	ORN/BLK	1546	Front Low Level Audio Signal (-)
B10	DK GRN/WHT	1547	Rear Low Level Audio Signal (-)
B11-B12	--	--	Not Used


Audio Amplifier Connector C2

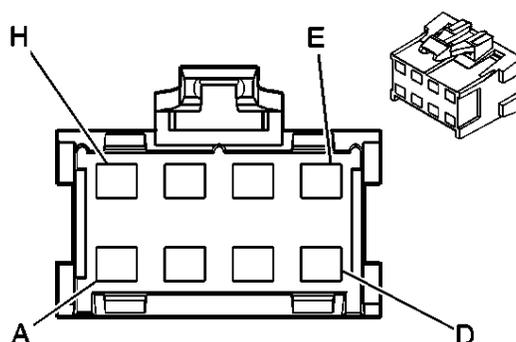



Connector Part Information		<ul style="list-style-type: none"> • 12110626 • 8-Way F Metri-Pack 280 Series, Flex Lock (GRY) 	
Pin	Wire Color	Circuit No.	Function
A	BLK	1050	Ground
B	--	--	Not Used
C	TAN	201	Left Front Speaker Output (+)
D	LT GRN	200	Right Front Speaker Output (+)
E	DK GRN	117	Right Front Speaker Output (-)
F	GRY	118	Left Front Speaker Output (-)
G	--	--	Not Used
H	ORN	1340	Battery Positive Voltage


Radio (All Except Bravada) Connector C1

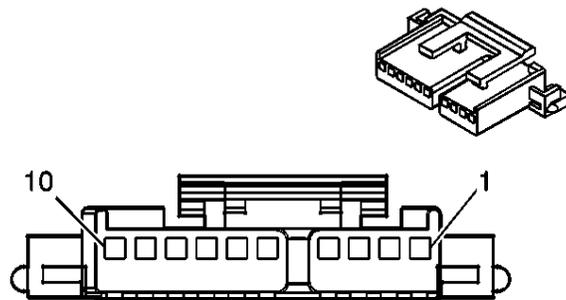

Connector Part Information		<ul style="list-style-type: none"> • 12047531 • 10-Way F Micro-Pack 100 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
1	GRY	118	Left Front Speaker Output (-) (w/o Amp)
1	TAN	511	Left Front Low Level Audio Signal (w/ Amp)
2	TAN	201	Left Front Speaker Output (+) (w/o Amp)
2	ORN/BLK	1546	Front Low Level Audio Signal (-) (w/ Amp)
3	DK GRN	117	Right Front Speaker Output (-) (w/o Amp)
3	LT GRN	512	Right Front Low Level Audio Signal (w/ Amp)
4	LT GRN	200	Right Front Speaker Output (+) (w/o Amp)
4	BARE	1573	Front Audio Drain Wire (w/ Amp)
5	BLK	1050	Ground

6	PPL/WHT	1382	LED Dimming Signal
7	GRY	1220	Instrument Panel Lamp Fuse Supply Voltage - 2
8	--	--	Not Used (w/o Amp)
8	DK GRN	145	Antenna Relay Coil Supply Voltage (w/ Amp)
9	DK GRN	1301	RAP Fuse Supply Voltage
10	ORN	340	Battery Positive Voltage

Radio (All Except Bravada) Connector C2

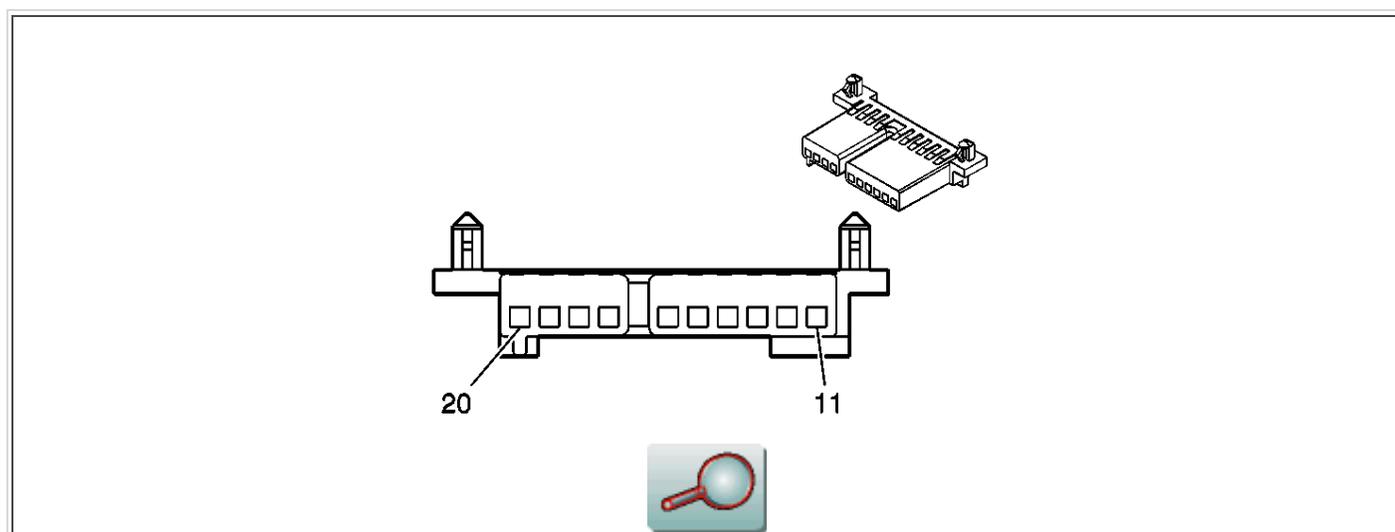


Connector Part Information

- 12065785
- 10-Way F Micro-Pack 100 Series (GRY)

Pin	Wire Color	Circuit No.	Function
11	--	--	Not Used
12	PNK	314	Radio On Signal (Envoy Only)
13	LT GRN	1011	Remote Radio Control Signal (Envoy Only)
14	--	--	Not Used (Pick-up)
14	DK BLU	1796	Steering Wheel Controls Signal (Utility)
15	DK GRN	835	Entertainment and Comfort Serial Data (Envoy Only)
16	DK GRN	389	Vehicle Speed Signal
17	LT BLU	115	Speaker Return - Right Rear (w/o Amp)
17	DK BLU	546	Right Rear Speaker Output (-) (w/ Amp)
18	DK BLU	46	Right Rear Speaker Output (+) (w/o Amp)
18	DK GRN/WHT	1547	Rear Low Level Audio Signal (w/ Amp)
19	YEL	116	(w/o Amp)
19	BRN	599	Left Rear Low Level Audio Signal (w/ Amp)
20	BRN	199	Left Rear Speaker Output (+) (w/o Amp)
20	BARE	1574	Rear Audio Drain Wire (w/ Amp)

Radio (All Except Bravada) Connector C3 (w/ Remote Playback Device)

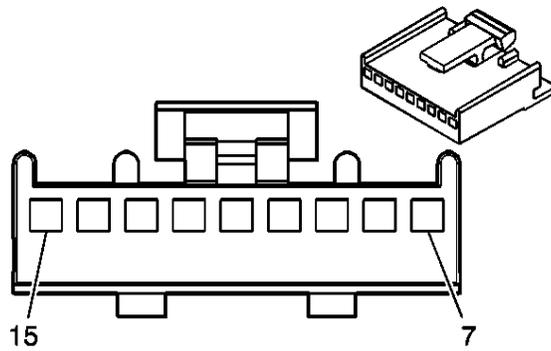


Connector Part Information

- 12064980
- 9-Way F Micro-Pack 100 Series (BLK)


Pin	Wire Color	Circuit No.	Function
7	LT BLU	1405	Remote Playback Device Audio Common Signal
8	GRY	1220	Instrument Panel Lamp Fuse Supply Voltage - 2 (Except Envoy)
9	BARE	2011	Left Front Audio Drain Wire
10	DK GRN/WHT	368	Remote Radio Right Audio Signal
11	BRN/WHT	367	Remote Radio Left Audio Signal
12	BLK/ORN	372	Remote Radio Audio Output (-) (Except Envoy)
12	BLK/WHT	372	Remote Radio Audio Output (-) (Envoy)
13	BLK	1050	Ground
14	DK GRN	835	Entertainment and Comfort Serial Data
15	ORN	340	Battery Positive Voltage

Radio (Bravada)

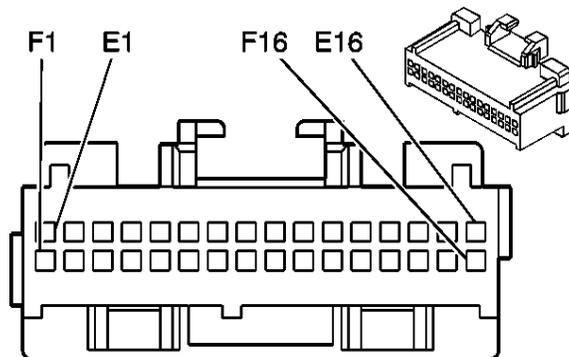

Connector Part Information		<ul style="list-style-type: none"> • 12110115 • 32-Way F Micro-Pack 100 Series (BLU) 	
Pin	Wire Color	Circuit No.	Function
E1	DK GRN	835	Entertainment and Comfort Serial Data (w/ Remote Tape/CD Player)
E2	--	--	Not Used
E3	LT BLU	1405	Remote Playback Device Audio Common Signal (w/ Remote Tape/CD Player)
E4-E5	--	--	Not Used
E6	DK BLU	1796	Steering Wheel Controls Signal (w/ Remote Tape/CD Player)
E7-E8	--	--	Not Used
E9	BLK/WHT	372	Remote Radio Audio Output (w/ Remote Tape/CD Player)
E10	BRN/WHT	367	Remote Radio Left Audio Signal (w/ Remote Tape/CD Player)
E11	DK GRN/WHT	368	Remote Radio Right Audio Signal (w/ Remote Tape/CD Player)
E12	BRN	199	Left Rear Speaker Output (+) (w/o Amp)
E12	BRN	599	Left Rear Low Level Audio Signal (w/ Amp)
E13	YEL	116	Left Rear Speaker Output (-) (w/o Amp)
E13	BARE	1574	Rear Audio Drain Wire (w/ Amp)
E14	DK GRN	117	Right Front Speaker Output (-) (w/o Amp)
E14	DK GRN/WHT	1547	Rear Low Level Audio Signal (-) (w/ Amp)
E15	LT GRN	200	Right Front Speaker Output (+) (w/o Amp)
E15	DK BLU	546	Right Rear Low Level Audio Signal (w/ Amp)
E16	BLK	1050	Ground
F1	ORN	340	Battery Positive Voltage
F2	DK GRN	1301	RAP Fuse Supply Voltage
F4	GRY	1220	Instrument Panel Lamps Fuse Supply Voltage - 2
F5	PPL/WHT	1382	Led Dimming Signal
F6-F10	--	--	Not Used
F11	BARE	701	Drain Wire (w/ Remote Tape/CD Player)
F12	TAN	201	Left Front Speaker Output (+) (w/o Amp)
F12	TAN	511	Left Front Low Level Audio Signal (w/ Amp)
F13	GRY	118	Left Front Speaker Output (w/o Amp)
F13	BARE	1573	Front Audio Drain Wire (-)
F14	LT BLU	115	Right Rear Speaker Output (-) (w/o Amp)
F14	ORN/BLK	1546	Front Low Level Audio Signal (-)
F15	DK BLU	46	Right Rear Speaker Output (+) (w/o Amp)
F15	LT GRN	512	Right Front Low Level Audio Signal (w/ Amp)
F16	--	--	Not Used

Rear Seat Audio (RSA) Controller (Envoy Only)

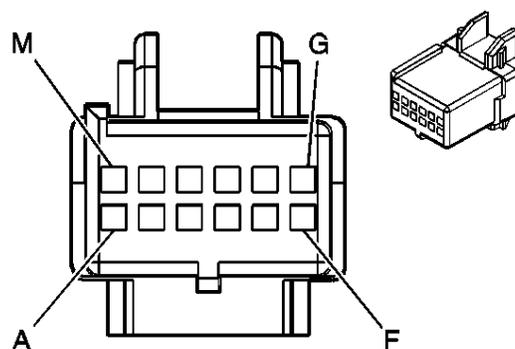


Connector Part Information

- 12064799
- 12-Way F Micro-Pack 100 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	DK GRN	1301	RAP Fuse Supply Voltage
B	BRN	2409	Interior Park Lamps Supply Voltage
C	BLK	1050	Ground
D	PNK	314	Radio On Signal
E-H	--	--	Not Used
J	DK GRN/WHT	368	Remote Radio Right Audio Signal
K	BLK/WHT	372	Remote Radio Audio Output (-)
L	BRN/WHT	367	Remote Radio Left Audio Signal
M	LT GRN	1011	Remote Radio Control Signal

Remote Playback Device - CD or Cassette Player

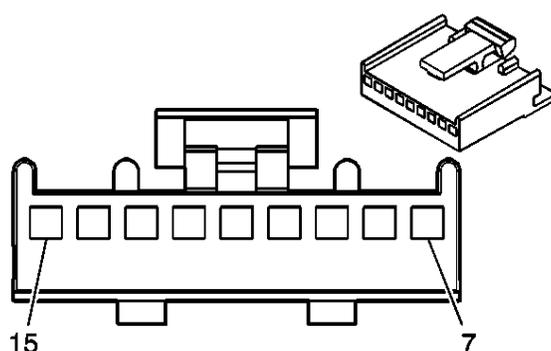


Connector Part Information		<ul style="list-style-type: none"> • 12064980 • 9-Way F Micro-Pack 100 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
7	LT BLU	1405	Remote Playback Device Audio Common Signal
8	GRY	1220	Instrument Panel Lamp Fuse Supply Voltage - 2 (Except Envoy and Bravada)
9	BARE	514	Ground (Except Bravada)
9	BARE	701	Drain Wire (Bravada Only)
10	DK GRN/WHT	2011	Left Front Audio Drain Wire
11	BRN/WHT	367	Remote Radio Left Audio Signal
12	BLK/ORN	372	Remote Radio Audio Output (-) (Except Envoy)
12	BLK/WHT	372	Remote Radio Audio Output (-) (Envoy Only)
13	BLK	1050	Ground
14	DK GRN	835	Entertainment and Comfort Serial Data
15	ORN	340	Battery Positive Voltage

Speaker - LF (Pickup)

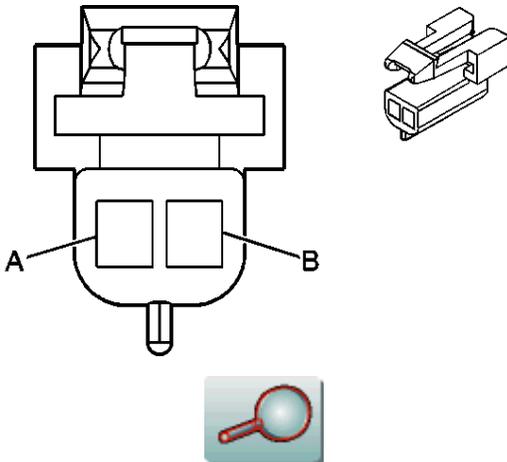			
<p style="text-align: center;"></p>			
Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-)
B	TAN	201	Left Front Speaker Output (+)


Speaker - LF (Utility)

--	--	--	--

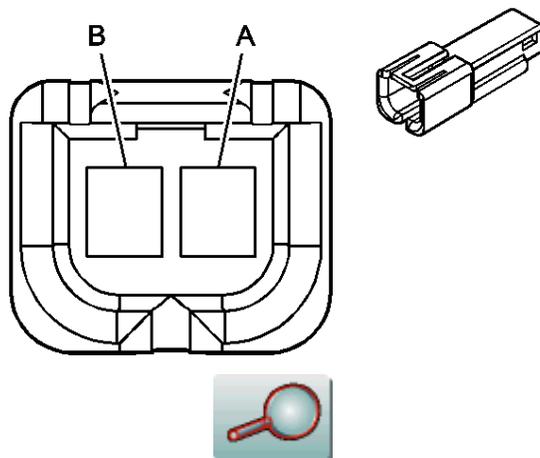**Connector Part Information**

- 12064778
- 2-Way M Metri-Pack 150 Series (GRN)


Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-) (w/o UQ3)
A	GRY	1956	Left Front Tweeter Speaker Output (-) (w/ UQ3)
B	TAN	201	Left Front Speaker Output (+) (w/o UQ3)
B	TAN	1856	Left Front Tweeter Speaker Output (+) (w/ UQ3)

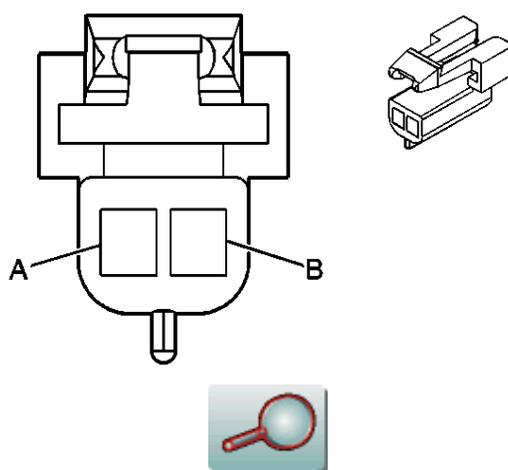Speaker - LF Door**Connector Part Information**

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

Speaker - LR (2-Door Utility)

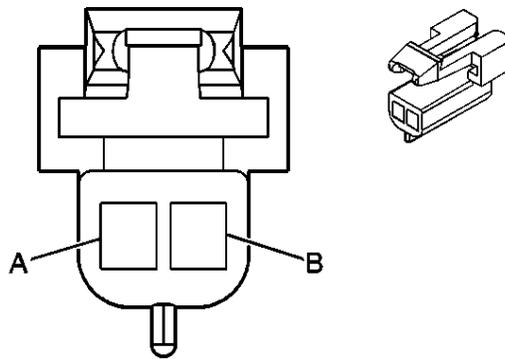


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

Speaker - LR Door (4-Door Utility)

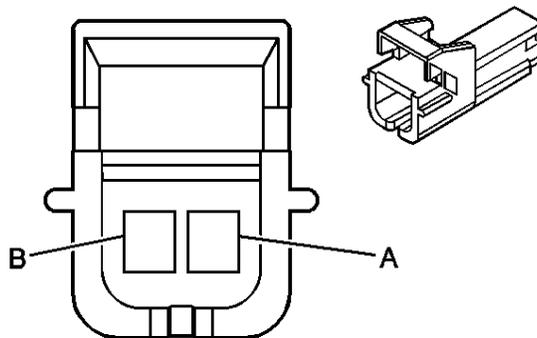


Connector Part Information

- 12052833
- 2-Way M Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

Speaker - RF (Pickup)

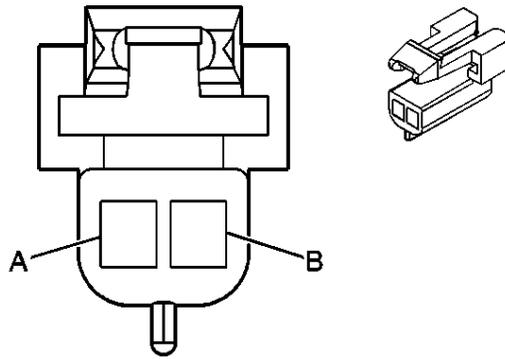**Connector Part Information**

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	PPL	117	Right Front Speaker Output (-)
B	LT GRN	200	Right Front Speaker Output (+)

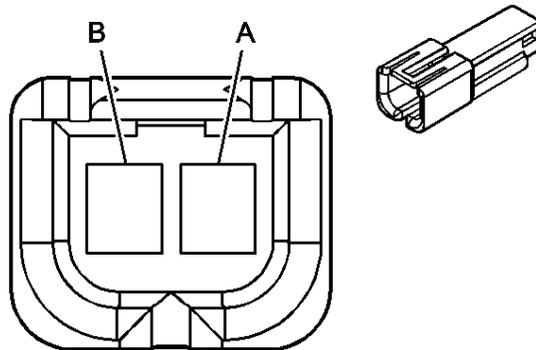Speaker - RF (Utility)**Connector Part Information**

- 12064778
- 2-Way M Metri-Pack 150 Series (GRN)

Pin	Wire Color	Circuit No.	Function
A	PPL	117	Right Front Speaker Output (-) (w/o UQ3)
A	PPL	1952	Right Front Tweeter Speaker Output (-) (w/ UQ3)
B	LT GRN	200	Right Front Speaker Output (+) (w/o UQ3)
B	LT GRN	1852	Right Front Tweeter Speaker Output (+) (w/ UQ3)

Speaker - RF Door

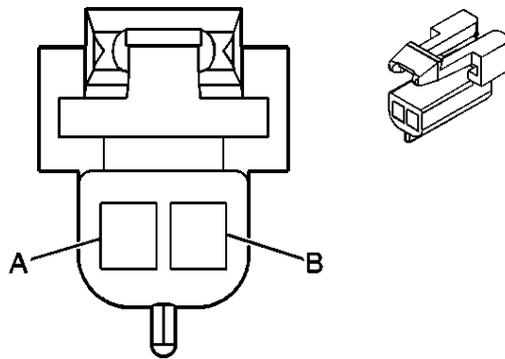


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Right Rear Speaker Output (-)
B	DK BLU	46	Right Rear Speaker Output (+)

Speaker - RR (2-Door Utility)

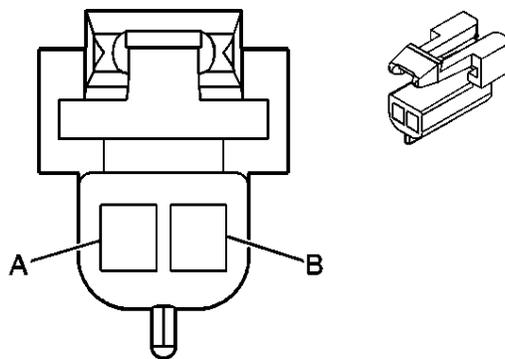


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Right Rear Speaker Output (-)
B	DK BLU	46	Right Rear Speaker Output (+)

Speaker - RR Door (4-Door Utility)

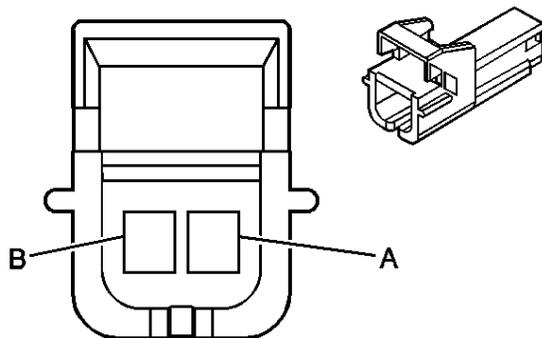


Connector Part Information

- 12052833
- 2-Way M Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

Steering Wheel Controls Connector C1

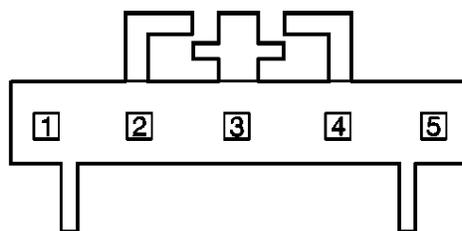


Connector Part Information

- 50579405
- 5-Way Molex Connector (BLK)

Pin	Wire Color	Circuit No.	Function
1	LT GRN	1011	Remote Radio Control Signal
2	BLK	152	DIC Gauge LED Control
3	GRY	949	Steering Wheel Illumination - Volume Controls - Feed
4	WHT	--	Volume Controls - Ground
5	YEL	43	Accessory Voltage

Steering Wheel Controls Connector C2

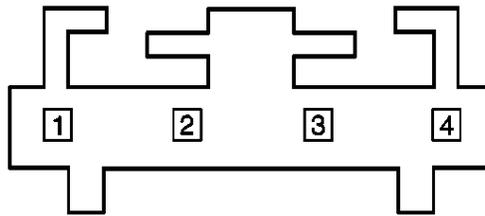**Connector Part Information**

- 50579404
- 4-Way Molex Connector (BLK)

Pin	Wire Color	Circuit No.	Function
1	WHT	--	Seek Up/Down Preset Feed
2	LT GRN	1011	Remote Radio Control Signal
3	GRY	949	Steering Wheel Seek Up/Down Preset Illumination
4	BLK	152	DIC Gauge LED Control

<- Back

Forward ->

Document ID# 658169
2001 Chevrolet/Geo Blazer - 4WD

Print