

< - Back

Forward ->

Document ID# 358687
1999 Chevrolet/Geo Blazer - 4WD

Print

Entertainment Connector End Views

Table 1: [Amplifier Connector C1](#)

Table 2: [Amplifier Connector C2](#)

Table 3: [Door Speaker, LH](#)

Table 4: [Door Speaker, RH](#)

Table 5: [Door Speaker, LH Rear \(4-Door Utility\)](#)

Table 6: [Door Speaker, RH Rear \(4-Door Utility\)](#)

Table 7: [IP Speaker, LH \(Base\)](#)

Table 8: [IP Speaker, LH \(Uplevel\)](#)

Table 9: [IP Speaker, RH \(Base\)](#)

Table 10: [IP Speaker, RH \(Uplevel\)](#)

Table 11: [Radio \(All Except Bravada\) Connector C1](#)

Table 12: [Radio \(All Except Bravada\) Connector C2](#)

Table 13: [Radio \(All Except Bravada\) Connector C3 \(w/ Remote Audio Player\)](#)

Table 14: [Radio w/ ATC CD \(Bravada\)](#)


Table 15: [Rear Seat Audio Control \(Envoy Only\)](#)

Table 16: [Remote Audio Player](#)

Table 17: [Speaker, LH Rear \(2-Door Utility\)](#)

Table 18: [Speaker, RH Rear \(2-Door Utility\)](#)

Amplifier Connector C1

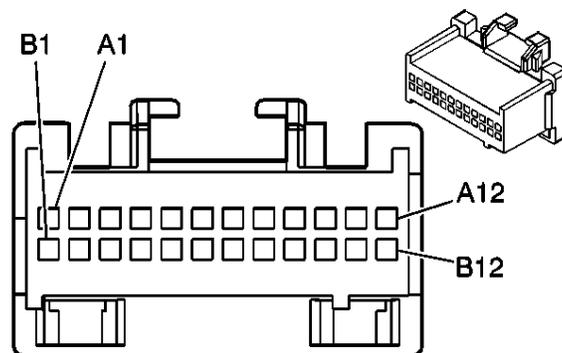


Connector Part Information

- 12110088
- 24-Way F Micro-Pack 100 Series (LT GRV)


Pin	Wire Color	Circuit No.	Function
A1	DK GRN	145	Power Antenna Relay Feed - Coil
A2	BRN/WHT	367	Remote Radio Signal - Left Audio (Envoy Only)
A3	BLK/WHT	372	Remote Radio Signal - Left Audio (Envoy Only)
A4	DK GRN/WHT	368	Remote Radio Signal - Right Audio (Envoy Only)
A5	YEL	116	Speaker Return - Left Rear
A6	BRN	199	Speaker Feed - Left Rear
A7	PPL	1952	Power Door Relay Feed - Lock Coil 2
A8	LT GRN	1852	Speaker Feed - Right Front - Tweeter
A9	DK BLU	46	Ignition Switch Output - Accessory 6
A10	LT BLU	115	Speaker Return - Right Rear
A11	YEL	1956	Speaker Return - Left Front - Tweeter
A12	BLK	1856	--
B1	BARE	2011	Drain Wire Return - Left Front Audio
B2	BARE	2012	Drain Wire Return - Left Front Audio
B3	BARE	514	Drain Wire Return - (Envoy Only)
B4	PNK	314	Radio Signal On - (Envoy Only)
B5	TAN	511	Audio Signal - Left Front - Low Level
B6	LT GRN	512	Audio Signal - Right Front - Low Level
B7	BRN	599	Audio Signal - Left Rear - Low Level
B8	DK BLU	546	Audio Signal - Right Rear - Low Level
B9	ORN/BLK	1546	Audio Return - Front - Low Level
B10	DK GRN/WHT	1547	Audio Return - Rear - Low Level
B11-B12	--	--	Not Used

Amplifier Connector C2

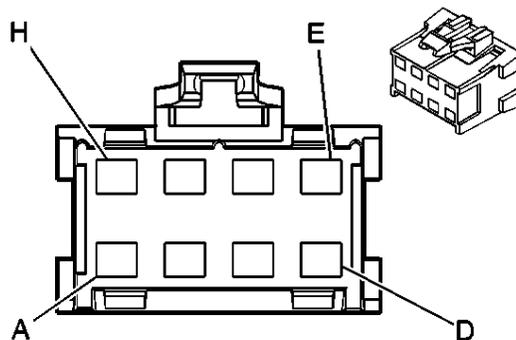


Connector Part Information

- 12110626
- 8-Way F Metri-Pack 280 Series, Flex Lock (GRY)

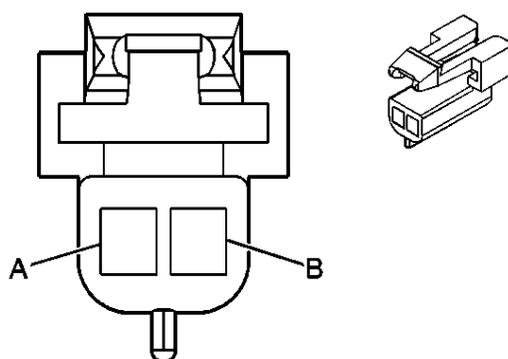Door Speaker, LH**Connector Part Information**

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	YEL	116	Speaker Return - Left Rear
B	BRN	199	Speaker Feed - Left Rear

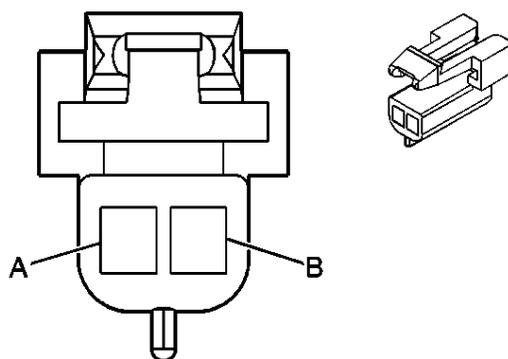Door Speaker, RH**Connector Part Information**

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Speaker Return - Right Rear
B	DK BLU	46	Speaker Feed - Right Rear

Door Speaker, LH Rear (4-Door Utility)

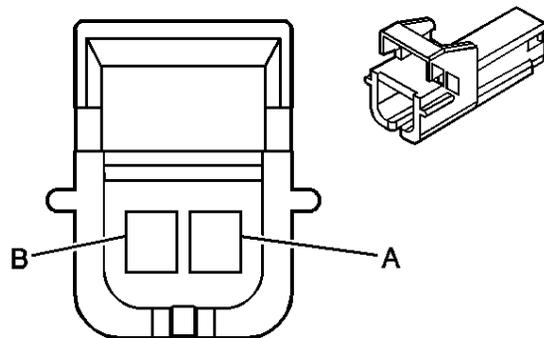
Connector Part Information

- 12052833
- 2-Way M Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	YEL	116	Speaker Return - Left Rear
B	BRN	199	Speaker Feed - Left Rear

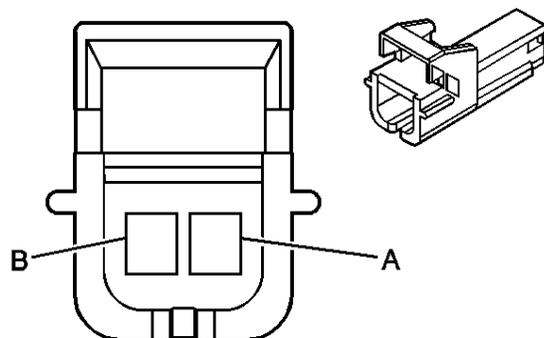Door Speaker, RH Rear (4-Door Utility)

Connector Part Information

- 12052833
- 2-Way M Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Speaker Return - Right Rear
B	BRN	199	Speaker Feed - Right Rear

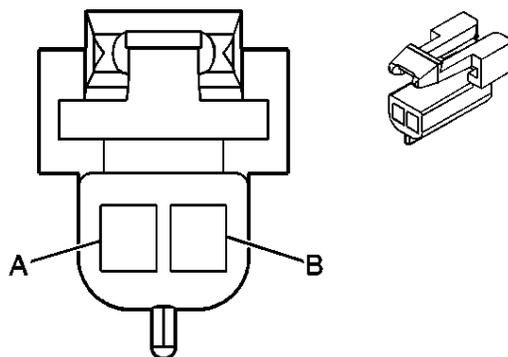IP Speaker, LH (Base)




Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	GRY	118	Speaker Return - Left Front
B	TAN	201	Speaker Feed - Left Front

IP Speaker, LH (Uplevel)

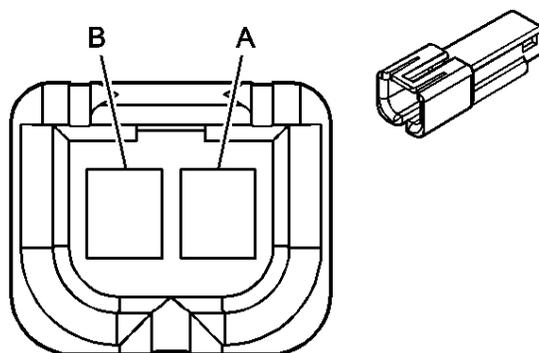


Connector Part Information

- 12064778
- 2-Way M Metri-Pack 150 Series (GRN)

Pin	Wire Color	Circuit No.	Function
A	YEL	118	Speaker Return - Left Front
B	BLK	201	Speaker Feed - Left Front

IP Speaker, RH (Base)

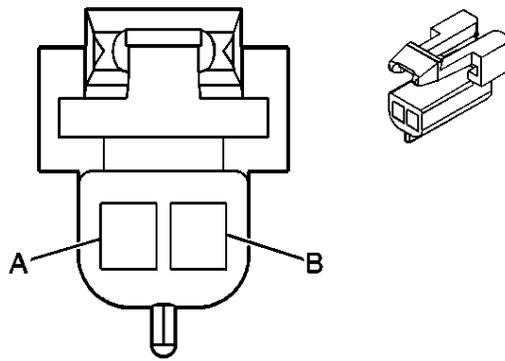


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	DK GRN	117	Speaker Return - Right Front
B	LT GRN	200	Speaker Feed - Right Front

IP Speaker, RH (Uplevel)

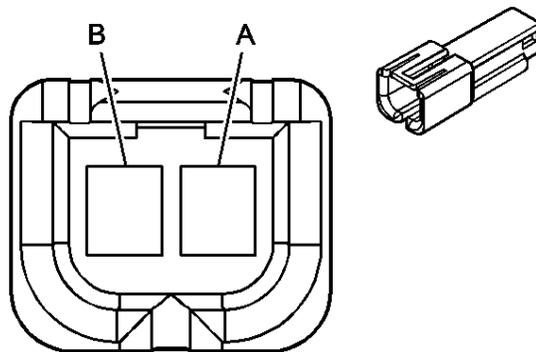


Connector Part Information

- 12064778
- 2-Way M Metri-Pack 150 Series (GRN)

Pin	Wire Color	Circuit No.	Function
A	PPL	117	Speaker Return - Right Front
B	LT GRN	200	Speaker Feed - Right Front

Radio (All Except Bravada) Connector C1

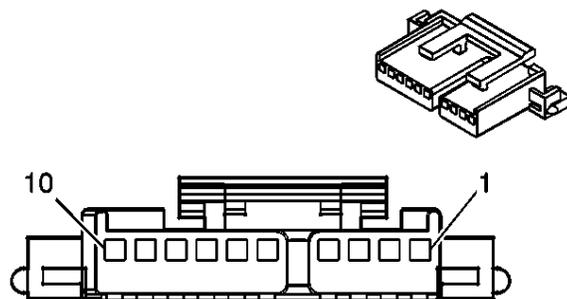


Connector Part Information

- 12047531
- 10-Way F Micro-Pack 100 Series (BLK)

Pin	Wire Color	Circuit No.	Function
1	GRY	118	Audio Signal - Left Front (w/o Amp)
1	TAN	511	Audio Signal - Left Front (w/ Amp)
2	TAN	201	Audio Signal Left - Front (w/o Amp)
2	ORN/BLK	1546	Audio Return - Front (w/ Amp)
3	DK GRN	117	Audio Signal - Right Front (w/o Amp)
3	LT GRN	512	Audio Signal - Right Front (w/ Amp)
4	LT GRN	200	Audio Signal Right - Front (w/o Amp)
4	BARE	1573	Drain Wire Return - Front Audio (w/ Amp)
5	BLK	1050	Ground
6	PPL/WHT	1382	LED Dimming Signal
7	GRY	1220	Fuse Output - Instrument Panel Lamps
8	--	--	Not Used (w/o Amp)
8	DK GRN	145	Switched Power Output - Amp Feed (w/ Amp)
9	DK GRN	1301	Fuse Output - Retained Accessory Power
10	ORN	340	Fuse Output - Battery - Type III Fuse


Radio (All Except Bravada) Connector C2

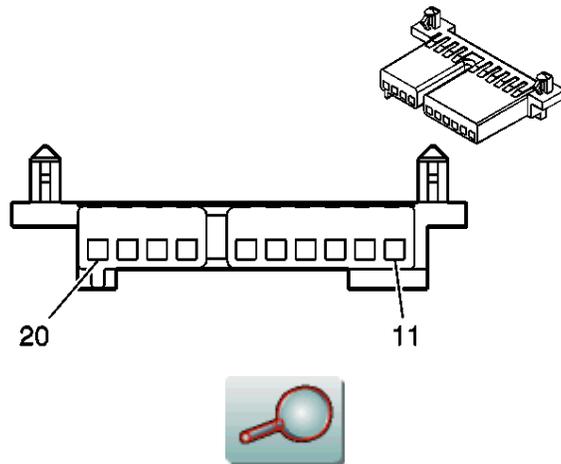**Connector Part Information**

- 12065785
- 10-Way F Micro-Pack 100 Series (GRY)


Pin	Wire Color	Circuit No.	Function
11	--	--	Not Used
12	PNK	314	Radio Signal - On (Envoy Only)
13	LT GRN	1011	Remote Radio Control Signal (Envoy Only)
14	--	--	Not Used (Pick-up)
14	DK BLU	1796	Radio Control Signal - Steering Column (Utility)
15	DK GRN	835	Diagnostic Signal - Entertainment and Comfort (Envoy Only)
16	DK GRN	389	Vehicle Speed Signal - 4000 Pulses Per Mile
17	LT BLU	115	Speaker Return - Right Rear (w/o Amp)
17	DK BLU	546	Audio Signal - Right Rear (w/ Amp)
18	DK BLU	46	Audio Signal Right - Rear - Low Level (w/o Amp)
18	DK GRN/WHT	1547	Audio Return - Rear - Low Level (w/ Amp)
19	YEL	116	Speaker Return - Left Rear (w/o Amp)
19	BRN	599	Audio Signal - Left Rear - Low Level (w/ Amp)
20	BRN	199	Audio Signal - Left Rear (w/o Amp)
20	BARE	1574	Drain Wire Return - Rear Audio (w/ Amp)

Radio (All Except Bravada) Connector C3 (w/ Remote Audio Player)

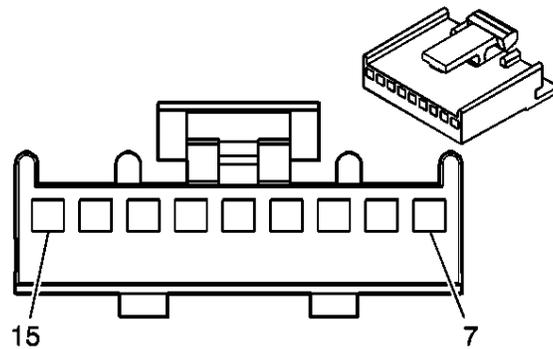
Connector Part Information

- 12064980
- 9-Way F Micro-Pack 100 Series (BLK) 7

Pin	Wire Color	Circuit No.	Function
7	LT BLU	1405	Tape Player Signal - Remote - Audio Communication
8	GRY	1220	Dimming Signal (except Envoy)
9	BARE	701	Drain Wire Return
10	DK GRN/WHT	368	Remote Radio Signal - Right Audio
11	BRN/WHT	367	Remote Radio Signal - Left Audio
12	BLK/WHT	372	Remote Radio Return - Audio
13	BLK	1050	Ground
14	DK GRN	835	Diagnostic Signal - Entertainment and Comfort
15	ORN	340	Fuse Output - Battery

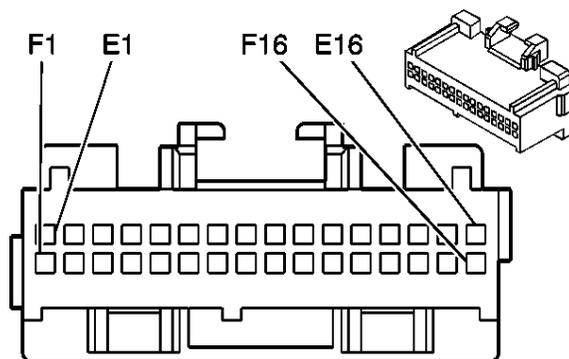
Radio w/ ATC CD (Bravada)

Connector Part Information

- 12110115
- 32-Way F Micro-Pack 100 Series (Blu)

Pin	Wire Color	Circuit No.	Function
-----	------------	-------------	----------

E1-E11	--	--	Not Used
E12	BRN	199	Speaker Feed - Left Rear
E13	YEL	116	Speaker Return - Left Rear
E14	DK GRN	117	Speaker Feed - Right Front
E15	LT GRN	200	Speaker Feed - Right Front
E16	BLK	1050	Ground
F1	ORN	340	Fuse Output - Battery - Type II Fuse
F2	DK GRN	1301	Fuse Output - Retained Accessory
F4	GRY	1220	Fuse Output - Instrument Panel Lamps - Type III Fuse
F5	PPL/WHT	1382	Led Dimming Signal
F6-F11	--	--	Not Used
F12	TAN	201	Speaker Feed - Left Front
F13	GRY	118	Speaker Return - Left Front
F14	LT BLU	115	Speaker Return - Right Rear
F15	DK BLU	46	Speaker Feed - Right Rear
F16	--	--	Not Used

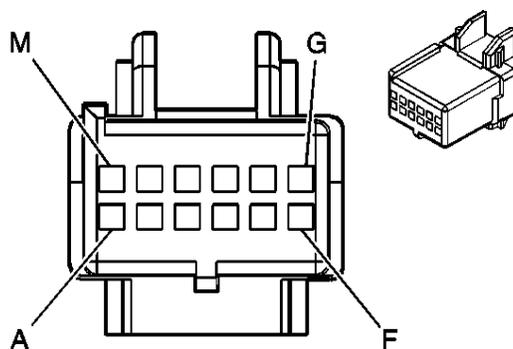Rear Seat Audio Control (Envoy Only)




Connector Part Information

- 12064799
- 12-Way F Micro-Pack 100 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	DK GRN	1301	Fuse Output - Retained Accessory Power
B	BRN	2409	Fuse Output - Retained Accessory Power
C	BLK	1050	Ground
D	PNK	314	Radio Signal - On
E-H	--	--	Not Used
J	DK GRN/WHT	368	Remote Radio Signal - Right Audio

K	BLK/WHT	372	Remote Radio Return - Audio
L	BRN/WHT	367	Remote Radio Signal - Left Audio
M	LT GRN	1011	Remote Radio Control Signal

Remote Audio Player

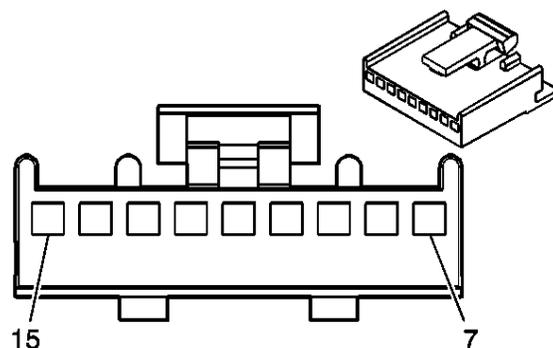


Connector Part Information

- 12064980
- 9-Way F Micro-Pack 100 Series (BLK)


Pin	Wire Color	Circuit No.	Function
7	LT BLU	1405	Tape Player Signal - Remote - Audio Communication
8	GRY	1220	Fuse Output - Instrument Panel Lamps - Type III
8	--	--	Not Used (Envoy Only)
9	BARE	514	Drain Wire Return
10	DK GRN/WHT	368	Remote Radio Signal - Right Audio
11	BRN/WHT	367	Remote Radio Signal - Left Audio
12	BLK/WHT	372	Remote Radio Return - Audio
13	BLK	1050	Ground
14	DK GRN	835	Diag Signal - Entertainment and Comfort
15	ORN	340	Fuse Output - Battery - Type III Fuse

Speaker, LH Rear (2-Door Utility)

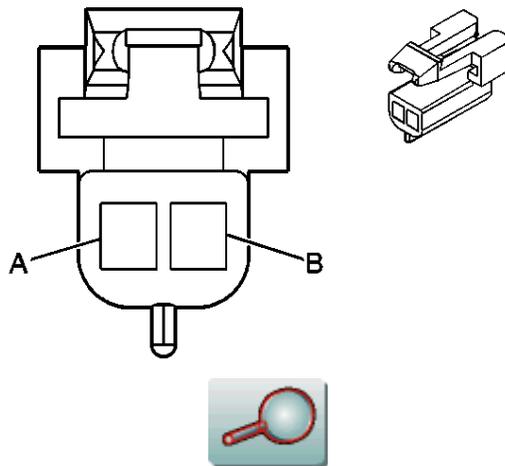

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	YEL	116	Speaker Return - Left Rear
B	BRN	199	Speaker Feed - Left Rear

Speaker, RH Rear (2-Door Utility)

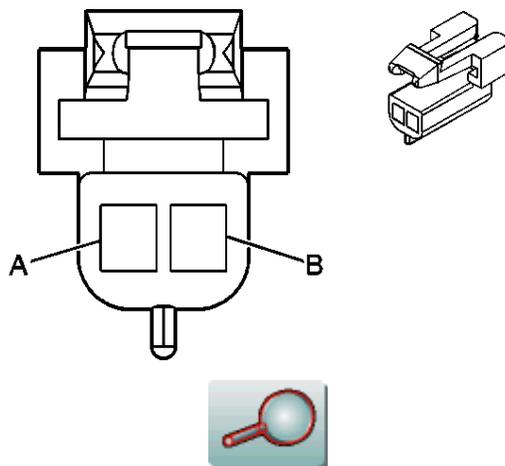

Connector Part Information		<ul style="list-style-type: none"> • 12052832 • 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Speaker Return - Right Rear
B	DK BLU	46	Speaker Feed - Right Rear

[<- Back](#) [Forward ->](#)

Document ID# 358687
1999 Chevrolet/Geo Blazer - 4WD

[Print](#)