

<- Back

Forward ->


Document ID# 881843
2004 Chevrolet Blazer - 4WD

Print

Entertainment Connector End Views

- Table 1: [Radio](#)
 Table 2: [Speaker - LF \(Pickup\)](#)
 Table 3: [Speaker - LF \(Utility\)](#)
 Table 4: [Speaker - LF Door](#)
 Table 5: [Speaker - LR \(2-Door Utility\)](#)
 Table 6: [Speaker - LR Door \(4-Door Utility\)](#)
 Table 7: [Speaker - RF \(Pickup\)](#)
 Table 8: [Speaker - RF](#)
 Table 9: [Speaker - RF Door](#)
 Table 10: [Speaker - RR \(2-Door Utility\)](#)
 Table 11: [Speaker - RR Door \(4-Door Utility\)](#)
 Table 12: [Steering Wheel Controls Switch - Left](#)
 Table 13: [Steering Wheel Controls Switch - Right](#)

Radio

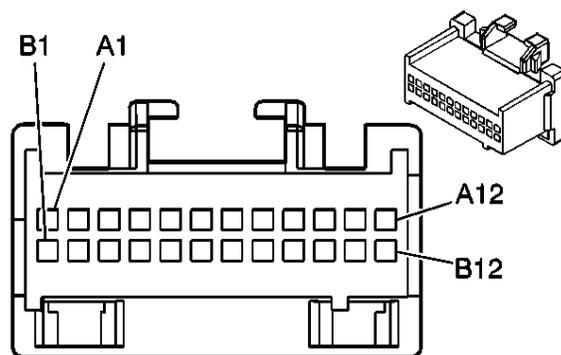


Connector Part Information

- 12110088
- 24-Way F Micro-Pack 100 Series (GRY)

Pin	Wire Color	Circuit Number	Function
A1	GRY	1036	Class 2 Serial Data (IPC)
A2 -A5	--	--	Not Used
A6	DK GRN	801	RAP Fuse Supply Voltage (Utility Only)
A7	DK BLU	1796	Steering Wheel Controls Signal (Utility Only)


A8	TAN	201	Left Front Speaker Output (+)
A9	GRY	118	Left Front Speaker Output (-)
A10	LT BLU	115	Right Rear Speaker Output (-)
A11	DK BLU	46	Right Rear Speaker Output (+)
A12	BLK	1050	Ground
B1	ORN	340	Battery Positive Voltage
B2	DK GRN	1301	RAP Fuse Supply Voltage
B3	--	--	Not Used
B4	GRY	1220	Instrument Panel Lamp Fuse Supply Voltage - 2
B5	BLK	1050	Ground
B6-B7	--	--	Not Used
B8	BRN	199	Left Rear Speaker Output (+)
B9	YEL	116	Left Rear Speaker Output (-)
B10	DK GRN	117	Right Front Speaker Output (-)
B11	LT GRN	200	Right Front Speaker Output (+)
B12	PPL/WHT	1382	LED Dimming Signal

Speaker - LF (Pickup)

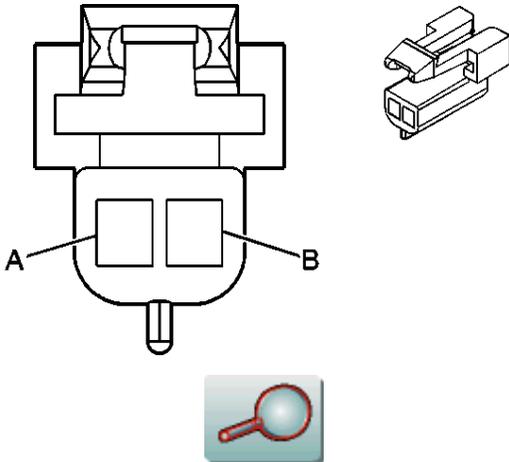


Connector Part Information		<ul style="list-style-type: none"> 12052832 2-Way F Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-)
B	TAN	201	Left Front Speaker Output (+)

Speaker - LF (Utility)

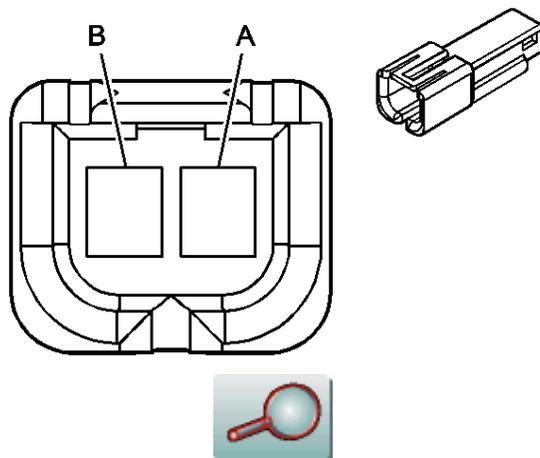**Connector Part Information**

- 12064778
- 2-Way M Metri-Pack 150 Series (GRN)


Pin	Wire Color	Circuit No.	Function
A	GRY	118	Left Front Speaker Output (-)
B	TAN	201	Left Front Speaker Output (+)

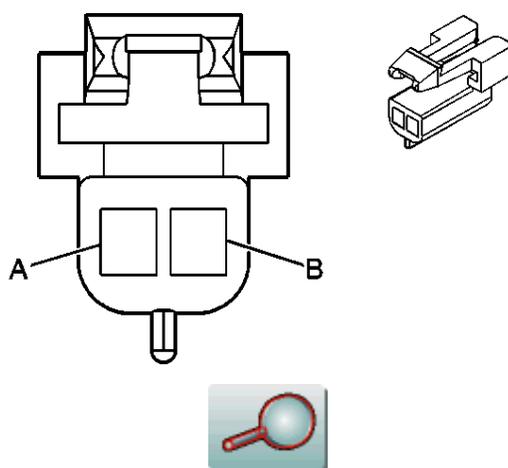Speaker - LF Door**Connector Part Information**

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-) (w/ AU3/A31)
	GRY	118	Left Front Speaker Output (-) (w/o AU3/A31)
B	BRN	199	Left Rear Speaker Output (+) (w AU3/A31)
	TAN	201	Left Front Speaker Output (+) (w/o AU3/A31)

Speaker - LR (2-Door Utility)

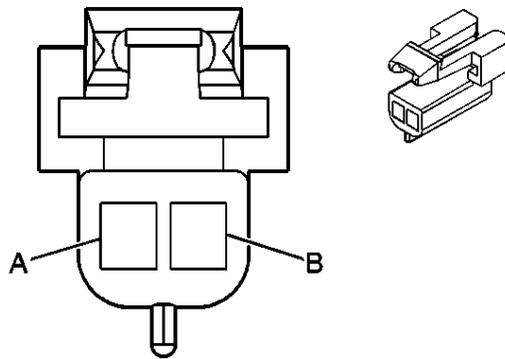


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

Speaker - LR Door (4-Door Utility)

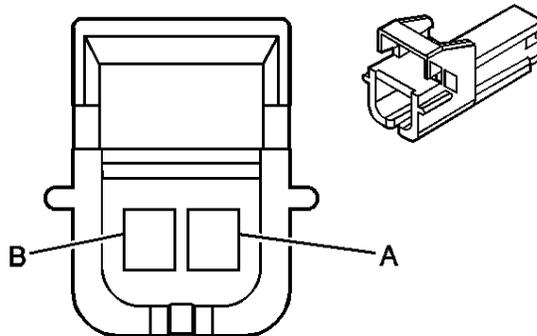


Connector Part Information

- 12052833
- 2-Way M Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

Speaker - RF (Pickup)

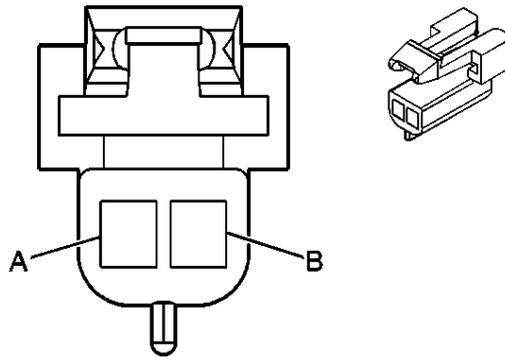


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	DK GRN	117	Right Front Speaker Output (-)
B	LT GRN	200	Right Front Speaker Output (+)

Speaker - RF

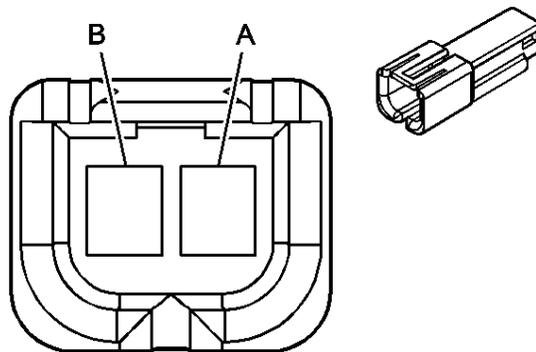


Connector Part Information

- 12064778
- 2-Way M Metri-Pack 150 Series (GRN)

Pin	Wire Color	Circuit No.	Function
A	DK GRN	117	Right Front Speaker Output (-)
B	LT GRN	200	Right Front Speaker Output (+)

Speaker - RF Door

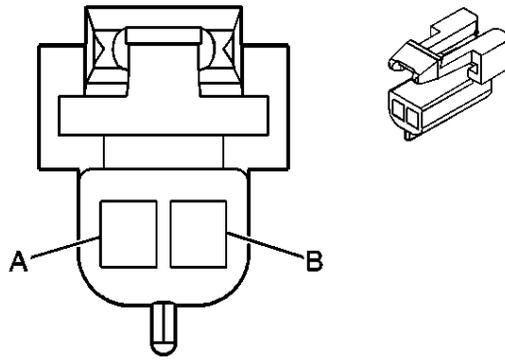


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)

Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Right Rear Speaker Output (-)
B	DK BLU	46	Right Rear Speaker Output (+)

Speaker - RR (2-Door Utility)

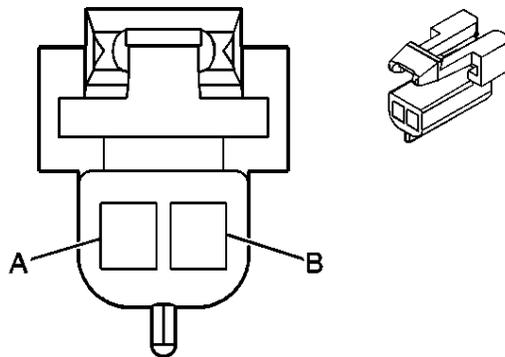


Connector Part Information

- 12052832
- 2-Way F Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Right Rear Speaker Output (-)
B	DK BLU	46	Right Rear Speaker Output (+)

Speaker - RR Door (4-Door Utility)

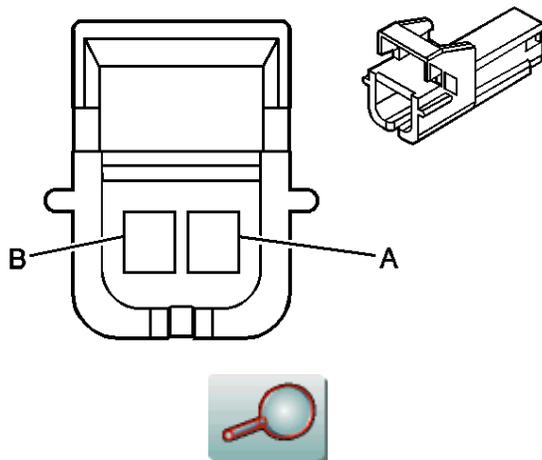**Connector Part Information**

- 12052833
- 2-Way M Metri-Pack 150 Series (BLK)


Pin	Wire Color	Circuit No.	Function
A	YEL	116	Left Rear Speaker Output (-)
B	BRN	199	Left Rear Speaker Output (+)

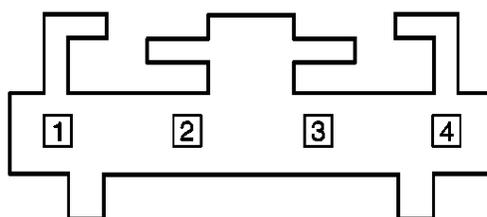Steering Wheel Controls Switch - Left**Connector Part Information**

- 50579404
- 4-Way Molex Connector (BLK)

Pin	Wire Color	Circuit No.	Function
1	WHT	--	Seek Up/Down Preset Feed
2	LT GRN	1011	Remote Radio Control Signal
3	GRY	949	Instrument Panel Lamp Supply Voltage
4	BLK	152	Ground

Steering Wheel Controls Switch - Right

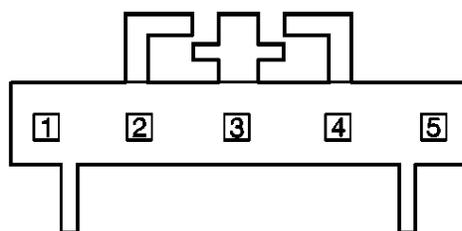

Connector Part Information

- **50579405**
- **5-Way Molex Connector (BLK)**

Pin	Wire Color	Circuit No.	Function
1	LT GRN	1011	Remote Radio Control Signal
2	BLK	152	Ground
3	GRY	949	Instrument Panel Lamp Supply Voltage
4	WHT	--	Volume Controls - Ground
5	YEL	43	Accessory Voltage

[<- Back](#)
[Forward ->](#)

Document ID# 881843
2004 Chevrolet Blazer - 4WD

[Print](#)