

<- Back

Forward ->

Document ID# 417444
1998 Chevrolet/Geo Blazer - 2WD

Print

Inline Harness Connector End Views

Table 1:	C100 (Engine Harness to Oxygen Sensor 4.3L Engine)
Table 2:	C101 (Engine Harness to Body Harness 4.3L Engine, 10 Cavities)
Table 3:	C104 (Chassis to 2.2L Engine Harness, 6 Cavities)
Table 4:	C104 (Chassis to 4.3L Engine Harness, 6 Cavities)
Table 5:	C105 (4.3L Engine w/ A/T)
Table 6:	C106 (Forward Lamps to Body Harness) (Utility w/ Overhead Console)
Table 7:	C108 (w/ F4WD Active Transfer Case Extension Harness to Body Harness)
Table 8:	C108 (w/ S4WD Transfer Case Extension Harness to Body Harness)
Table 9:	C109 (Supplemental Inflatable Restraint Harness to Forward Lamp Harness)
Table 10:	C111 (Engine Harness to Fuel Injector Harness)
Table 11:	C114 (w/ S4WD, Body Harness to Front Axle Switch Extension Harness)
Table 12:	C117 (Engine Harness to Oxygen Sensor, Rear)
Table 13:	C118 (Engine Harness to Oxygen Sensor)
Table 14:	C120 (Engine Harness to Body Harness, Front)
Table 15:	C175 (Engine Harness to Automatic Transmission Connector)
Table 16:	C200 (IP Harness to Body Harness)
Table 17:	C203 (IP Harness to Body Harness)
Table 18:	C204 (Body Harness to Floor Shifter Harness) (Utility)
Table 19:	C209
Table 20:	C211 (Body Harness to Steering Column Harness 4 Door Utility)
Table 21:	C211 (Body Harness to Steering Column Harness Pickup)
Table 22:	C214 (Inline to Steering Column Harness - SIR)
Table 23:	C217 (Body Harness to IP Harness)

Table 24:	<u>C223 (Body Harness to Auxiliary Power Tray) (Extended Cab)</u>
Table 25:	<u>C224 (Envoy Only)</u>
Table 26:	<u>C229</u>
Table 27:	<u>C300 (Dome Lamp Harness to Sunroof Harness) (Utility)</u>
Table 28:	<u>C315 (Body Harness to Passenger Seat Assembly Pigtail Connector) (4-Door Utility with Power Seats)</u>
Table 29:	<u>C317 (Utility Body Harness to Driver's Seat Assembly Pigtail Connector)</u>
Table 30:	<u>C401 (Chassis Harness to Tail Lamp Harness) (Pickup)</u>
Table 31:	<u>C402 (Body Harness to RH Tail Lamp Harness) (Utility)</u>
Table 32:	<u>C403 (Body Harness to LH Tail Lamp Harness) (Utility)</u>
Table 33:	<u>C404 (Body Harness to LH RR Door Harness) (4-Door Utility)</u>
Table 34:	<u>C405 (Body Harness to LH RR Door Harness) (4-Door Utility)</u>
Table 35:	<u>C406 (Body Harness to RH RR Door Harness) (4-Door Utility)</u>
Table 36:	<u>C407 (Body Harness to RH RR Door Harness) (4-Door Utility)</u>
Table 37:	<u>C411 (Body Harness to Endgate Harness) (Utility)</u>
Table 38:	<u>C412 (Body Harness to Endgate Harness) (Utility)</u>
Table 39:	<u>C413 (Body Harness to Endgate Harness)</u>
Table 40:	<u>C426 (Body Harness to Liftglass Harness In - Line Connector) (Utility)</u>
Table 41:	<u>C427 (Body Harness to Liftgate Harness)</u>
Table 42:	<u>C428 (Body Harness to Liftgate Harness)</u>
Table 43:	<u>C429 (Body Harness to Liftgate Harness)</u>
Table 44:	<u>C430 (Chassis Harness to License Lamp Harness) (Utility)</u>
Table 45:	<u>C432 (Body Harness to Endgate Liftglass Coiled Cord Connector, LH)</u>
Table 46:	<u>C433 (Body Harness to Rear Window Defogger)</u>

Table 47: [C471 \(Body Harness to Rear Quarter Harness\) \(Envoy Only\)](#)

Table 48: [C472 \(Body Harness to Auto Level Control Harness\) \(Envoy Only\)](#)

Table 49: [C500 \(Body Harness to LH Front Door Harness\)](#)

Table 50: [C501 \(Body Harness to LH Front Door Harness\)](#)


Table 51: [C510 \(Body Harness to LH Front Door Harness\) \(Envoy Only\)](#)

Table 52: [C600 \(Body Harness to RH Front Door Harness, Utility\)](#)

Table 53: [C601 \(Body Harness to RH Front Door Harness, Utility\)](#)

Table 54: [C610 \(Body Harness to RH Front Door Harness\) \(Envoy Only\)](#)


C100 (Engine Harness to Oxygen Sensor 4.3L Engine)

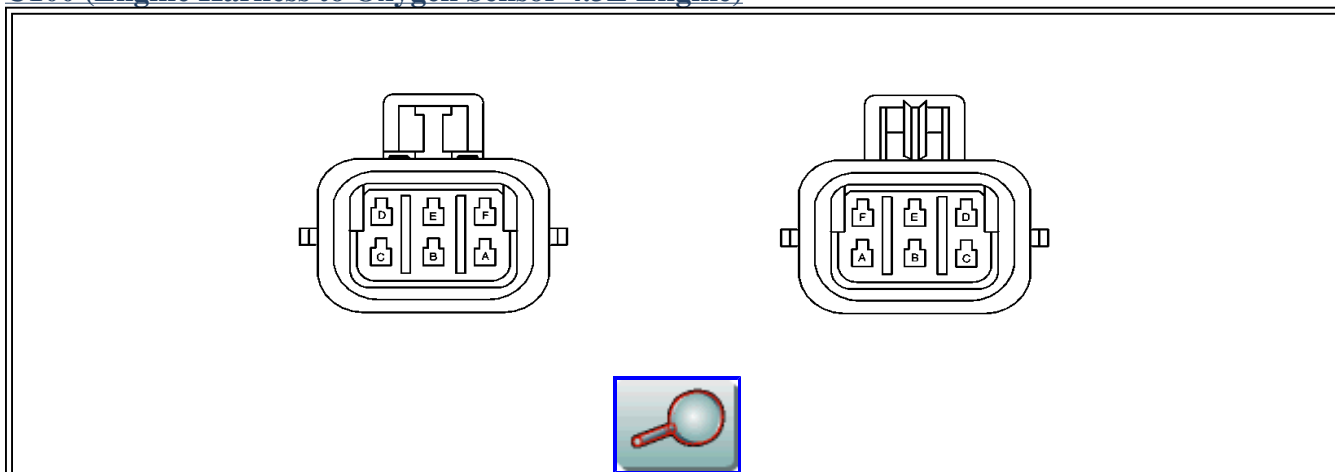

Connector Part Information		<ul style="list-style-type: none"> • 12124107 • 6-Way F Metri-Pack 150 Series, Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12052848 • 6-Way M Metri-Pack 150 Series, Sealed (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	PPL	1666	Oxygen Sensor Signal - Right Forward of Catalytic Converter	A	PPL	1666	Oxygen Sensor Signal - Right Forward of Catalytic Converter
B	TAN	1667	Oxygen Sensor Return - Right Forward of Catalytic Converter	B	TAN	1667	Oxygen Sensor Return - Right Forward of Catalytic Converter
C	PPL/WHT	1668	Oxygen Sensor Signal - Left Rear of Catalytic Converter	C	PPL/WHT	1668	Oxygen Sensor Signal - Left Rear of Catalytic Converter
D	TAN/WHT	1669	Oxygen Sensor Return - Left Rear of Catalytic Converter	D	TAN/WHT	1669	Oxygen Sensor Return - Left Rear of Catalytic Converter

E	PNK	539	Fuse Output - Ignition 1 - Type III Fuse	E	PNK	539	Fuse Output - Ignition 1 - Type III Fuse
F	BLK	350	Ground	F	BLK	350	Ground

C101 (Engine Harness to Body Harness 4.3L Engine, 10 Cavities)

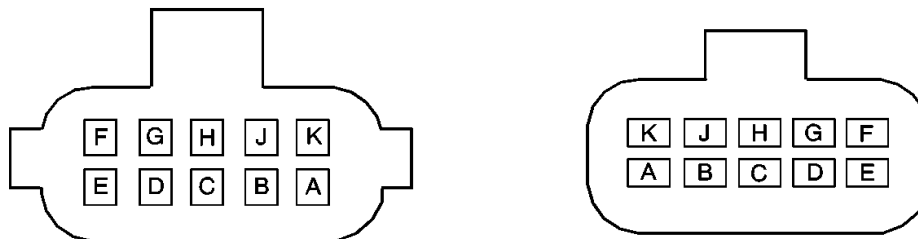

Connector Part Information	<ul style="list-style-type: none"> • 12177081 • 10-Way F Global Technology, 150 Series, Sealed (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12045808 • 10-Way M Global Technology, 150 Series, Sealed (BLK)
----------------------------	------------------------------------------------------------------------------------------------------------------------------	----------------------------	------------------------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	WHT	121	Tachometer Signal	A	WHT	121	Tachometer Signal
B	LT BLU	203	Air Conditioning Refrigerant High Pressure Cut - Out Switch Feed	B	LT BLU	203	Air Conditioning Refrigerant High Pressure Cut - Out Switch Feed
C	TAN/WHT	331	Oil Pressure Sensor Signal	C	TAN/WHT	331	Oil Pressure Sensor Signal
D	LT GRN/BLK	584	Fuse Output - Brake Transmission Shift Interlock - Type III Fuse	D	LT GRN/BLK	584	Fuse Output - Brake Transmission Shift Interlock - Type III Fuse
E	PPL	420	Exhaust Gas Recirculation Solenoid Feed	E	PPL	420	Brake Pedal Switch Output - Torque Converter Clutch
F	YEL/BLK	1827	Vehicle Speed Signal - 128000 Pulses Per Mile	F	YEL/BLK	1827	Vehicle Speed Signal - 128000 Pulses Per Mile
G	PNK	1020	Fuse Output - Off/Run/Crank - Type III Fuse	G	PNK	1020	Fuse Output - Off/Run/Crank - Type III Fuse
H	YEL	710	Exhaust Gas Recirculation Vent Solenoid Output	H	YEL	710	Serial Data Signal - Class B - 10400 Baud - Secondary
			Brake Pedal Switch				Brake Pedal Switch

J	PPL	420	Output - Torque Converter Clutch	J	BRN/WHT	420	Output - Torque Converter Clutch
K	BRN/WHT	379	Cruise Control Clutch Pedal Switch Output	K	BRN/WHT	379	Cruise Control Clutch Pedal Switch Output

C104 (Chassis to 2.2L Engine Harness, 6 Cavities)



Connector Part Information		<ul style="list-style-type: none"> • 12124107 • 6-Way F Metri-Pack 150 Series, Sealed, Self Locking (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12052848 • 6-Way F Metri-Pack 150 Series, Sealed, Self Locking (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	WHT	1310	Canister Vent Valve Solenoid Output	A	WHT	1310	Canister Vent Valve Solenoid Output
B	DK GRN	890	Fuel Tank Pressure Sensor Signal	B	DK GRN	890	Fuel Tank Pressure Sensor Signal
C	GRY	705	Reference Voltage Feed - 5 Volt Reference	C	GRY	705	Reference Voltage Feed - 5 Volt Reference
D	ORN/BLK	510	Fuel Sender Return	D	ORN/BLK	510	Fuel Sender Return
E	PPL	1589	Fuel Gauge Sensor Signal	E	PPL	1589	Fuel Gauge Sensor Signal
F	--	--	Not Used	F	--	--	Not Used


C104 (Chassis to 4.3L Engine Harness, 6 Cavities)





Connector Part Information		<ul style="list-style-type: none"> • 12124107 • 6-Way F Metri-Pack 150 Series, Sealed, Self Locking (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12052848 • 6-Way F Metri-Pack 150 Series, Sealed, Self Locking (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	WHT	1310	Canister Vent Valve Solenoid Output	A	WHT	1310	Canister Vent Valve Solenoid Output
B	DK GRN	890	Fuel Tank Pressure Sensor Signal	B	DK GRN	890	Fuel Tank Pressure Sensor Signal
C	GRY	705	Reference Voltage Feed - 5 Volt Reference	C	GRY	705	Reference Voltage Feed - 5 Volt Reference
D	ORN/BLK	510	Fuel Sender Return	D	ORN/BLK	510	Fuel Sender Return
E	PPL	1589	Fuel Gauge Sensor Signal	E	PPL	1589	Fuel Gauge Sensor Signal
F	--	--	Not Used	F	--	--	Not Used


C105 (4.3L Engine w/ A/T)

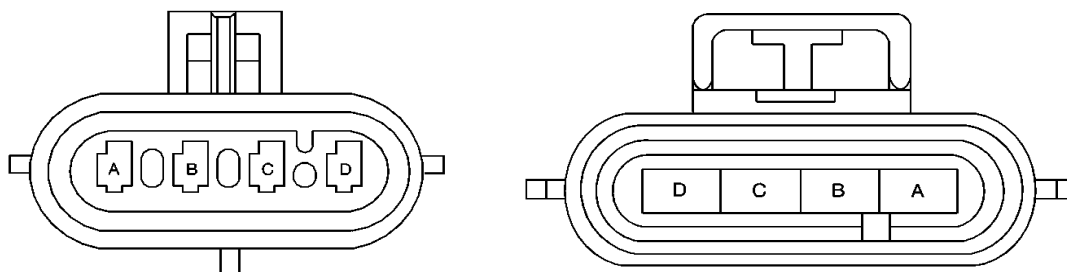

Connector Part Information		<ul style="list-style-type: none"> • 12162144 • 4-Way F Metri-Pack 150 Series, Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12110762 • 4-Way M Metri-Pack 150 Series, Sealed (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	TAN/WHT	1653	Oxygen Sensor Return - Left - Forward of Catalytic Converter	A	TAN/WHT	1653	Oxygen Sensor Return - Left - Forward of Catalytic Converter
B	PPL/WHT	1665	Oxygen Sensor Signal - Left - Forward of Catalytic Converter	B	PPL/WHT	1665	Oxygen Sensor Signal - Left - Forward of Catalytic Converter
C	BLK	450	Ground	C	BRN	450	Ground


D	PNK	539	Fuse Output - Ignition 1 - Type III Fuse	D	PNK	539	Fuse Output - Ignition 1 - Type III Fuse
---	-----	-----	---------------------------------------------	---	-----	-----	---------------------------------------------

C106 (Forward Lamps to Body Harness) (Utility w/ Overhead Console)

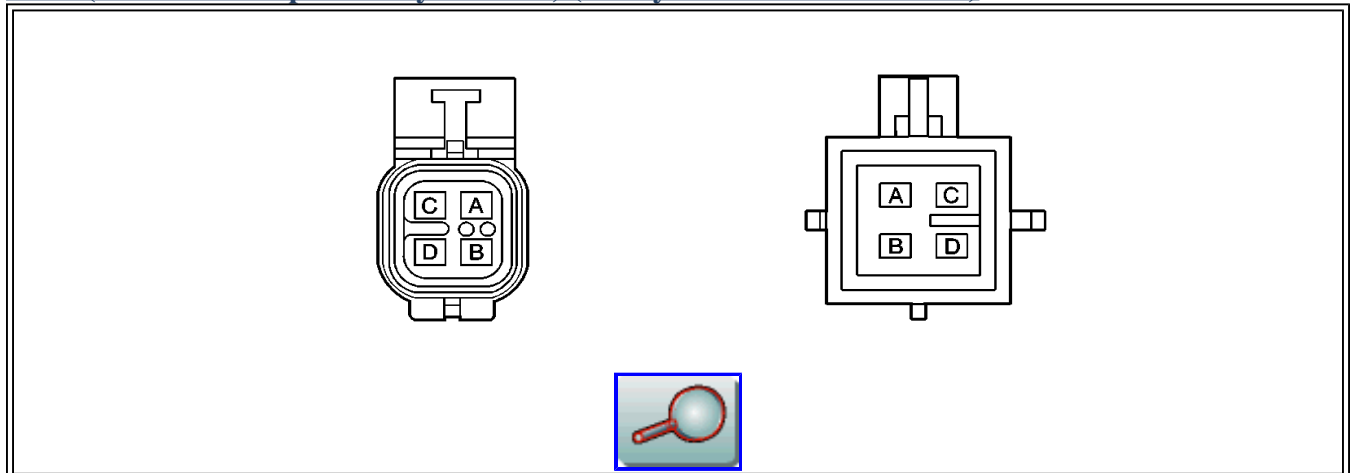

Connector Part Information		<ul style="list-style-type: none"> • 12160482 • 4-Way F Metri-Pack 150 Series, Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12160825 • 4-Way M Metri-Pack 150 Series, Sealed (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	LT GRN/BLK	735	Outside Ambient Air Temperature Sensor Signal	A	LT GRN/BLK	735	Outside Ambient Air Temperature Sensor Signal
B	BLK/WHT	451	Engine Control Module Ground	B	BLK/WHT	451	Engine Control Module Ground
C	DK GRN/WHT	636	Outside Ambient Air Temperature Sensor Signal	C	DK GRN/WHT	636	Outside Ambient Air Temperature Sensor Signal
D	BLK	552	Sensor Return	D	BLK	552	Sensor Return


C108 (w/ F4WD Active Transfer Case Extension Harness to Body Harness)

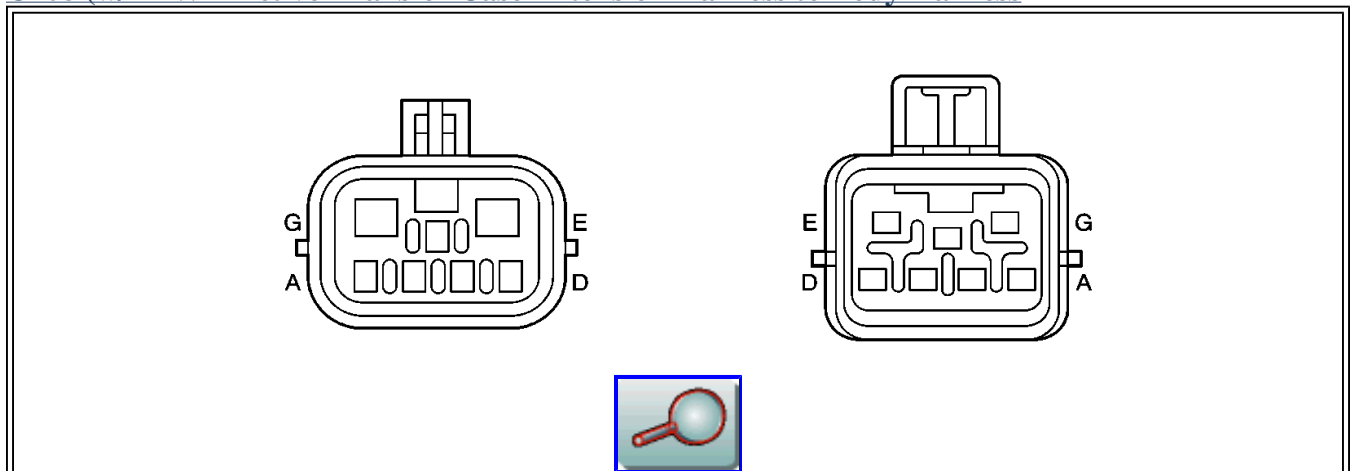

Connector Part Information		<ul style="list-style-type: none"> • 12059472 • 7-Way F Metri-Pack Mixed Series Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12052200 • 7-Way M Metri-Pack Mixed Series Sealed (BLK) 	
----------------------------	--	----------------------------------------------------------------------------------------------------------------------	--	----------------------------	--	----------------------------------------------------------------------------------------------------------------------	--

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BLK	850	Ground	A	BLK	850	Ground
B	YEL	400	Vehicle Speed Sensor Signal	B	YEL	400	Vehicle Speed Sensor Signal
C	PPL	401	Vehicle Speed Sensor Return	C	PPL	401	Vehicle Speed Sensor Return
D	LT BLU	2221	Vehicle Speed Sensor Signal	D	LT BLU	2221	Vehicle Speed Sensor Signal
E	BLK	1552	Transfer Case Motor Feed - Clockwise	F	BLK	1552	Transfer Case Motor Feed - Clockwise
F	DK GRN	2222	Vehicle Speed Sensor Return	F	DK GRN	2222	Vehicle Speed Sensor Return
G	RED	1553	Transfer Case Motor Feed - Clockwise	G	RED	1553	Transfer Case Motor Feed - Clockwise

C108 (w/ S4WD Transfer Case Extension Harness to Body Harness)


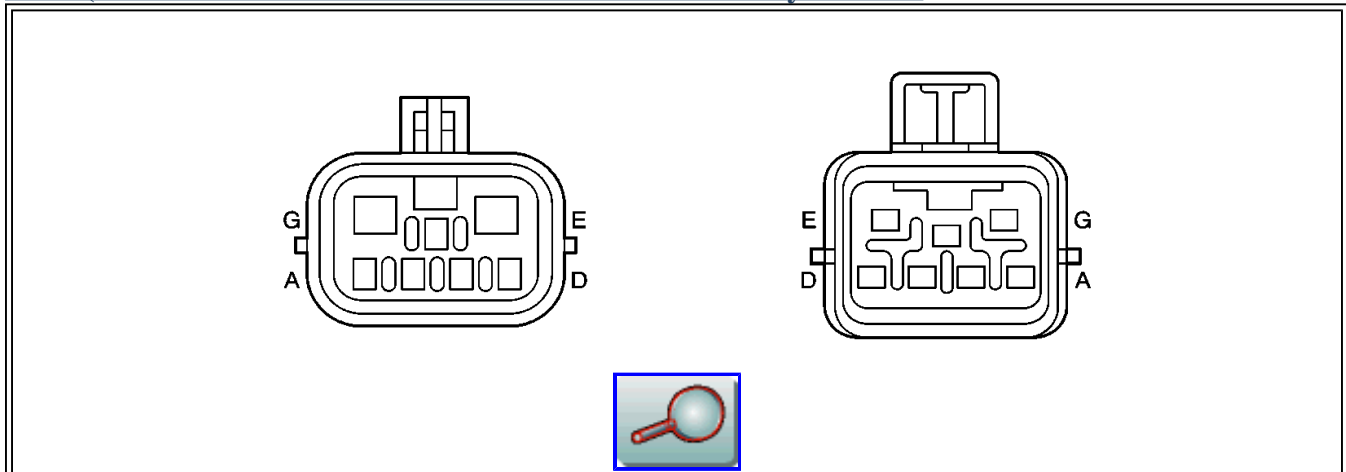



Connector Part Information	<ul style="list-style-type: none"> • 12059472 • 7-Way F Metri-Pack Mixed Series Sealed (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12052200 • 7-Way M Metri-Pack Mixed Series Sealed (BLK)
----------------------------	----------------------------------------------------------------------------------------------------------------------	----------------------------	----------------------------------------------------------------------------------------------------------------------




Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BRN/WHT	1555	Transfer Case Position Switch Encoder Signal - Channel P	A	BRN/WHT	1555	Transfer Case Position Switch Encoder Signal - Channel P
B	BLK/WHT	1554	Transfer Case Encoder Signal Return	B	BLK/WHT	1554	Transfer Case Encoder Signal Return
C	DK BLU/WHT	1557	Transfer Case Position Switch Encoder Signal - Channel A	C	DK BLU/WHT	1557	Transfer Case Position Switch Encoder Signal - Channel A
D	YEL/BLK	1558	Transfer Case Position Switch Encoder Signal - Channel B	D	YEL/BLK	1558	Transfer Case Position Switch Encoder Signal - Channel B

E	BLK	1552	Transfer Case Motor Feed - Clockwise	E	BLK	1552	Transfer Case Motor Feed - Clockwise
F	RED/WHT	1556	Transfer Case Position Switch Encoder Signal - Channel C	F	RED/WHT	1556	Transfer Case Position Switch Encoder Signal - Channel C
G	RED	1553	Transfer Case Motor Feed - Counterclockwise	G	RED	1553	Transfer Case Motor Feed - Counterclockwise

C109 (Supplemental Inflatable Restraint Harness to Forward Lamp Harness)

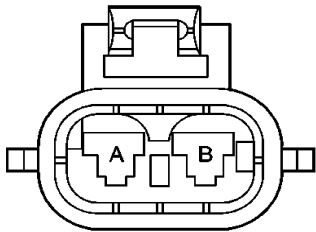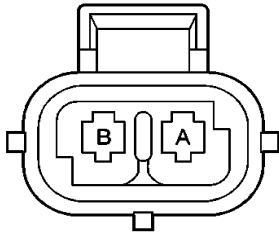
 							
							
Connector Part Information		<ul style="list-style-type: none"> • 12160310 • 2-Way F Metri-Pack 280 Series, Sealed (YEL) 	Connector Part Information		<ul style="list-style-type: none"> • 12084180 • 2-Way Metri-Pack 280 Series, Sealed (YEL) 		
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	YEL	1834	SIR Forward Sensor Signal	A	YEL	1834	SIR Forward Sensor Signal
B	BLK/WHT	1851	SIR Ground	B	BLK/WHT	1851	SIR Ground

C111 (Engine Harness to Fuel Injector Harness)

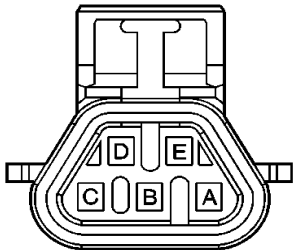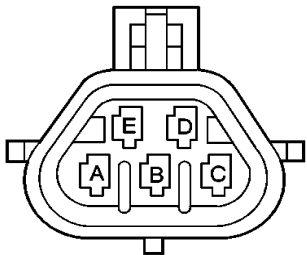 					
					
Connector Part Information		<ul style="list-style-type: none"> • 12146045 • 5-Way F Metri-Pack 150 Series, Sealed 	Connector Part Information		<ul style="list-style-type: none"> • 12103974 • 5-Way M Metri-Pack 150 Series, Sealed

		(NAT)				(NAT)	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	GRY	120	Fuel Pump Motor Feed	A	GRY	120	Fuel Pump Motor Feed
B	BLK	1744	Fuel Injector 1 Output	B	BLK	1744	Fuel Injector 1 Output
C	LT GRN/BLK	1745	Fuel Injector 2 Output	C	LT GRN/BLK	1745	Fuel Injector 2 Output
D	PNK/BLK	1746	Fuel Injector 3 Output	D	PNK/BLK	1746	Fuel Injector 3 Output
E	LT BLU/BLK	844	Fuel Injector 4 Output	E	LT BLU/BLK	844	Fuel Injector 4 Output

C114 (w/ S4WD, Body Harness to Front Axle Switch Extension Harness)


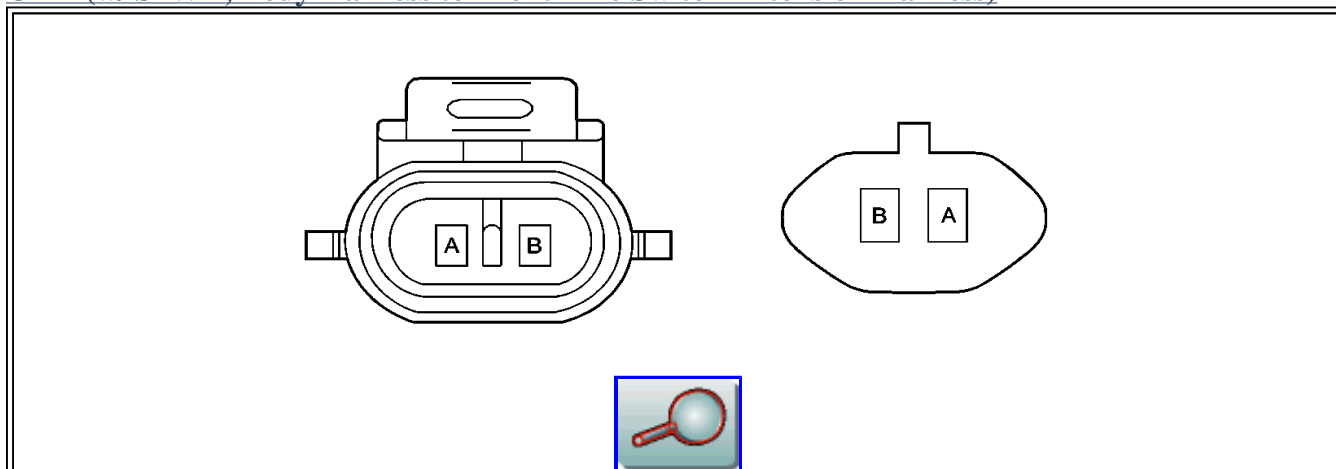


Connector Part Information	<ul style="list-style-type: none"> • 12052641 • 2-Way F Metri-Pack 150 Series, Sealed, Self-Locking (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12162000 • 2-Way Metri-Pack 150 Series, Sealed, Self-Locking (BLK)
----------------------------	-----------------------------------------------------------------------------------------------------------------------------------	----------------------------	---------------------------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BRN	241	Fuse Output - Ignition	A	BRN	241	Fuse Output - Ignition
B	BLK/WHT	1695	Four Wheel Drive Front Wheel Lock Telltale Feed	B	BLK/WHT	1695	Four Wheel Drive Front Wheel Lock Telltale Feed



C117 (Engine Harness to Oxygen Sensor, Rear)



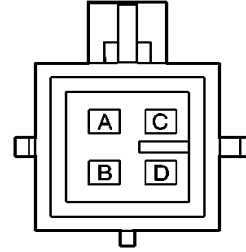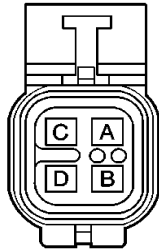



Connector Part Information		<ul style="list-style-type: none"> • 12160482 • 4-Way F Metri-Pack 150 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12160825 • 4-Way M Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	TAN/WHT	1669	Oxygen Sensor Return - Rear of Catalytic Converter	A	WHT	1669	Oxygen Sensor Return - Rear of Catalytic Converter
B	PPL/WHT	1668	Oxygen Sensor Signal - Rear of Catalytic Converter	B	PPL	1668	Oxygen Sensor Signal - Rear of Catalytic Converter
C	BLK	350	Ground	C	BRN	350	Ground
D	PNK	539	Fuse Output - Ignition	D	BRN	539	Fuse Output - Ignition

C118 (Engine Harness to Oxygen Sensor)

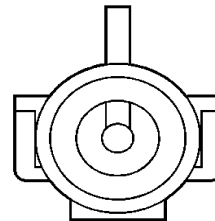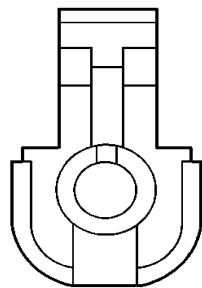

Connector Part Information		<ul style="list-style-type: none"> • 12015791 • 1-Way Weather Pack (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12010996 • 1-Way M Weather Pack (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	PPL	412	Oxygen Sensor Signal	A	PPL	412	Oxygen Sensor Signal



C120 (Engine Harness to Body Harness, Front)

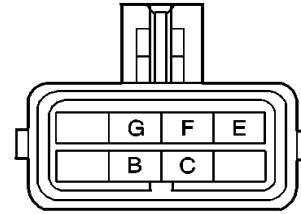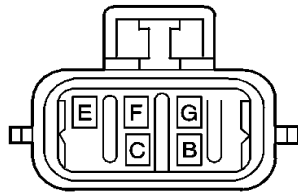

Connector Part Information		<ul style="list-style-type: none"> • 12052499 • 8-Way F Metri-Pack 150 Series, Sealed (MD GRY) 		Connector Part Information		<ul style="list-style-type: none"> • 12052480 • 8-Way M Metri-Pack 150 Series, Sealed (MD GRY) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	--	--	Not Used	A	--	--	Not Used
B	BRN/WHT	419	Check Engine Indicator Lamp Control	B	BRN/WHT	419	Check Engine Indicator Lamp Control
C	DK GRN/WHT	817	Vehicle Speed Signal - 4000 Pulses Per Mile	C	DK GRN/WHT	817	Vehicle Speed Signal - 4000 Pulses Per Mile
D	--	--	Not Used	D	--	--	Not Used
E	DK GRN	389	Vehicle Speed Signal - 4000 Pulses Per Mile	E	DK GRN	389	Vehicle Speed Signal - 4000 Pulses Per Mile
F	LT BLU/BLK	396	Cruise Control Signal - Engaged	F	LT BLU/BLK	396	Cruise Control Signal - Engaged
G	DK GRN	1049	Serial Data - Class 2 10400 Baud - Diagnostic	G	DK GRN	1049	Serial Data - Class 2 10400 Baud - Diagnostic
H	--	--	Not Used	H	--	--	Not Used

C175 (Engine Harness to Automatic Transmission Connector)


--	--	--	--	--	--	--	--

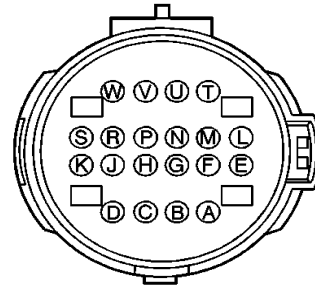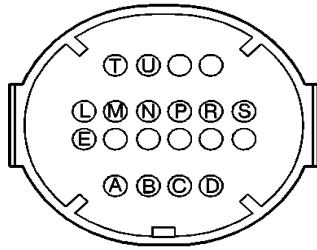

Connector Part Information		<ul style="list-style-type: none"> • 12191511 (Engine Harness Side) • 20-Way F Micro-Pack 100 Series (GRY) 		Connector Part Information		<ul style="list-style-type: none"> • 12160545 (Transmission Side) • 20-Way M Micro-Pack 100 Series (GRY) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	LT GRN	1222	1-2 Shift Solenoid Valve Control	A	LT GRN	1222	1-2 Shift Solenoid Valve Control
B	YEL/BLK	1223	2-3 Shift Solenoid Valve Control	B	YEL	1223	2-3 Shift Solenoid Valve Control
C	RED/BLK	1228	Pressure Control (PC) Solenoid Valve HIGH	C	PPL	1228	Pressure Control (PC) Solenoid Valve HIGH
D	LT BLU/WHT	1229	PC Solenoid Valve LOW	D	LT BLU	1229	PC Solenoid Valve LOW
E	PNK	1020	Transmission Solenoid Power	E	RED	839	Transmission Solenoid Power
F-K	--	--	Not Used	F-K	--	--	Not Used
L	YEL/BLK	1227	Transmission Fluid Temperature (TFT) Sensor HIGH	L	BRN	1227	Transmission Fluid Temperature (TFT) Sensor HIGH
M	BLK	407 (2.2L)	TFT Sensor LOW	M	GRY	452	TFT Sensor LOW
M	BLK	470 (4.3L)	TFT Sensor LOW	M	GRY	452	TFT Sensor LOW
N	PNK	1224	Range Signal A	N	PNK	1224	Range Signal A
P	RED	1226	Range Signal C	P	ORN	1226	Range Signal C
R	DK BLU	1225	Range Signal B	R	DK BLU	1225	Range Signal B
S	WHT	687	3-2 Shift Solenoid Valve Assembly Control	S	WHT	687	3-2 Shift Solenoid Valve Assembly Control
T	TAN/BLK	422	Torque Converter Clutch Solenoid Valve Control	T	BLK	422	Torque Converter Clutch Solenoid Valve Control


U	BRN	418	Torque Converter Clutch Pulse Width Modulation Solenoid Valve Control	U	TAN	418	Torque Converter Clutch Pulse Width Modulation Solenoid Valve Control
V-W	--	--	Not Used	V-W	--	--	Not Used

C200 (IP Harness to Body Harness)

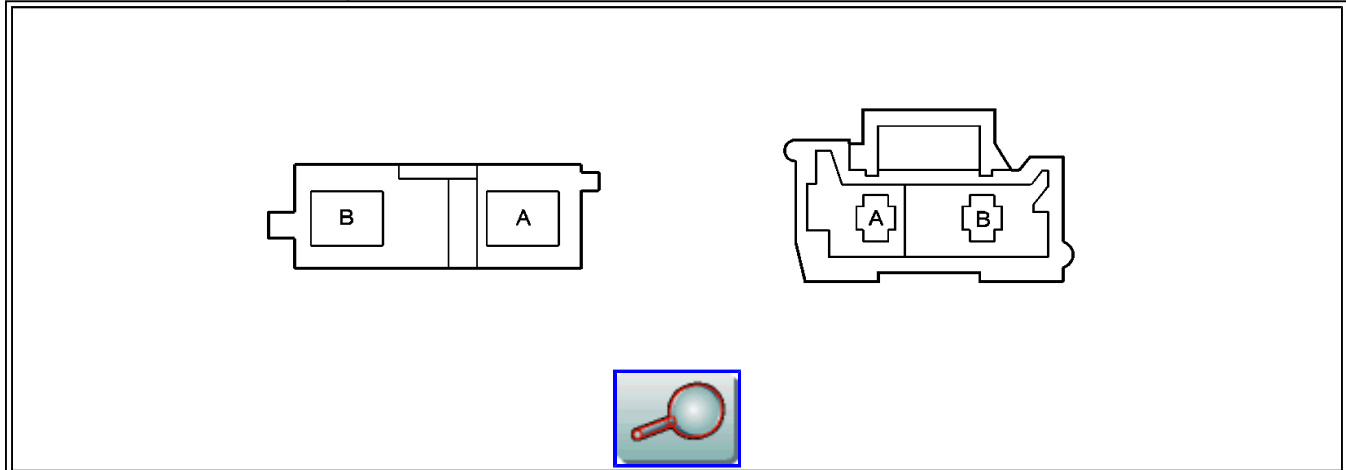

Connector Part Information		<ul style="list-style-type: none"> 12092850 2-Way F Metri-Pack 280.1 Series, Pull - to - Seat (GRY) 		Connector Part Information		<ul style="list-style-type: none"> 12162468 2-Way M Metri-Pack 280.1 Series, Pull - to - Seat (YEL) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	WHT/BLK	1403	SIR Inflator Feed - Passenger	A	WHT/BLK	1403	SIR Inflator Feed - Passenger
B	DK GRN/WHT	1404	SIR Inflator Output - Passenger	B	DK GRN/WHT	1404	SIR Inflator Output - Passenger

C203 (IP Harness to Body Harness)

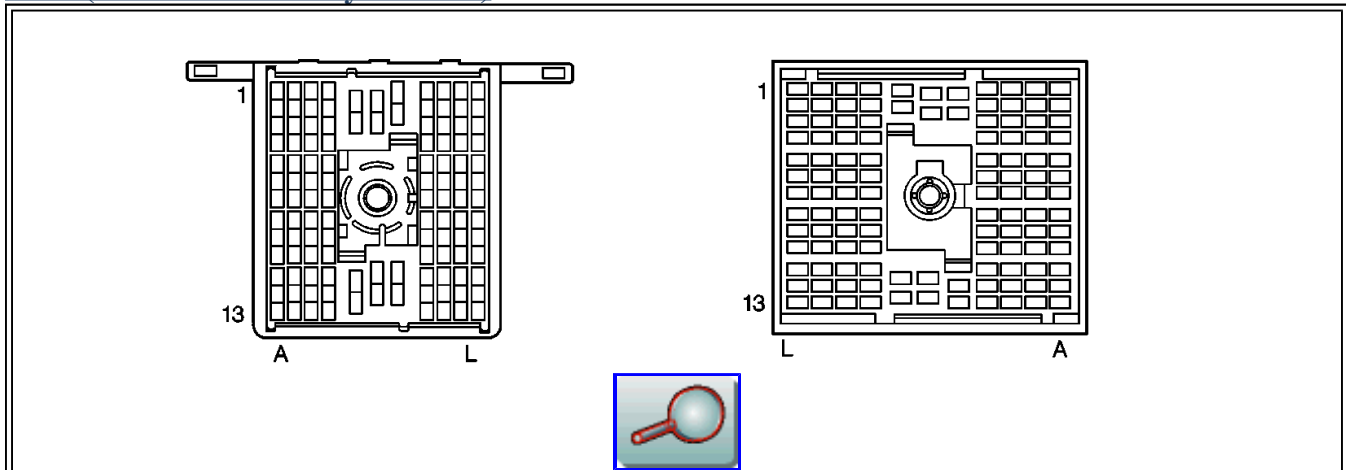

Connector Part Information		<ul style="list-style-type: none"> 15318195 116-Way F Metri-Pack 150,280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12162463 116-Way M Metri-Pack 150,280 Series (BLK) 	
----------------------------	--	---------------------------------------------------------------------------------------------------------------	--	----------------------------	--	---------------------------------------------------------------------------------------------------------------	--


Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A1	LT BLU	115	Speaker Return - Right Rear	A1	LT BLU	115	Speaker Return - Right Rear
A2	DK BLU	46	Speaker Feed - Right Rear	A2	DK BLU	46	Speaker Feed - Right Rear
A3	YEL	116	Speaker Feed - Left Rear	A3	YEL	116	Speaker Feed - Left Rear
A4	BRN	199	Speaker Feed - Left Rear	A4	BRN	199	Speaker Feed - Left Rear
A5	GRY	118	Speaker Return - Left Front	A5	GRY	118	Speaker Return - Left Front
A6	TAN	201	Speaker Feed - Left Front	A6	TAN	201	Speaker Feed - Left Front
A7	DK GRN	117	Speaker Return - Right Front	A7	DK GRN	117	Speaker Return - Right Front
A8	LT GRN	200	Speaker Feed - Right Front	A8	LT GRN	200	Speaker Feed - Right Front
A9	DK GRN	1301	Fuse Output - Retained Accessory Power	A9	DK GRN	1301	Fuse Output - Retained Accessory Power
B1	BRN	41	Fuse Output - Ignition	B1	BRN	41	Fuse Output - Ignition
B4	ORN	840	Fuse Output - Battery	B4	ORN	840	Fuse Output - Battery
B6	WHT	193	Rear Defogger Relay Output - Coil	B6	WHT	193	Rear Defogger Relay Output - Coil
B7	WHT	1390	Ignition Switch Output - Off/Run/Crank	B7	WHT	1390	Ignition Switch Output - Off/Run/Crank
B8	ORN	1740	Fuse Output - Battery	B8	ORN	1740	Fuse Output - Battery
B9	ORN	640	Fuse Output - Battery	B9	ORN	640	Fuse Output - Battery
B10	ORN	240	Fuse Output - Battery	B10	ORN	240	Fuse Output - Battery
B11	ORN	40	Fuse Output - Battery	B11	ORN	40	Fuse Output - Battery
B12	PPL	34	Fog Lamp Feed	B12	PPL	34	Fog Lamp Feed
C2	GRY	391	Rear Window Wiper Switch Output	C2	GRY	391	Rear Window Wiper Switch Output
C4	ORN	52	Blower Switch Output - High (w/Man A/C)	C4	ORN	52	Blower Switch Output - High (w/Man A/C)
C4	--	--	Not Used (w/Auto A/C)	C4	--	--	Not Used (w/Auto A/C)
C5	TAN	63	Blower Switch Output - Med (w/Man A/C)	C5	TAN	63	Blower Switch Output - Med (w/Man A/C)
C5	--	--	Not Used (w/Auto A/C)	C5	--	--	Not Used (w/Auto A/C)
			High Speed Blower				High Speed Blower

C6	BRN	64	Relay Feed - Coil (w/Man A/C)	C6	BRN	64	Relay Feed - Coil (w/Man A/C)
C6	--	--	Not Used (w/Auto A/C)	C6	--	--	Not Used (w/Auto A/C)
C7	LT BLU	72	Blower Switch Output - Medium 2 (w/Man A/C)	C7	LT BLU	72	Blower Switch Output - Medium 2 (w/Man A/C)
C8	LT BLU	203	Air Conditioning Refrigerant High Pressure Cut - Out Switch Feed	C8	LT BLU	203	Air Conditioning Refrigerant High Pressure Cut - Out Switch Feed
C9	LT BLU	706	Mode Valve Solenoid Output - Recirculation	C9	LT BLU	706	Mode Valve Solenoid Output - Recirculation
C10	PPL	361	Mode Valve Solenoid Output - Defrost	C10	PPL	361	Mode Valve Solenoid Output - Defrost
C11	RED	362	Mode Valve Solenoid Output - Panel Vents	C11	RED	362	Mode Valve Solenoid Output - Panel Vents
C12	TAN	363	Mode Valve Solenoid Output - Upper	C12	TAN	363	Mode Valve Solenoid Output - Upper
C13	LT GRN/BLK	366	Mode Valve Solenoid Output - Lower	C13	LT GRN/BLK	366	Mode Valve Solenoid Output - Lower
D2	WHT	1038	Serial Data Signal - Class B - 10400 Baud - Diagnostic	D2	WHT	1038	Serial Data Signal - Class B - 10400 Baud - Diagnostic
D3	BLK	552	Sensor Return	D3	BLK	552	Sensor Return
D4	LT GRN	405	Discharge Air Temperature Sensor Signal - Lower	D4	LT GRN	405	Discharge Air Temperature Sensor Signal - Lower
D5	LT BLU	733	Air Temperature Valve Position Sensor Signal	D5	LT BLU	733	Air Temperature Valve Position Sensor Signal
D6	DK GRN	734	Inside Temperature Sensor Signal	D6	DK GRN	734	Inside Temperature Sensor Signal
D7	DK GRN/WHT	636	Outside Ambient Air Temperature Sensor Signal	D7	DK GRN/WHT	636	Outside Ambient Air Temperature Sensor Signal
D8	PPL/WHT	760	Blower Speed Signal - Speed Control - Low Energy	D8	PPL/WHT	760	Blower Speed Signal - Speed Control - Low Energy
D9	YEL	1791	Air Temperature Valve Motor Return	D9	YEL	1791	Air Temperature Valve Motor Return
D10	DK BLU	1199	Air Temperature Valve Motor Feed	D10	DK BLU	1199	Air Temperature Valve Motor Feed
D11	LT BLU/BLK	1688	Reference Voltage Feed - 5 Volt	D11	LT BLU/BLK	1688	Reference Voltage Feed - 5 Volt

			Reference				Reference
E1	DK GRN	392	Rear Window Washer Pump Motor - Feed	E1	DK GRN	392	Rear Window Washer Pump Motor - Feed
E2	BLK	1050	Ground	E2	BLK	1050	Ground
E11	DK GRN	389	Vehicle Speed Signal - 4000 Pulses Per Mile	E11	DK GRN	389	Vehicle Speed Signal - 4000 Pulses Per Mile
E12	WHT	352	Headlamp Relay Feed - Coil	E12	WHT	352	Headlamp Relay Feed - Coil
F1	PNK	3	Ignition Switch Output - Ignition 1	F1	PNK	3	Ignition Switch Output - Ignition 1
F2	YEL	143	Fuse Output - Accessory	F2	YEL	143	Fuse Output - Accessory
F11	BRN	2409	Fuse Output - Interior Park Lamps	F11	BRN	2409	Fuse Output - Interior Park Lamps
F12	BLK	1050	Ground	F12	BLK	1050	Ground
G1	PPL/WHT	1382	Dimming Signal	G1	PPL/WHT	1382	Dimming Signal
G2	GRY	1220	Fuse Output - Instrument Panel Lamps	G2	GRY	1220	Fuse Output - Instrument Panel Lamps
G11	ORN	54	Door Jamb Switch Signal - Passenger	G11	ORN	54	Door Jamb Switch Signal - Passenger
G12	WHT	156	Courtesy Lamp Output	G12	WHT	156	Courtesy Lamp Output
H9	BRN	2409	Fuse Output - Interior Park Lamps	H9	BRN	2409	Fuse Output - Interior Park Lamps
H13	BLK/WHT	451	Engine Control	H13	BLK/WHT	451	Engine Control
J1	PNK	39	Fuse Output - Ignition	J1	PNK	39	Fuse Output - Ignition
J2	PNK	139	Fuse Output - Ignition	J2	PNK	139	Fuse Output - Ignition
J3	YEL	1139	Fuse Output - Ignition - SIR	J3	YEL	1139	Fuse Output - Ignition - SIR
J6	LT BLU/WHT	1414	Turn Signal Switch Output - Left Front	J6	LT BLU/WHT	1414	Turn Signal Switch Output - Left Front
J7	DK BLU/WHT	1415	Turn Signal Switch Output - Right Front	J7	DK BLU/WHT	1415	Turn Signal Switch Output - Right Front
K1	BRN	341	Fuse Output - Ignition	K1	BRN	341	Fuse Output - Ignition
K2	BRN	241	Fuse Output - Ignition	K2	BRN	241	Fuse Output - Ignition
K3	BRN	441	Fuse Output - Ignition	K3	BRN	441	Fuse Output - Ignition
K4	PNK	1020	Fuse Output - Off/Run/Crank	K4	PNK	1020	Fuse Output - Off/Run/Crank
K6	ORN	1732	Electronic Control Unit Output - 12 Volt - Inadvertant	K6	ORN	1732	Electronic Control Unit Output - 12 Volt - Inadvertant
			Park Lamp Switch				Park Lamp Switch

K11	LT BLU	74	Output	K11	LT BLU	74	Output
L2	BRN/WHT	419	Check Engine Indicator Lamp Output	L2	BRN/WHT	419	Check Engine Indicator Lamp Output
L4	ORN/BLK	1786	Transmission Park/Neutral Signal	L4	ORN/BLK	1786	Transmission Park/Neutral Signal
L5	TAN/WHT	331	Oil Pressure Sensor Signal	L5	TAN/WHT	331	Oil Pressure Sensor Signal
L6	WHT	121	Tachometer Signal	L6	WHT	121	Tachometer Signal
L7	GRY	1036	Serial Data Signal - Class 2 - 10400 Baud - Diagnostic	L7	GRY	1036	Serial Data Signal - Class 2 - 10400 Baud - Diagnostic
L8	BRN	358	SIR Indicator Lamp Output	L8	BRN	358	SIR Indicator Lamp Output
L9	PPL/WHT	1035	Starter Relay Feed - Coil	L9	PPL/WHT	1035	Starter Relay Feed - Coil


C204 (Body Harness to Floor Shifter Harness) (Utility)

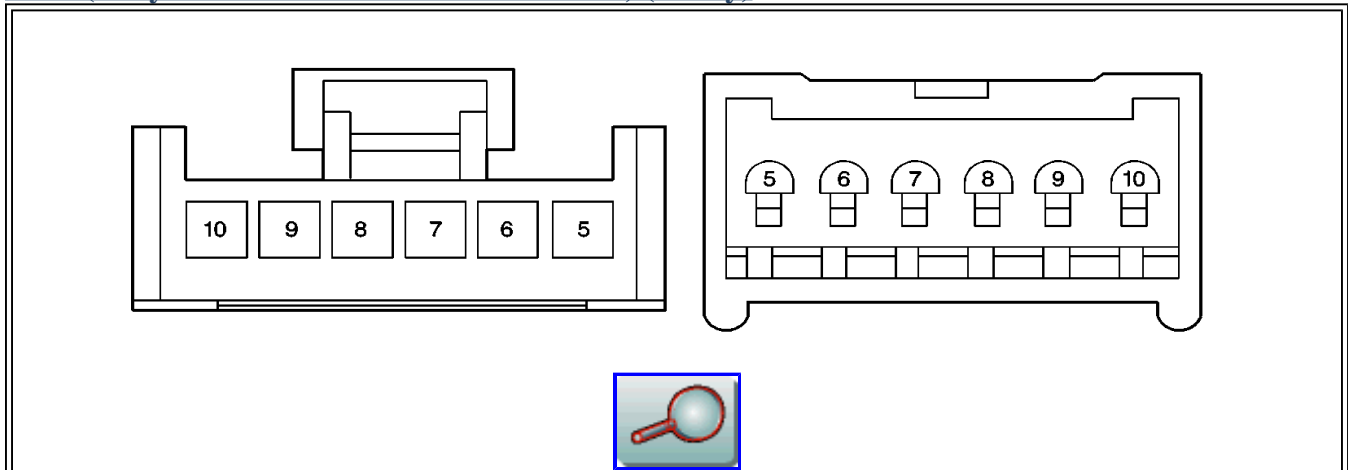

Connector Part Information		<ul style="list-style-type: none"> • 12040953 • 6-Way F Micro-Pack 100 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12040952 • 6-Way M Micro-Pack 100 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
5	BLK	1850	Ground	5	BLK	1850	Ground
6	LT GRN/BLK	584	Fuse Output - Brake Transmission Shift Interlock	6	LT GRN/BLK	584	Fuse Output - Brake Transmission Shift Interlock
7	YEL	1996	Remote Shift Select Signal	7	YEL	1996	Remote Shift Select Signal
8	GRY	1220	Fuse Output - Instrument Panel Lamps	8	GRY	1220	Fuse Output - Instrument Panel Lamps
9	DK GRN/WHT	1135	Brake Transmission Shift Interlock	9	DK GRN/WHT	1135	Brake Transmission Shift Interlock

			Solenoid Feed				Solenoid Feed
10	PNK	1020	Fuse Output - Off/Run/Crank	10	PNK	1020	Fuse Output - Off/Run/Crank

C209

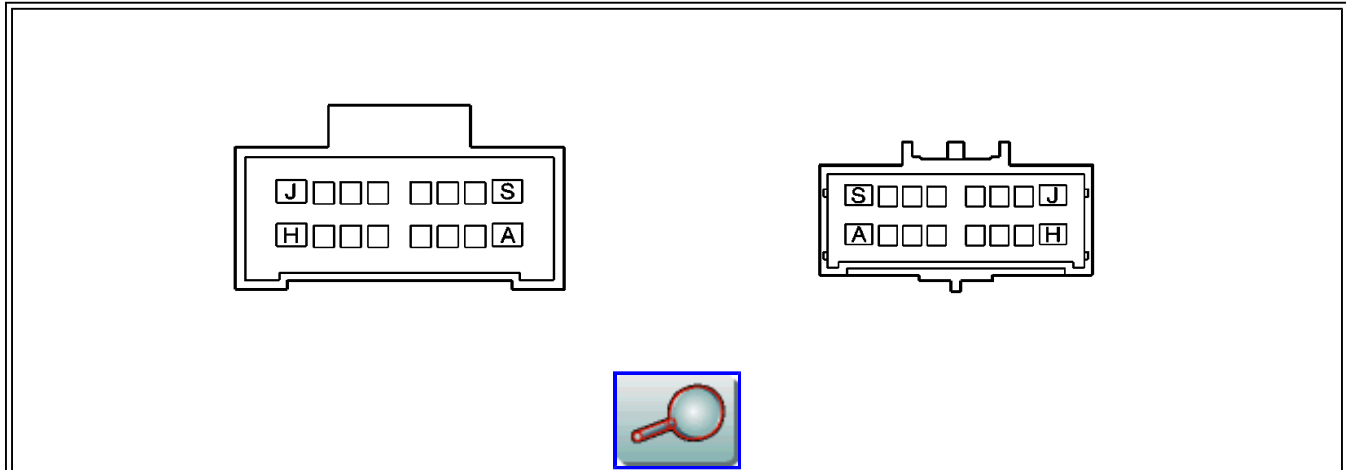


Connector Part Information	<ul style="list-style-type: none"> • 15305133 • 16-Way F Global Technology 150, 280 Series (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 15305132 • 16-Way M Global Technology 150, 280 Series (BLK)
----------------------------	--------------------------------------------------------------------------------------------------------------------------	----------------------------	--------------------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	DK GRN	1001	Fuse Output - Retained Accessory Power	A	DK GRN	1001	Fuse Output - Retained Accessory Power
B	LT GRN	1324	Fuse Output - Backup Lamps	B	LT GRN	1324	Fuse Output - Backup Lamps
C	--	--	Not Used	C	--	--	Not Used
D	DK GRN	734	Inside Temperature Sensor Signal	D	DK GRN	734	Inside Temperature Sensor Signal
E	GRY	1220	Fuse Output - Instrument Panel Lamps - Type III Fuse	E	GRY	1220	Fuse Output - Instrument Panel Lamps - Type III Fuse
F	BLK/WHT	451	Driver Information Display Module Ground	F	BLK/WHT	451	Driver Information Display Module Ground
G	LT GRN/BLK	735	Outside Ambient Air Temperature Signal	G	LT GRN/BLK	735	Outside Ambient Air Temperature Signal
H	BLK	1850	Ground	H	BLK	1850	Ground
J	BLK	552	Sensor Return	J	BLK	552	Sensor Return
K	ORN	1732	Electronic Control Unit Output - 12 Volt - Inadvertant	K	ORN	1732	Electronic Control Unit Output - 12 Volt - Inadvertant
L	WHT	156	Courtesy Lamp Output	L	WHT	156	Courtesy Lamp Output
M	PPL/WHT	1382	Dimming Signal	M	PPL/WHT	1382	Dimming Signal

N	DK GRN/WHT	817	Vehicle Speed Signal - 4000 Pulses Per Mile	N	DK GRN/WHT	817	Vehicle Speed Signal - 4000 Pulses Per Mile
P	DK GRN	1301	Fuse Output - Retained Accessory Power	P	DK GRN	1301	Fuse Output - Retained Accessory Power
R	ORN	40	Fuse Output - Battery	R	ORN	40	Fuse Output - Battery
S	BRN	341	Fuse Output - Ignition	S	BRN	341	Fuse Output - Ignition

C211 (Body Harness to Steering Column Harness 4 Door Utility)

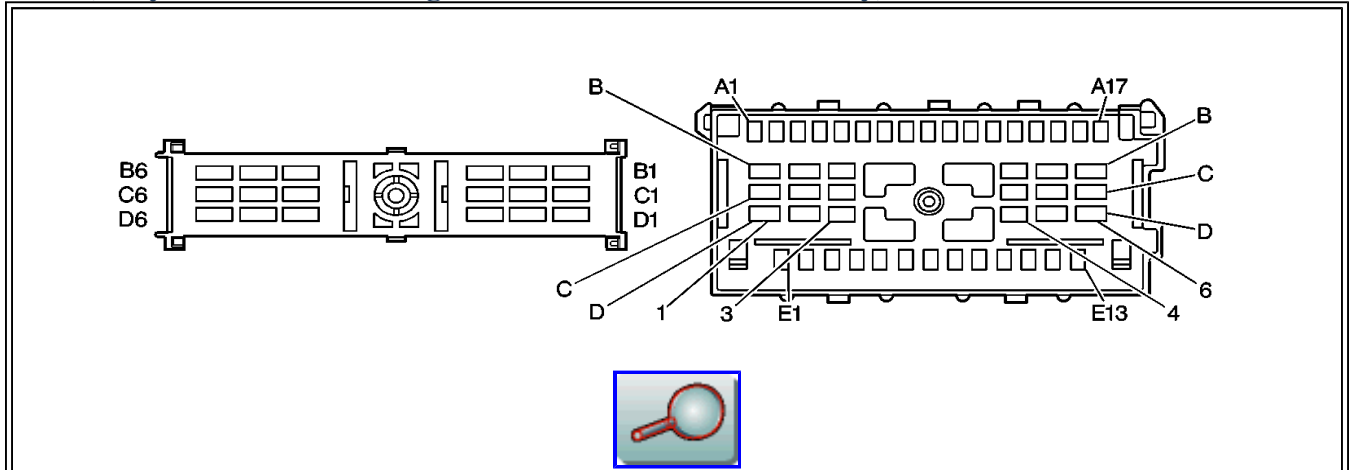


Connector Part Information		<ul style="list-style-type: none"> • 12077822 • 48-Way F Metri-Pack Junction Systems (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12084183 • 48-Way M Metri-Pack Junction Systems (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A1	WHT	17	Stop Lamp Switch Output	A1	WHT	17	Stop Lamp Switch Output
A2	PNK	139	Fuse Output - Ignition	A2	PNK	139	Fuse Output - Ignition
A3	LT BLU	1508	Turn/Hazard Module Feed	A3	LT BLU	1508	Turn/Hazard Module Feed
A4	ORN	140	Fuse Output - Battery	A4	ORN	140	Fuse Output - Battery
A5	PPL	1697	Turn/Hazard Module Output	A5	PPL	1697	Turn/Hazard Module Output
A6	DK BLU/WHT	1415	Turn Signal Switch Output - Right Front	A6	DK BLU/WHT	1415	Turn Signal Switch Output - Right Front
A7	LT BLU/WHT	1414	Turn Signal Switch Output - Left Front	A7	LT BLU/WHT	1414	Turn Signal Switch Output - Left Front
A8	--	--	Not Used	A8	--	--	Not Used
A9	DK GRN/WHT	1932	Transmission Shift Select Switch Signal - Park	A9	DK GRN/WHT	1932	Transmission Shift Select Switch Signal - Park
A10	YEL/BLK	895	HMSL Relay Output-Common Contact	A10	YEL/BLK	895	HMSL Relay Output-Common Contact

A11	BLK	28	Horn Relay Output - Coil	A11	BLK	28	Horn Relay Output - Coil
A12	GRY	397	Cruise Control On Switch Output	A12	GRY	397	Cruise Control On Switch Output
A13	BRN	41	Fuse Output - Ignition	A13	BRN	41	Fuse Output - Ignition
A14	DK BLU	84	Cruise Control Set/Coast Switch Signal	A14	DK BLU	84	Cruise Control Set/Coast Switch Signal
A15	GRY/BLK	87	Cruise Control Resume/Accel Switch Signal	A15	GRY/BLK	87	Cruise Control Resume/Accel Switch Signal
A16	BLK	1850	Ground	A16	BLK	1850	Ground
A17	YEL	1996	Brake Transmission Shift Interlock Solenoid Feed	A17	YEL	1996	Brake Transmission Shift Interlock Solenoid Feed
B1	RED	242	Fuse Output - Battery	B1	RED	242	Fuse Output - Battery
B2	--	--	Not Used	B2	--	--	Not Used
B3	LT GRN	80	Key Reminder Switch Signal	B3	LT GRN	80	Key Reminder Switch Signal
B4	BLK	1850	Ground	B4	BLK	1850	Ground
B5-B6	--	--	Not Used	B5-B6	--	--	Not Used
C1	WHT	1390	Ignition Switch Output - Off/Run/Crank	C1	WHT	1390	Ignition Switch Output - Off/Run/Crank
C2	RED/WHT	812	Reference Voltage Feed - 12 Volt Reference	C2	RED/WHT	812	Reference Voltage (Passlock™) Feed - 12 Volt Reference
C3	--	--	Not Used	C3	--	--	Not Used
C4	ORN/BLK	1057	Sensor Return	C4	ORN/BLK	1057	Sensor Return (Passlock™)
C5	PNK	3	Ignition Switch Output	C5	PNK	3	Ignition Switch Output
C6	ORN	300	Ignition Switch Output	C6	ORN	300	Ignition Switch Output
D1	YEL	5	Ignition Switch Output - Crank	D1	YEL	5	Ignition Switch Output - Crank
D2	RED	342	Ignition Switch Output - Off/Run/Crank	D2	RED	342	Ignition Switch Output - Off/Run/Crank
D3	YEL	1836	Magnetic Rotation Detection Sensor Signal	D3	YEL	1836	Passlock™ Data Signal

D4	--	--	Not Used	D4	--	--	Not Used
D5	ORN	740	Fuse Output - Battery	D5	ORN	740	Fuse Output - Battery
D6	BRN	4	Ignition Switch Output - Accessory	D6	BRN	4	Ignition Switch Output - Accessory
E1	GRY	1696	Turn/Hazard Module Feed - Secondary	E1	GRY	1696	Turn/Hazard Module Feed - Secondary
E2	BLK	1850	Ground	E2	BLK	1850	Ground
E3	PPL	92	Windshield Wiper Motor Feed - High Speed	E3	PPL	92	Windshield Wiper Motor Feed - High Speed
E4	YEL	143	Fuse Output - Accessory	E4	YEL	143	Fuse Output - Accessory
E5	GRY	112	Windshield Wiper Switch Signal - Low/Pulse	E5	GRY	112	Windshield Wiper Switch Signal - Low/Pulse
E6	DK GRN/WHT	1419	Turn Signal Switch Output - Right Rear	E6	DK GRN/WHT	1419	Turn Signal Switch Output - Right Rear
E7	YEL/BLK	1418	Turn Signal Switch Output - Left Rear	E7	YEL/BLK	1418	Turn Signal Switch Output - Left Rear
E8	DK GRN	113	Windshield Wiper Switch Signal - On	E8	DK GRN	113	Windshield Wiper Switch Signal - On
E9	RED	228	Windshield Washer Pump Motor Feed	E9	RED	228	Windshield Washer Pump Motor Feed
E10	--	--	Not Used	E10	--	--	Not Used
E11	PPL	524	Headlamp Dimmer Switch Output - High Beam	E11	PPL	524	Headlamp Dimmer Switch Output - High Beam
E12	YEL	525	Headlamp Dimmer Switch Output - Low Beam	E12	YEL	525	Headlamp Dimmer Switch Output - Low Beam
E13	YEL	10	Headlamp Switch Output	E13	YEL	10	Headlamp Switch Output
E13	BLK	1850	Headlamp Switch Output (Envoy Only)	E13	BLK	1850	Headlamp Switch Output (Envoy Only)

C211 (Body Harness to Steering Column Harness Pickup)

--	--	--	--	--	--	--	--

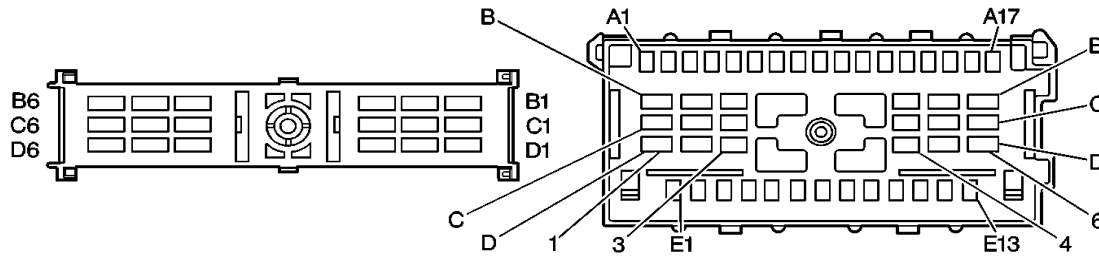


Connector Part Information		<ul style="list-style-type: none"> • 12077822 • 48-Way F Metri-Pack Junction Systems (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12084183 • 48-Way M Metri-Pack Junction Systems (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A1	WHT	17	Stop Lamp Switch Output	A1	WHT	17	Stop Lamp Switch Output
A2	PNK	139	Fuse Output - Ignition 1 - Type III Fuse	A2	PNK	139	Fuse Output - Ignition 1 - Type III Fuse
A3	LT BLU	1508	Turn/Hazard Module Feed	A3	LT BLU	1508	Turn/Hazard Module Feed
A4	ORN	140	Fuse Output - Battery - Type III Fuse	A4	ORN	140	Fuse Output - Battery - Type III Fuse
A5	PPL	1697	Turn/Hazard Module Output	A5	PPL	1697	Turn/Hazard Module Output
A6	DK BLU/WHT	1415	Turn Signal Switch Output - Right Front	A6	DK BLU/WHT	1415	Turn Signal Switch Output - Right Front
A7	LT BLU/WHT	1414	Turn Signal Switch Output - Left Front	A7	LT BLU/WHT	1414	Turn Signal Switch Output - Left Front
A8	--	--	Not Used	A8	--	--	Not Used
A9	ORN/BLK	1786	Transmission Park/Neutral Signal	A9	ORN/BLK	1786	Transmission Park/Neutral Signal
A10	YEL	895	HMSL Relay Output - Common Contact	A10	YEL	895	HMSL Relay Output - Common Contact
A11	BLK	28	Horn Relay Output - Coil	A11	BLK	28	Horn Relay Output - Coil
A12	GRY	397	Cruise Control On Switch Output	A12	GRY	397	Cruise Control On Switch Output
A13	BRN	41	Fuse Output - Ignition	A13	BRN	41	Fuse Output - Ignition
A14	DK BLU	84	Cruise Control Set/Coast Switch Signal	A14	DK BLU	84	Cruise Control Set/Coast Switch Signal

A15	GRY/BLK	87	Cruise Control Resume/Accel Switch Signal	A15	GRY/BLK	87	Cruise Control Resume/Accel Switch Signal
A16	BLK	1850	Ground	A16	BLK	1850	Ground
A17	DK GRN/WHT	1135	Brake Transmission Shift Interlock Solenoid Feed	A17	DK GRN/WHT	1135	Brake Transmission Shift Interlock Solenoid Feed
B1	RED	242	Fuse Output - Battery	B1	RED	242	Fuse Output - Battery
B2	--	--	Not Used	B2	--	--	Not Used
B3	LT GRN	80	Key Reminder Switch Signal	B3	LT GRN	80	Key Reminder Switch Signal
B4	BLK	1850	Ground	B4	BLK	1850	Ground
B5-B6	--	--	Not Used	B5-B6	--	--	Not Used
C1	WHT	1390	Ignition Switch Output - Off/Run/Crank	C1	WHT	1390	Ignition Switch Output - Off/Run/Crank
C2	RED/WHT	812	Reference Voltage Feed - 12 Volt Reference	C2	RED/WHT	812	Reference Voltage Feed - 12 Volt Reference
C3	--	--	Not Used	C3	--	--	Not Used
C4	ORN/BLK	1057	Sensor Return	C4	ORN/BLK	1057	Sensor Return
C5	PNK	3	Ignition Switch Output	C5	PNK	3	Ignition Switch Output
C5	PNK	3	Ignition Switch Output	C5	PNK	3	Ignition Switch Output
C6	ORN	300	Ignition Switch Output	C6	ORN	300	Ignition Switch Output
D1	GRY	1696	Turn/Hazard Module Feed - Secondary	D1	GRY	1696	Turn/Hazard Module Feed - Secondary
D1	YEL	5	Ignition Switch Output - Crank	D1	YEL	5	Ignition Switch Output - Crank
D2	RED	342	Fuse Output - Battery	D2	RED	342	Fuse Output - Battery
D3	YEL	1836	Magnetic Rotation Detection Sensor Signal	D3	YEL	1836	Magnetic Rotation Detection Sensor Signal
D5	ORN	740	Fuse Output - Battery	D5	ORN	740	Fuse Output - Battery
D6	BRN	4	Ignition Switch Output - Accessory	D6	BRN	4	Ignition Switch Output - Accessory
E1	GRY	1696	Turn/Hazard Module Feed - Secondary	E1	GRY	1696	Turn/Hazard Module Feed - Secondary
E2	BLK	1850	Ground	E2	BLK	1850	Ground
			Windshield Wiper				Windshield Wiper

E3	PPL	92	Motor Feed - High Speed	E3	PPL	92	Motor Feed - High Speed
E4	YEL	143	Fuse Output - Accessory	E4	YEL	143	Fuse Output - Accessory
E5	GRY	112	Fuse Output - Accessory - Type III Fuse	E5	GRY	112	Fuse Output - Accessory - Type III Fuse
E6	DK GRN/WHT	1419	Turn Signal Switch Output - Right Rear	E6	DK GRN/WHT	1419	Turn Signal Switch Output - Right Rear
E7	YEL/BLK	1418	Turn Signal Switch Output - Left Rear	E7	YEL/BLK	1418	Turn Signal Switch Output - Left Rear
E8	DK GRN	113	Windshield Wiper Switch Signal - On	E8	DK GRN	113	Windshield Wiper Switch Signal - On
E9	RED	228	Windshield Washer Pump Motor Feed	E9	RED	228	Windshield Washer Pump Motor Feed
E10	--	--	Not Used	E10	--	--	Not Used
E11	PPL	524	Headlamp Dimmer Switch Output - High Beam	E11	PPL	524	Headlamp Dimmer Switch Output - High Beam
E11	BLK/WHT	1969	High Beam Headlamp Relay Output - Coil (Envoy Only)	E11	BLK/WHT	1969	High Beam Headlamp Relay Output - Coil (Envoy Only)
E12	YEL	525	Headlamp Dimmer Switch Output - Low Beam	E12	YEL	525	Headlamp Dimmer Switch Output - Low Beam
E13	YEL	10	Headlamp Switch Output	E13	YEL	10	Headlamp Switch Output


C214 (Inline to Steering Column Harness - SIR)

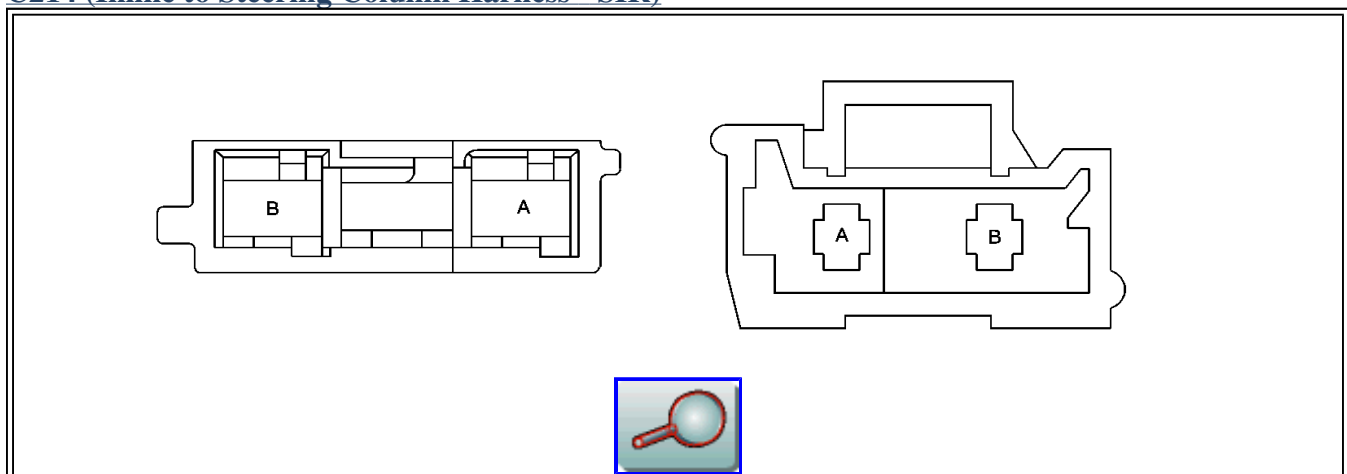

Connector Part Information		<ul style="list-style-type: none"> • 12092865 • 2-Way F Metri-Pack 280 Series (GRY) 		Connector Part Information		<ul style="list-style-type: none"> • 12162317 • 2-Way M Metri-Pack 280 Series (YEL) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function


A	WHT	347	SIR Inflator Feed - Driver	A	WHT	347	SIR Inflator Feed - Driver
B	DK GRN/WHT	348	SIR Inflator Output - Driver	B	DK GRN/WHT	348	SIR Inflator Output - Driver

C217 (Body Harness to IP Harness)

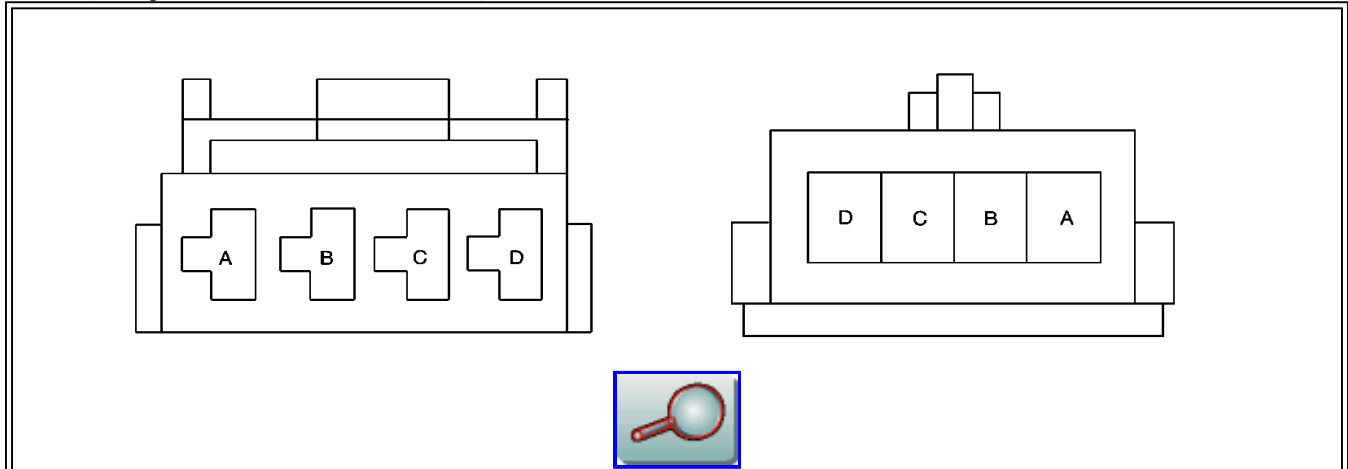

Connector Part Information		<ul style="list-style-type: none"> 12015664 4-Way F Metri-Pack 630 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12052623 4-Way M Metri-Pack 630 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BRN	4	Ignition Switch Output - Accessory	A	BRN	4	Ignition Switch Output - Accessory
B	DK BLU	75	Delayed Accessory Bus Relay Output - Common Contact	B	DK BLU	75	Delayed Accessory Bus Relay Output - Common Contact
C	ORN	300	Ignition Switch Output	C	ORN	300	Ignition Switch Output
D	RED	642	Fuse Output - Battery	D	RED	642	Fuse Output - Battery


C223 (Body Harness to Auxiliary Power Tray) (Extended Cab)

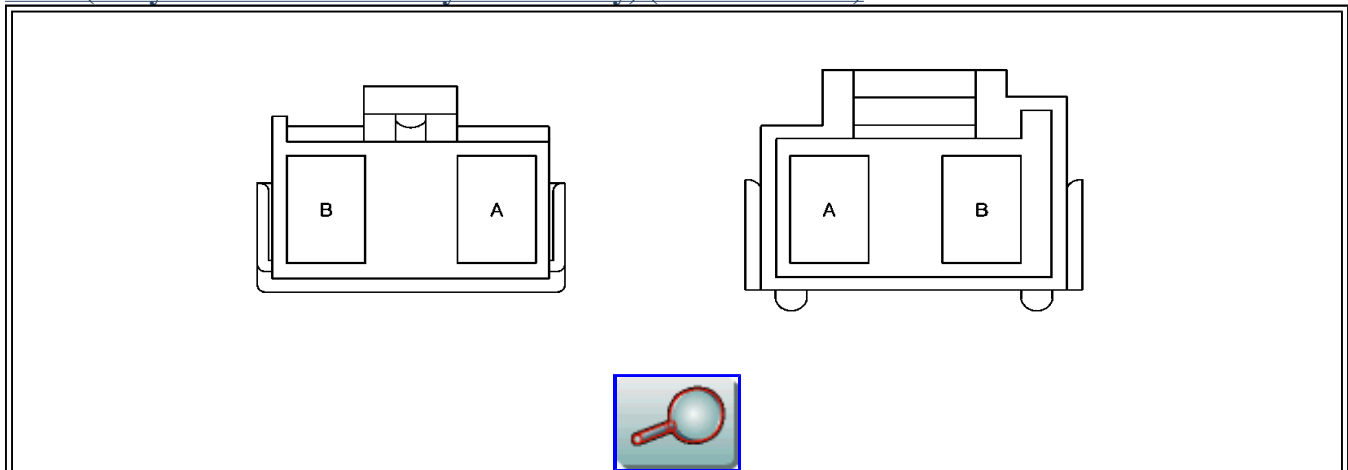

Connector Part Information		<ul style="list-style-type: none"> 12015199 2-Way F Metri-Pack 280 Series (NAT) 		Connector Part Information		<ul style="list-style-type: none"> 12015271 2-Way M Metri-Pack 280 Series (NAT) 	
----------------------------	--	---------------------------------------------------------------------------------------------------------	--	----------------------------	--	---------------------------------------------------------------------------------------------------------	--

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	ORN	1040	Fuse Output - Battery - Type III Fuse	A	ORN	1040	Fuse Output - Battery - Type III Fuse
B	BLK	1050	Ground	B	BLK	1050	Ground


C224 (Envoy Only)

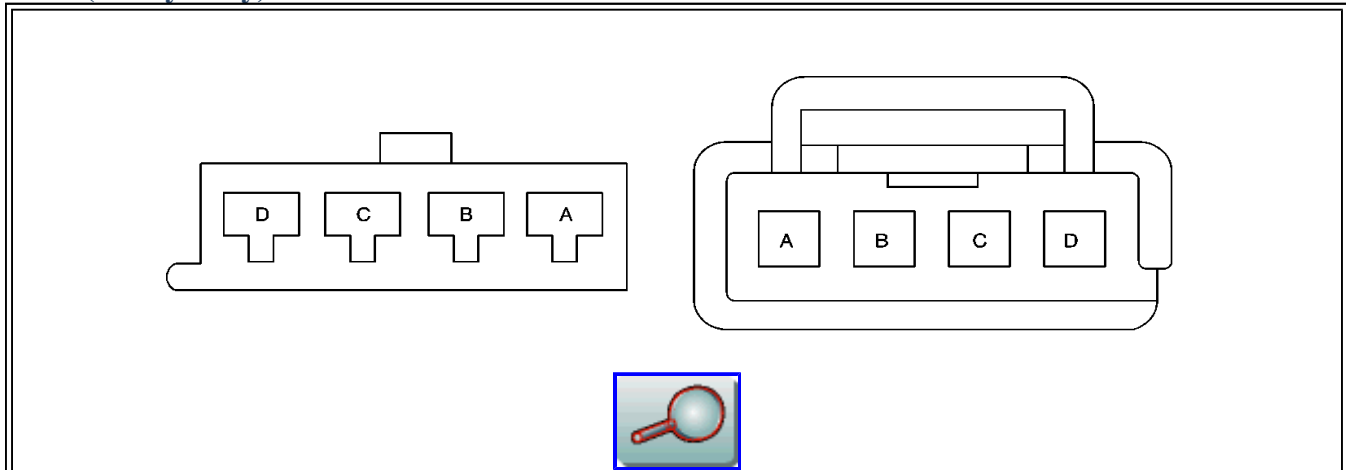

Connector Part Information	<ul style="list-style-type: none"> • 12092162 • 4-Way F Metri-Pack 150 Series (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12162477 • 4-Way M Metri-Pack 150 Series (BLK)
----------------------------	-------------------------------------------------------------------------------------------------------------	----------------------------	-------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	ORN	640	Fuse Output - Battery	A	ORN	640	Fuse Output - Battery
B	BLK	1050	Ground	B	BLK	1050	Ground
C	BRN	2409	Fuse Output - Interior Park Lamps	C	BRN	2409	Fuse Output - Interior Park Lamps
D	BLK	1050	Ground	D	BLK	1050	Ground


C229

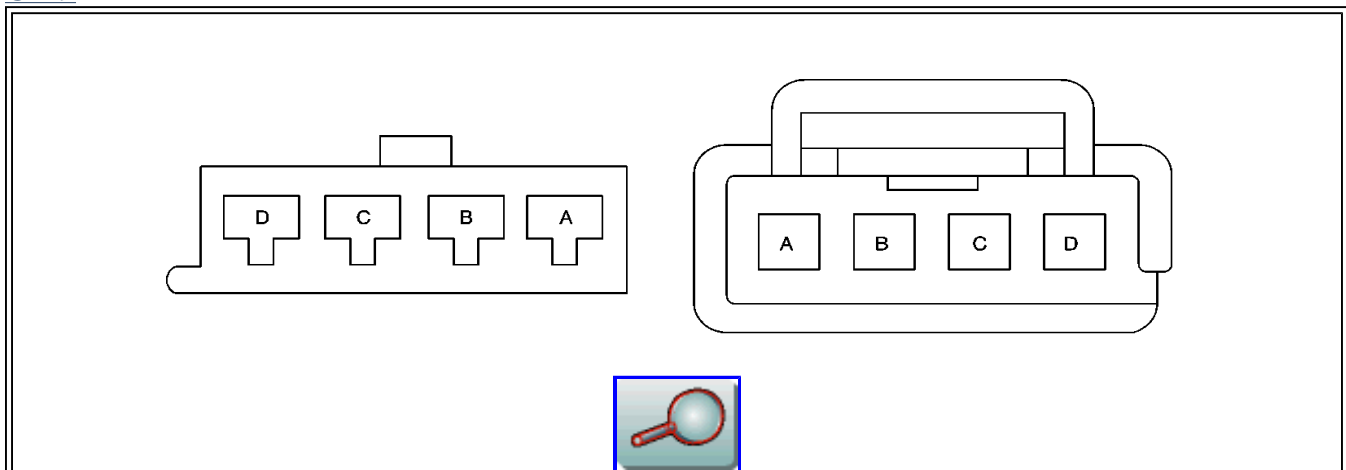

Connector Part Information	<ul style="list-style-type: none"> • 12092162 • 4-Way F Metri-Pack 150 Series (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12092163 • 4-Way M Metri-Pack 150 Series (BLK)
----------------------------	-------------------------------------------------------------------------------------------------------------	----------------------------	-------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A-B	--	--	Not Used	A-B	--	--	Not Used
C	Bare	813	Drain Wire Return	C	Bare	813	Drain Wire Return
D	GRY	655	Cellular Telephone Microphone Return	D	GRY	655	Cellular Telephone Microphone Return


C300 (Dome Lamp Harness to Sunroof Harness) (Utility)

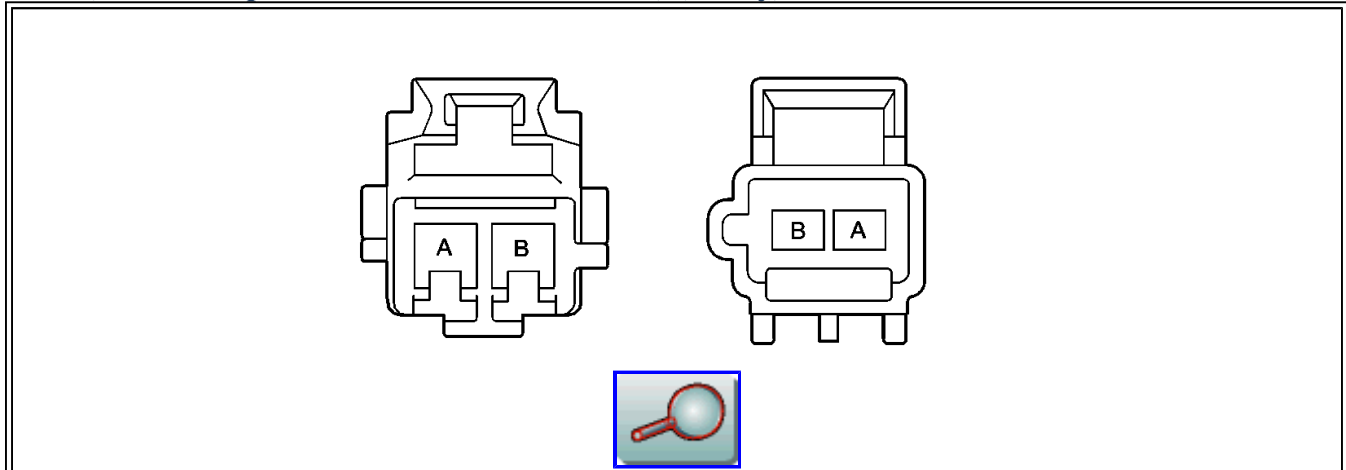

Connector Part Information	<ul style="list-style-type: none"> • 12129081 • 2-Way F Metri-Pack 280 Series, Flexlocked (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12129155 • 2-Way M Metri-Pack 280 Series, Flexlocked (BLK)
----------------------------	-------------------------------------------------------------------------------------------------------------------------	----------------------------	-------------------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	DK GRN	1001	Fuse Output - Retained Accessory Power	A	YEL	1001	Fuse Output - Retained Accessory Power
B	BLK	1850	Ground	B	BLK	1850	Ground


C315 (Body Harness to Passenger Seat Assembly Pigtail Connector) (4-Door Utility with Power Seats)

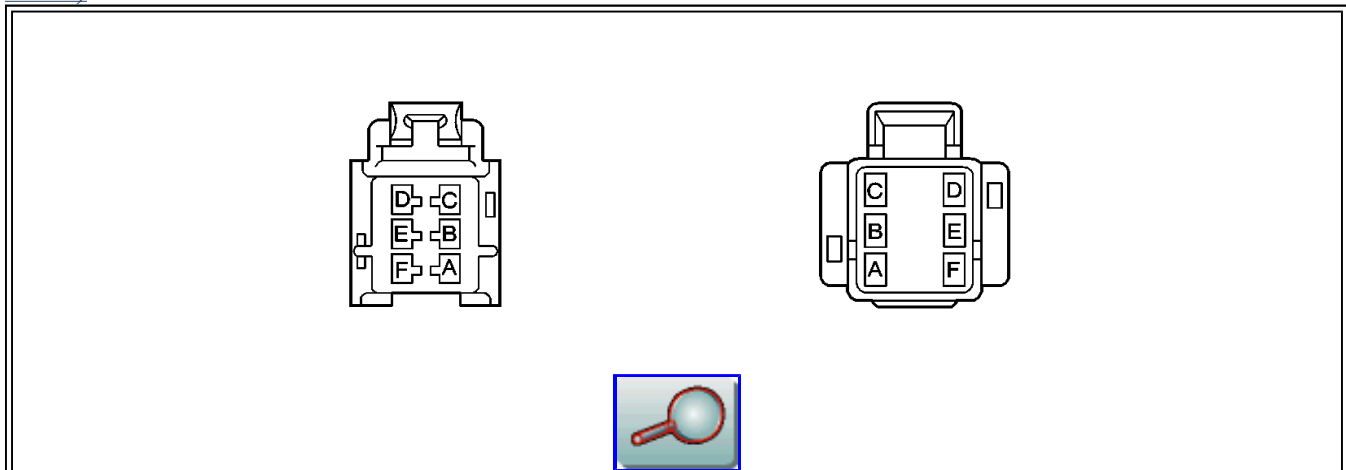

Connector Part Information	<ul style="list-style-type: none"> • 12064752 • 6-Way F Metri-Pack 280 Series (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12064754 • 6-Way M Metri-Pack 280 Series (BLK)
----------------------------	-------------------------------------------------------------------------------------------------------------	----------------------------	-------------------------------------------------------------------------------------------------------------


Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BRN	41	Fuse Output - Ignition	A	BRN	41	Fuse Output - Ignition
B	BLK	1350	Ground	B	BLK	1350	Ground
C	ORN	1440	Fuse Output - Battery	C	ORN	1440	Fuse Output - Battery
D	ORN/BLK	2240	Fuse Output - Battery	D	ORN/BLK	2240	Fuse Output - Battery
E-F	--	--	Not Used	E-F	--	--	Not Used


C317 (Utility Body Harness to Driver's Seat Assembly Pigtail Connector)

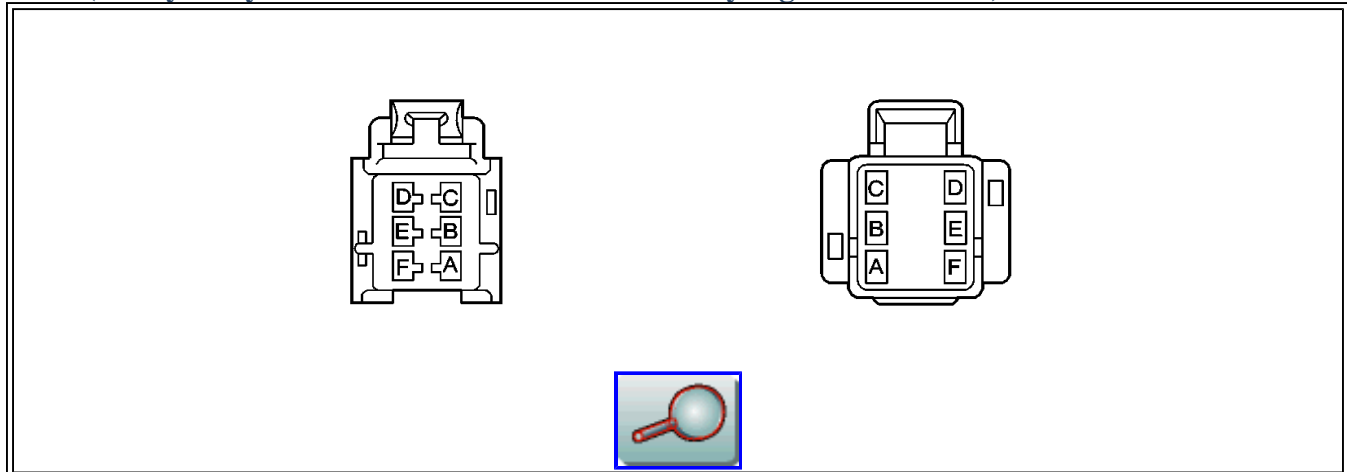

Connector Part Information		<ul style="list-style-type: none"> 12064752 6-Way F Metri-Pack 280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12064754 6-Way M Metri-Pack 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	-	-	Not Used	A	-	-	Not Used
B	BLK	1850	Ground	B	BLK	1850	Ground
C	ORN	1440	Fuse Output - Battery - Type III Fuse	C	ORN	1440	Fuse Output - Battery - Type III Fuse
D	-	-	Not Used	D	-	-	Not Used
E	BLK/WHT	238	Seat Belt Switch Signal	E	BLK/WHT	238	Seat Belt Switch Signal
F	-	-	Not Used	F	-	-	Not Used


C401 (Chassis Harness to Tail Lamp Harness) (Pickup)



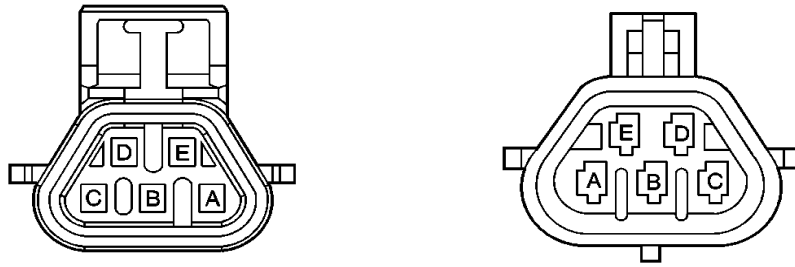

Connector Part Information		<ul style="list-style-type: none"> • 12124031 • 5-Way F Metri-Pack, Sealed 150 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12103974 • 5-Way M Metri-Pack, Sealed 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BRN	2509	Fuse Output - Park Lamp - Left Rear - Type III Fuse	A	BRN	2509	Fuse Output - Park Lamp - Left Rear - Type III Fuse
B	LT GRN	1324	Fuse Output - Backup Lamps - Type III Fuse	B	LT GRN	1324	Fuse Output - Backup Lamps - Type III Fuse
C	DK GRN	619	Fuse Output - Turn/Stop Lamp - Right Rear - Type III Fuse	C	DK GRN	619	Fuse Output - Turn/Stop Lamp - Right Rear - Type III Fuse
D	YEL	618	Fuse Output - Turn/Stop Lamp - Left Rear - Type III Fuse	D	YEL	618	Fuse Output - Turn/Stop Lamp - Left Rear - Type III Fuse
E	BRN/WHT	2609	Fuse Output - Park Lamp - Right Rear - Type III Fuse	E	BRN/WHT	2609	Fuse Output - Park Lamp - Right Rear - Type III Fuse


C402 (Body Harness to RH Tail Lamp Harness) (Utility)

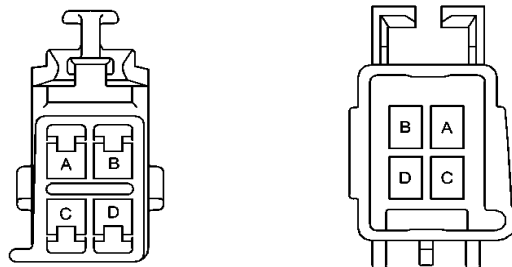

Connector Part	<ul style="list-style-type: none"> • 12129136 	Connector Part	<ul style="list-style-type: none"> • 12124557
----------------	--------------------------------------------------------------	----------------	--------------------------------------------------------------


Information				Information			
<ul style="list-style-type: none"> 4-Way F Metri-Pack 280 Series (BLK) 				<ul style="list-style-type: none"> 4-Way M Metri-Pack 280 Series (BLK) 			
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	LT GRN	1324	Fuse Output - Backup Lamps	A	LT GRN	1324	Fuse Output - Backup Lamps
B	BRN/WHT	2609	Fuse Output - Park Lamp - Right Rear	B	BRN/WHT	2609	Fuse Output - Park Lamp - Right Rear
C	DK GRN	619	Fuse Output - Turn/Stop Lamp - Right Rear	C	DK GRN	619	Fuse Output - Turn/Stop Lamp - Right Rear
D	BLK	1350	Ground	D	BLK	1350	Ground


C403 (Body Harness to LH Tail Lamp Harness) (Utility)

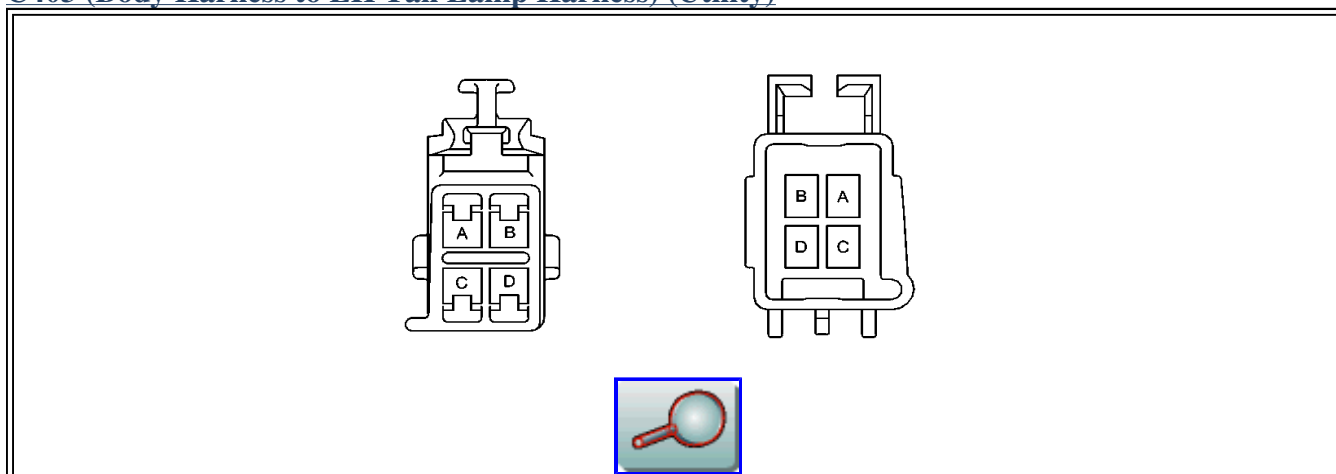

Connector Part Information				Connector Part Information			
<ul style="list-style-type: none"> 12129136 4-Way F Metri-Pack 280 Series (BLK) 				<ul style="list-style-type: none"> 12124557 4-Way M Metri-Pack 280 Series (BLK) 			
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	LT GRN	1324	Fuse Output - Backup Lamps	A	LT GRN	1324	Fuse Output - Backup Lamps
B	BRN	2509	Fuse Output - Park Lamp - Left Rear	B	BRN	2509	Fuse Output - Park Lamp - Left Rear
C	YEL	618	Fuse Output - Turn/Stop Lamp - Left Rear	C	YEL	618	Fuse Output - Turn/Stop Lamp - Left Rear
D	BLK	1350	Ground	D	BLK	1350	Ground

C404 (Body Harness to LH RR Door Harness) (4-Door Utility)



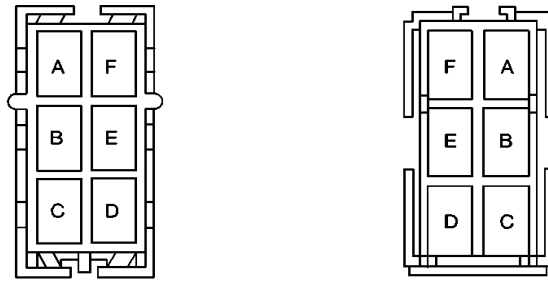

Connector Part Information		<ul style="list-style-type: none"> • 12034482 • 6-Way F Metri-Pack 280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12034481 • 6-Way M Metri-Pack 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	DK GRN	168	Power Window Master Switch Output - Left Rear Window	A	DK GRN	168	Power Window Master Switch Output - Left Rear Window
B	DK BLU	1307	Power Window Master Switch Output - Lockout	B	DK BLU	1307	Power Window Master Switch Output - Lockout
C	TAN	294	Power Door Lock Motor Feed - Unlock	C	TAN	294	Power Door Lock Motor Feed - Unlock
D	--	--	Not Used	D	--	--	Not Used
E	PPL	169	Power Window Master Switch Output - Left Rear Window	E	PPL	169	Power Window Master Switch Output - Left Rear Window
F	GRY	295	Power Door Lock Motor Feed - Lock	F	GRY	295	Power Door Lock Motor Feed - Lock


C405 (Body Harness to LH RR Door Harness) (4-Door Utility)



Connector Part Information		<ul style="list-style-type: none"> • 12059247 • 2-Way F Metri-Pack 150 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12059250 • 2-Way M Metri-Pack 150 Series (BLK) 	

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	YEL	116	Speaker Return - Left Rear	A	YEL	116	Speaker Return - Left Rear
B	BRN	199	Speaker Feed - Left Rear	B	BRN	199	Speaker Feed - Left Rear


C406 (Body Harness to RH RR Door Harness) (4-Door Utility)


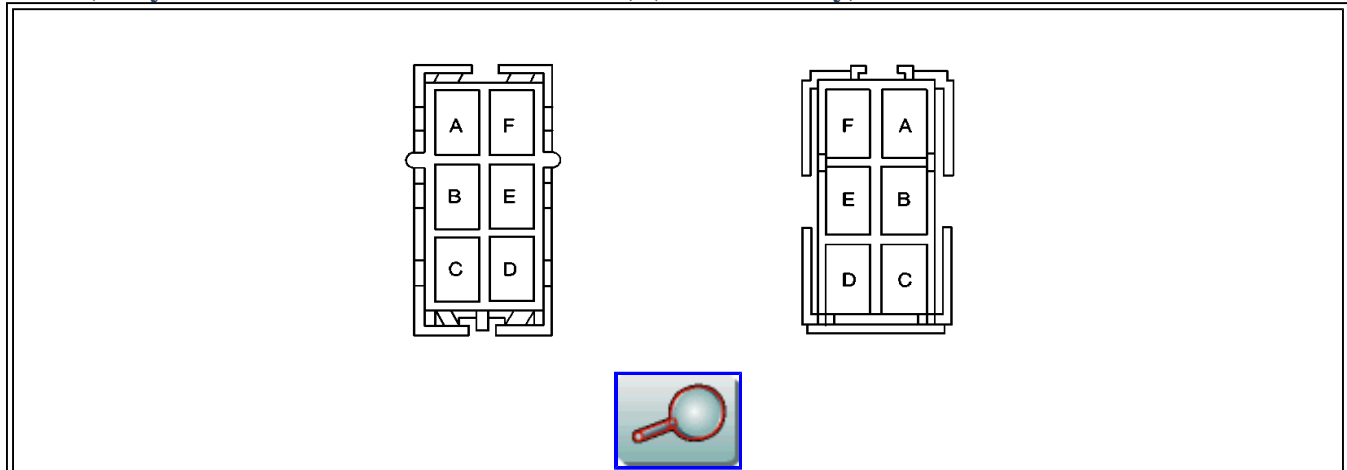


Connector Part Information	<ul style="list-style-type: none"> • 12034482 • 6-Way F Metri-Pack 280 Series (BLK) 	Connector Part Information	<ul style="list-style-type: none"> • 12034481 • 6-Way M Metri-Pack 280 Series (BLK)
----------------------------	-------------------------------------------------------------------------------------------------------------	----------------------------	-------------------------------------------------------------------------------------------------------------

Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	LT GRN	170	Power Window Master Switch Output - Right Rear Window	A	LT GRN	170	Power Window Master Switch Output - Right Rear Window
B	DK BLU	1307	Power Window Master Switch Output - Lockout	B	DK BLU	1307	Power Window Master Switch Output - Lockout
C	TAN	294	Power Door Lock Motor Feed - Unlock	C	TAN	294	Power Door Lock Motor Feed - Unlock
D	--	--	Not Used	D	--	--	Not Used
E	PPL	171	Power Window Master Switch Output - Right Rear Window	E	PPL	171	Power Window Master Switch Output - Right Rear Window
F	GRY	295	Power Door Lock Motor Feed - Lock	F	GRY	295	Power Door Lock Motor Feed - Lock



C407 (Body Harness to RH RR Door Harness) (4-Door Utility)



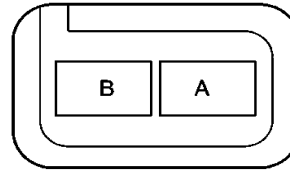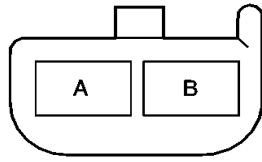


Connector Part Information		<ul style="list-style-type: none"> • 12059247 • 2-Way F Metri-Pack 150 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12059250 • 2-Way M Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	LT BLU	115	Speaker Return - Right Rear	A	LT BLU	115	Speaker Return - Right Rear
B	DK BLU	46	Speaker Feed - Right Rear	B	DK BLU	46	Speaker Feed - Right Rear

C411 (Body Harness to Endgate Harness) (Utility)

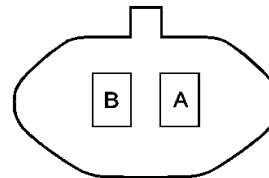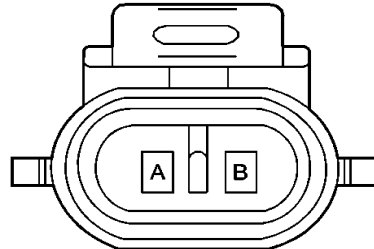

Connector Part Information		<ul style="list-style-type: none"> • 12052641 • 2-Way F Metri-Pack 150 Series, Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12162000 • 2-Way M Metri-Pack 150 Series, Sealed (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	DK BLU/WHT	727	Endgate Ajar Switch Signal	A	DK BLU/WHT	727	Endgate Ajar Switch Signal
B	BLK	1350	Ground	B	BLK	1350	Ground

C412 (Body Harness to Endgate Harness) (Utility)

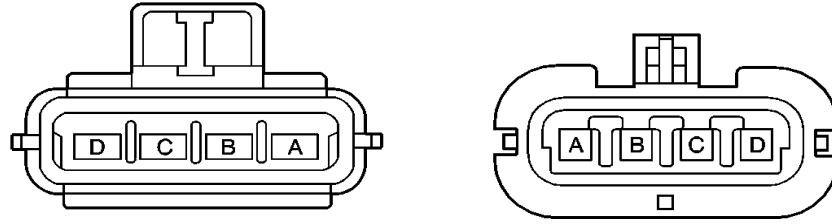

Connector Part Information		<ul style="list-style-type: none"> • 12129565 • 4-Way F Metri-Pack 280 Series, Sealed (GRY) 		Connector Part Information		<ul style="list-style-type: none"> • 12129600 • 4-Way M Metri-Pack 280 Series, Sealed (GRY) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	ORN	1240	Fuse Output - Battery	A	ORN	1240	Fuse Output - Battery
B	BLK	1350	Ground	B	BLK	1350	Ground
C	GRY	391	Rear Window Wiper Switch Output	C	GRY	391	Rear Window Wiper Switch Output
D	DK GRN	392	Rear Window Washer Pump Motor - Feed	D	DK GRN	392	Rear Window Washer Pump Motor - Feed


C413 (Body Harness to Endgate Harness)



Connector Part Information		<ul style="list-style-type: none"> • 12052848 • 6-Way F Metri-Pack 150 Series, Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12124107 • 6-Way M Metri-Pack 150 Series, Sealed (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BLK/WHT	56	Endgate Release Motor Feed	A	BLK/WHT	56	Endgate Release Motor Feed
B	BLK	1350	Ground	B	BLK	1350	Ground
			Power Door Lock				Power Door Lock

C	WHT	194	Relay Feed - Unlock Coil	C	WHT	194	Relay Feed - Unlock Coil
D	LT BLU	195	Power Door Lock Relay Feed - Lock Coil	D	LT BLU	195	Power Door Lock Relay Feed - Lock Coil
E	WHT/BLK	1221	Liftgate Release Switch Output	E	WHT/BLK	1221	Liftgate Release Switch Output
F	ORN	840	Fuse Output - Battery	F	ORN	840	Fuse Output - Battery

C426 (Body Harness to Liftglass Harness In - Line Connector) (Utility)

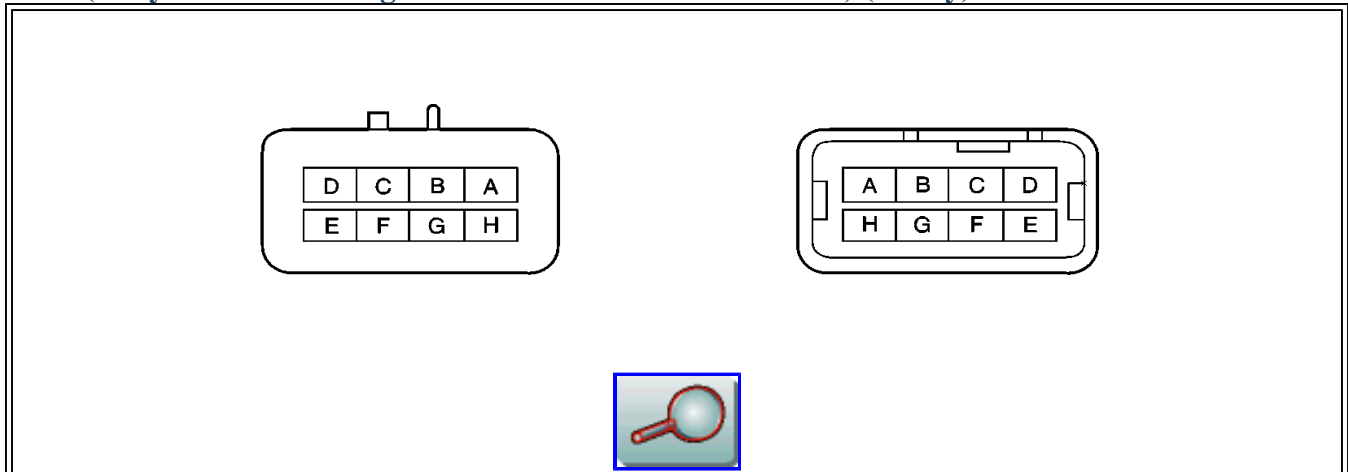

Connector Part Information		<ul style="list-style-type: none"> • 12047886 • 8-Way F Metri-Pack 150 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12045688 • 8-Way M Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	WHT	194	Power Door Unlock Relay Feed - Unlock Coil	A	WHT	194	Power Door Unlock Relay Feed - Unlock Coil
B	LT BLU	195	Power Door Lock Relay Feed - Lock Coil	B	LT BLU	195	Power Door Lock Relay Feed - Lock Coil
C	BLK/WHT	56	Liftgate Release Motor Feed	C	BLK/WHT	56	Liftgate Release Motor Feed
D	BLK	1350	Ground	D	BLK	1350	Ground
E	ORN	840	Fuse Output - Battery	E	ORN	840	Fuse Output - Battery
F	WHT/BLK	1221	Liftgate Release Switch Output	F	WHT/BLK	1221	Liftgate Release Switch Output
G	TAN	294	Power Door Lock Motor Feed - Unlock	G	TAN	294	Power Door Lock Motor Feed - Unlock
H	GRY	295	Power Door Lock Motor Feed - Lock	H	GRY	295	Power Door Lock Motor Feed - Lock

C427 (Body Harness to Liftgate Harness)

--	--	--	--	--	--	--	--



Connector Part Information		<ul style="list-style-type: none"> • 12059885 • 1-Way F Metri-Pack 480 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12059884 • 1-Way M Metri-Pack 480 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	PPL	1093	Fuse Output - Rear Defog Element	A	PPL	1093	Fuse Output - Rear Defog Element


C428 (Body Harness to Liftgate Harness)




Connector Part Information		<ul style="list-style-type: none"> • 12047886 • 8-Way F Metri-Pack 150 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12045688 • 6-Way M Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	ORN	1240	Fuse Output - Battery	A	ORN	1240	Fuse Output - Battery
B	BLK	1350	Ground	B	BLK	1350	Ground
C	GRY	391	Liftglass Ajar Ground	C	GRY	391	Liftglass Ajar Ground
D	BLK	1350	Ground	D	BLK	1350	Ground
E	DK GRN	392	Rear Window Washer Pump Motor Input	E	DK GRN	392	Rear Window Washer Pump Motor Input
F	PNK/BLK	1303	Liftgate Ajar Switch Signal - Primary	F	PNK/BLK	1303	Liftgate Ajar Switch Signal - Primary

G	DK BLU/WHT	727	Liftglass Switch Signal - Secondary	G	DK BLU/WHT	727	Liftglass Switch Signal - Secondary
H	GRY	391	Rear Window Wiper Switch Output	H	GRY	391	Rear Window Wiper Switch Output

C429 (Body Harness to Liftgate Harness)

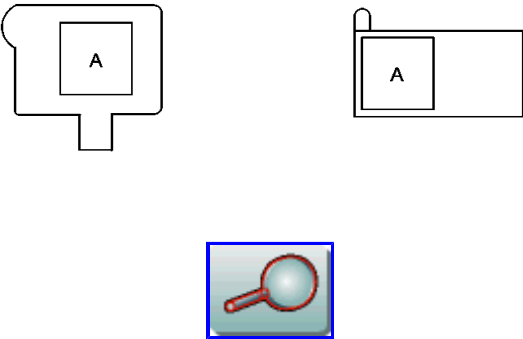
							
Connector Part Information		<ul style="list-style-type: none"> 12059885 1-Way F Metri-Pack 480 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12059884 1-Way M Metri-Pack 480 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BLK	1450	Ground	A	BLK	1450	Ground

C430 (Chassis Harness to License Lamp Harness) (Utility)

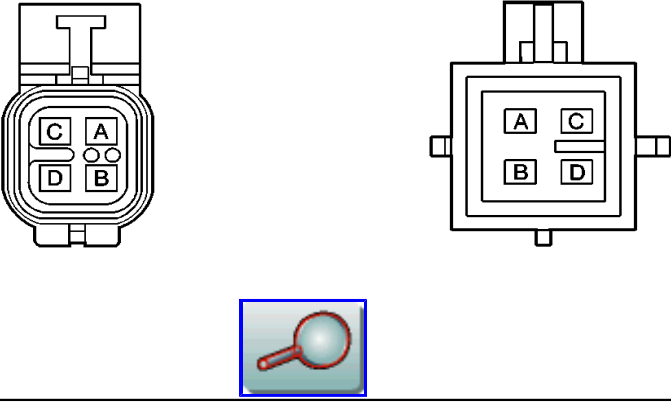							
Connector Part Information		<ul style="list-style-type: none"> 12160482 4-Way F Metri-Pack 150 Series, Sealed (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12160825 4-Way M Metri-Pack 150 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BRN	2109	Fuse Output - Trailer Park Lamp	A	BRN	2109	Fuse Output - Trailer Park Lamp
B	BRN	2109	Fuse Output - Trailer Park Lamp	B	BRN	2109	Fuse Output - Trailer Park Lamp


C	BLK	1650	Ground	C	BLK	11650	Ground
D	BLK	11650	Ground	D	BLK	11650	Ground

C432 (Body Harness to Endgate Liftglass Coiled Cord Connector, LH)

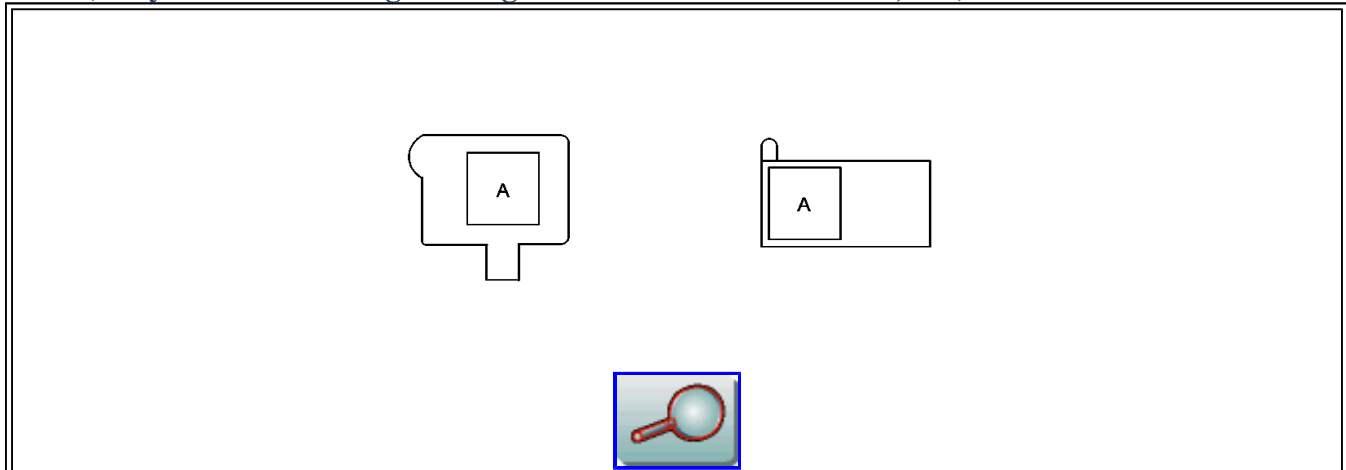

Connector Part Information				<ul style="list-style-type: none"> • 12059885 • 1-Way F Metri-Pack 480 Series (BLK) 				Connector Part Information				<ul style="list-style-type: none"> • 12059884 • 1-Way M Metri-Pack 480 Series (BLK) 			
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	PPL	1093	Fuse Output - Rear Defog Element	A	PPL	1093	Fuse Output - Rear Defog Element	A	PPL	1093	Fuse Output - Rear Defog Element	A	PPL	1093	Fuse Output - Rear Defog Element



C433 (Body Harness to Rear Window Defogger)

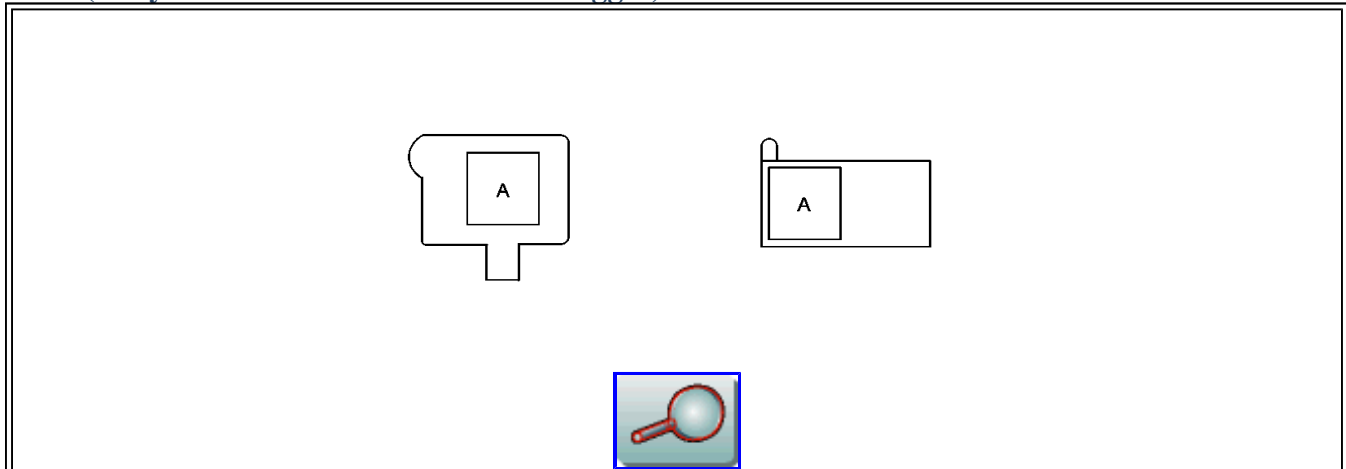

Connector Part Information				<ul style="list-style-type: none"> • 12059885 • 1-Way F Metri-Pack 480 Series (GRY) 				Connector Part Information				<ul style="list-style-type: none"> • 12045802 • 1-Way M Metri-Pack 480 Series (BLK) 			
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BLK	1450	Ground	A	BLK	1450	Ground	A	BLK	1450	Ground	A	BLK	1450	Ground



C471 (Body Harness to Rear Quarter Harness) (Envoy Only)



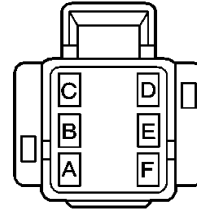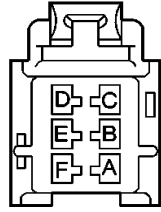

Connector Part Information		<ul style="list-style-type: none"> • 12064752 • 6-Way F Metri-Pack 150 Series (GRY) 		Connector Part Information		<ul style="list-style-type: none"> • 12064754 • 6-Way M Metri-Pack 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	BLK	1350	Ground	A	BLK	1350	Ground
B	YEL	321	Electronic Level Control Relay Output - Coil	B	YEL	321	Electronic Level Control Relay Output - Coil
C	ORN	1840	Fuse Output - Battery	C	ORN	1840	Fuse Output - Battery
D	LT BLU	1298	Electronic Level Control Inflation Timer Relay Output - N.C. Contact	D	LT BLU	1298	Electronic Level Control Inflation Timer Relay Output - N.C. Contact
E	ORN	1040	Fuse Output - Battery	E	ORN	1040	Fuse Output - Battery
F	--	--	Not Used	F	--	--	Not Used


C472 (Body Harness to Auto Level Control Harness) (Envoy Only)

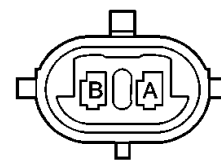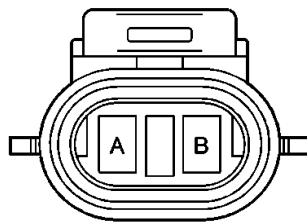

Connector Part Information		<ul style="list-style-type: none"> • 12052644 • 2-Way F Metri-Pack 150 Series 		Connector Part Information		<ul style="list-style-type: none"> • 12162343 • 2-Way M Metri-Pack 150 Series (GRY) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	YEL	321	Electronic Level Control	A	YEL	321	Electronic Level Control

			Relay Output - Coil				Relay Output - Coil
B	PNK	639	Fuse Output - Ignition	B	PNK	639	Fuse Output - Ignition



C500 (Body Harness to LH Front Door Harness)

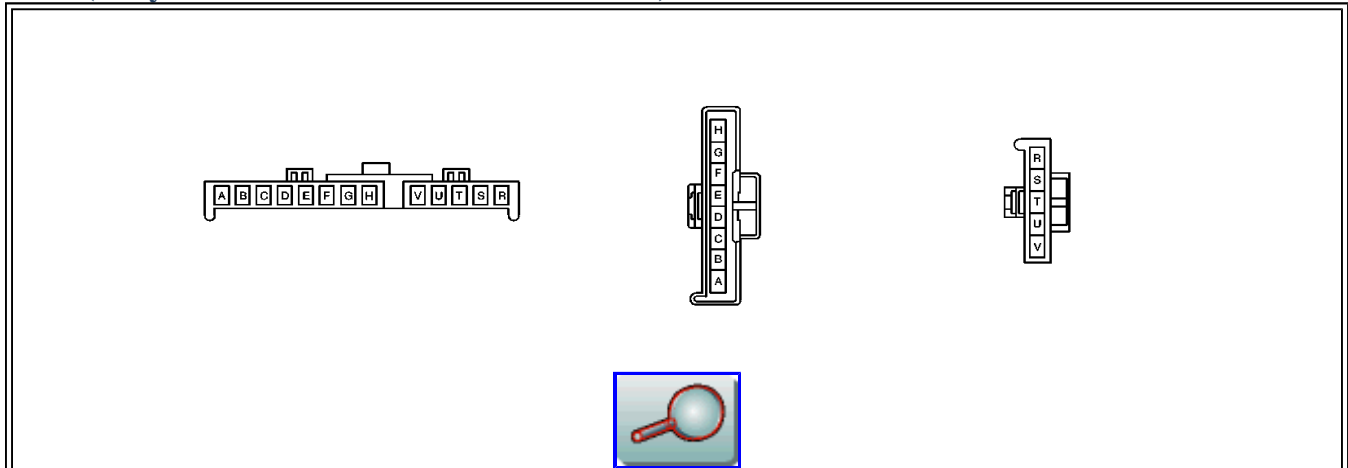

Connector Part Information		<ul style="list-style-type: none"> 12045801 13-Way F Metri-Pack 280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12045802, 12045803 13-Way M Metri-Pack 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A-C	--	--	Not Used	A-C	--	--	Not Used
D	ORN	54	Door Jamb Switch Signal - Passenger	D	ORN	54	Door Jamb Switch Signal - Passenger
E	BLK	1850	Ground	E	BLK	1850	Ground
F	DK GRN	1001	Fuse Output - Retained Accessory Power	F	DK GRN	1001	Fuse Output - Retained Accessory Power
G	LT BLU	166	Power Window Master Switch Output - Right Front WIN	G	LT BLU	166	Power Window Master Switch Output - Right Front WIN
H	TAN	167	Power Window Master Switch Output - Right Front Window - Down	H	TAN	167	Power Window Master Switch Output - Right Front Window - Down
R	DK GRN	168	Power Window Master Switch Output - Left Rear Window - Up	R	DK GRN	168	Power Window Master Switch Output - Left Rear Window - Up
S	PPL	169	Power Window Master Switch Output - Left Rear Window - Down	S	PPL	169	Power Window Master Switch Output - Left Rear Window - Down
T	LT GRN	170	Power window Master Switch Output - Right Rear Window	T	LT GRN	170	Power window Master Switch Output - Right Rear Window
U	PPL	171	Power Window Master Switch Output - Right Rear Window	U	PPL	171	Power Window Master Switch Output - Right Rear Window

V	DK BLU	1307	Power Window Master Switch Output - Lockout	V	DK BLU	1307	Power Window Master Switch Output - Lockout
---	-----------	------	------------------------------------------------	---	-----------	------	------------------------------------------------


C501 (Body Harness to LH Front Door Harness)

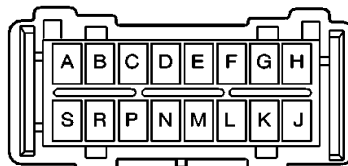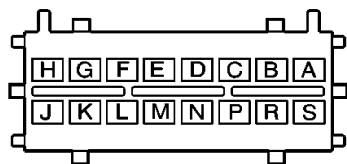

Connector Part Information		<ul style="list-style-type: none"> • 12129431 • 16-Way F Metri-Pack 280 Series, ACT (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12129427 • 16-Way M Metri-Pack 280 Series, ACT (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	ORN	840	Fuse Output - Battery	A	ORN	840	Fuse Output - Battery
B	WHT	194	Power Door Lock Relay Feed - Unlock Coil	B	WHT	194	Power Door Lock Relay Feed - Unlock Coil
C	LT BLU	195	Power Door Lock Relay Feed - Lock Coil	C	LT BLU	195	Power Door Lock Relay Feed - Lock Coil
D	GRY	295	Power Door Lock Motor Feed - Lock	D	GRY	295	Power Door Lock Motor Feed - Lock
E	RED/WHT	881	Power Mirror Motor Feed - Right Horizontal Motor - RI	E	RED/WHT	881	Power Mirror Motor Feed - Right Horizontal Motor - RI
F	PPL/WHT	889	Power Mirror Motor Feed - Right Vertical Motor - Down	F	PPL/WHT	889	Power Mirror Motor Feed - Right Vertical Motor - Down
G	YEL	1496	Power Mirror Motor Feed - Common	G	YEL	1496	Power Mirror Motor Feed - Common
H	--	--	Not Used	H	--	--	Not Used
J	TAN	694	Power Door Lock Motor Feed - Driver Door Unlock	J	TAN	694	Power Door Lock Motor Feed - Driver Door Unlock
L	WHT/BLK	1221	Liftgate Release Switch Output	L	WHT/BLK	1221	Liftgate Release Switch Output
M	BRN	2409	Fuse Output - Interior Park Lamps	M	BRN	2409	Fuse Output - Interior Park Lamps
N	BLK/WHT	56	Liftgate/Liftglass	N	BLK/WHT	56	Liftgate/Liftglass

			Release Motor Feed				Release Motor Feed
P	ORN	2267	Fuse Output - Heated Mirror Element	P	ORN	2267	Fuse Output - Heated Mirror Element
R	GRY	118	Speaker Return - Left Front	R	GRY	118	Speaker Return - Left Front
S	TAN	201	Speaker Feed - Left Front	S	TAN	201	Speaker Feed - Left Front


C510 (Body Harness to LH Front Door Harness) (Envoy Only)

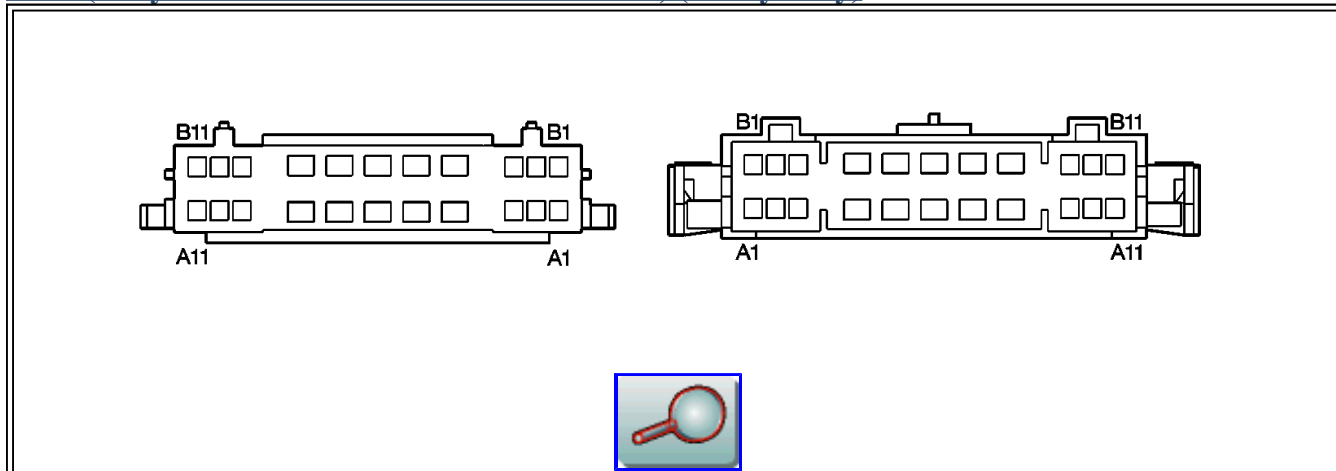

Connector Part Information		<ul style="list-style-type: none"> • 15317325 • 22-Way F Global Technology 150, 280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 15317322 • 22-Way M Global Technology 150, 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A1 - A3	--	--	Not Used	A1 - A3	--	--	Not Used
A4	BLK	1850	Ground	A4	BLK	1850	Ground
A5	DK GRN	1001	Fuse Output - Retained Accessory Power	A5	DK GRN	1001	Fuse Output - Retained Accessory Power
A6	LT BLU	166	Power Window Master Switch Output - Right Front Window - Up	A6	LT BLU	166	Power Window Master Switch Output - Right Front Window - Up
A7	TAN	167	Power Window Master Switch Output - Right Front Window - Down	A7	TAN	167	Power Window Master Switch Output - Right Front Window - Down
A8	DK GRN	168	Power Window Master Switch Output - Left Rear Window - Up	A8	DK GRN	168	Power Window Master Switch Output - Left Rear Window - Up
A9	ORN	54	Door Jamb Switch Signal - Passenger	A9	ORN	54	Door Jamb Switch Signal - Passenger
A10	LT GRN	262	Door Key Lock Cylinder Switch Signal - Driver	A10	LT GRN	262	Door Key Lock Cylinder Switch Signal - Driver

A11	--	--	Not Used	A11	--	--	Not Used
B1	GRY	118	Speaker Return - Left Front	B1	GRY	118	Speaker Return - Left Front
B2	TAN	201	Speaker Feed - Left Front	B2	TAN	201	Speaker Feed - Left Front
B3	--	--	Not Used	B3	--	--	Not Used
B4	PPL	169	Power Window Master Switch Output - Left Rear Window - Down	B4	PPL	169	Power Window Master Switch Output - Left Rear Window - Down
B5	LT GRN	170	Power Window Master Switch Output - Right Rear Window - Up	B5	LT GRN	170	Power Window Master Switch Output - Right Rear Window - Up
B6	PPL	171	Power Window Master Switch Output - Right Rear Window - Down	B6	PPL	171	Power Window Master Switch Output - Right Rear Window - Down
B7	DK BLU	1307	Power Window Master Switch Output - Lockout	B7	DK BLU	1307	Power Window Master Switch Output - Lockout
B8-B11	--	--	Not Used	B8-B11	--	--	Not Used


C600 (Body Harness to RH Front Door Harness, Utility)

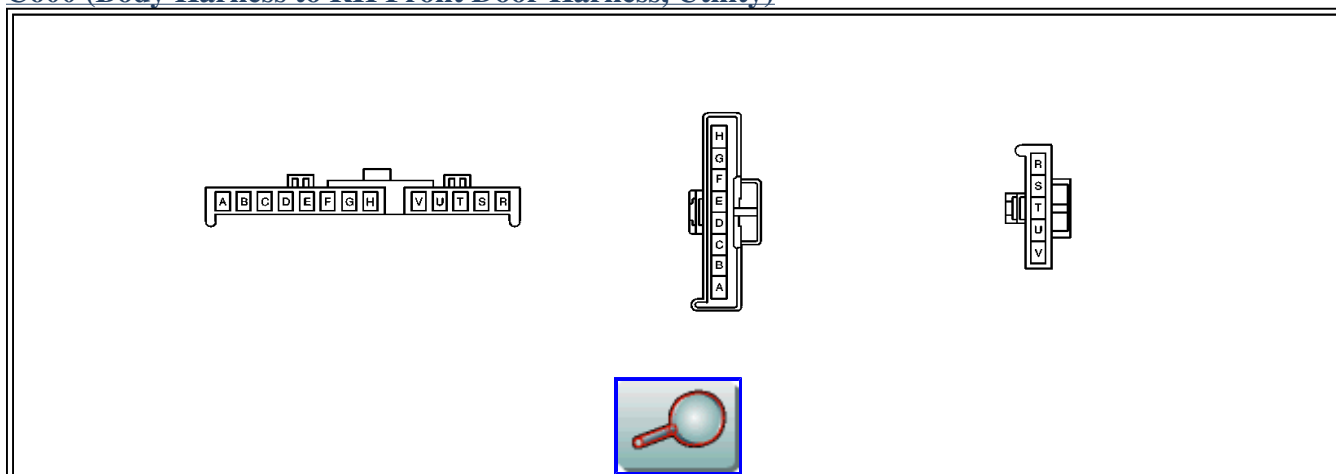

Connector Part Information		<ul style="list-style-type: none"> 12045801 13-Way F Metri-Pack 280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 12045802, 12045803 13-Way M Metri-Pack 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A-C	--	--	Not Used	A-C	--	--	Not Used
D	ORN	54	Door Jamb Switch Signal - Passenger (Utility)	D	ORN	54	Door Jamb Switch Signal - Passenger (Utility)
E	BLK	1050	Ground	E	BLK	1050	Ground
F (2-dr)	DK GRN	1001	Fuse Output - Retained Accessory Power	F (2-dr)	DK GRN	1001	Fuse Output - Retained Accessory Power

F (4-dr)	DK BLU	1307	Fuse Output - Retained Accessory Power	F (4-dr)	DK BLU	1307	Fuse Output - Retained Accessory Power
G	LT BLU	166	Power Window Master Switch Output - Right Front Window - Up	G	LT BLU	166	Power Window Master Switch Output - Right Front Window - Up
H	TAN	167	Power Window Master Switch Output - Right Front Window - Down	H	TAN	167	Power Window Master Switch Output - Right Front Window - Down
R-V	--	--	Not Used	R-V	--	--	Not Used


C601 (Body Harness to RH Front Door Harness, Utility)

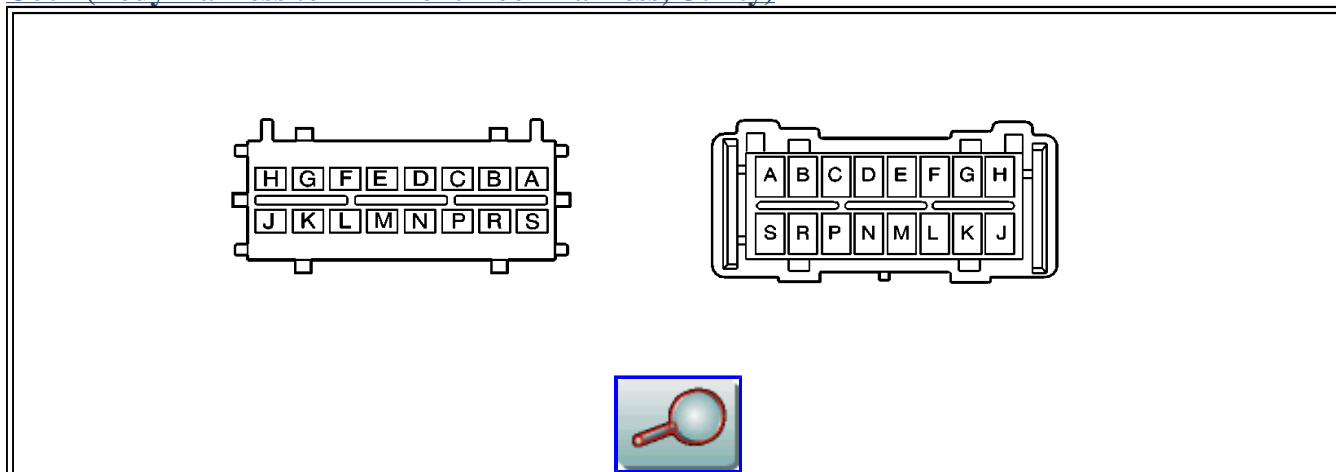

Connector Part Information		<ul style="list-style-type: none"> • 12129431 • 16-Way F Metri-Pack 280 Series, ACT (BLK) 		Connector Part Information		<ul style="list-style-type: none"> • 12129427 • 16-Way M Metri-Pack 280 Series, ACT (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	ORN	840	Fuse Output - Battery	A	ORN	840	Fuse Output - Battery
B	WHT	194	Power Door Lock Relay Feed - Unlock Coil	B	WHT	194	Power Door Lock Relay Feed - Unlock Coil
C	LT BLU	195	Power Door Lock Relay Feed - Lock Coil	C	LT BLU	195	Power Door Lock Relay Feed - Lock Coil
D	GRY	295	Power Door Lock Motor Feed - Lock	D	GRY	295	Power Door Lock Motor Feed - Lock
E	RED/WHT	881	Power Mirror Motor Feed - Right Horizontal Motor - Right Direction	E	RED/WHT	881	Power Mirror Motor Feed - Right Horizontal Motor - Right Direction
F	PPL/WHT	889	Power Mirror Motor Feed - Right Vertical Motor - Down Direction	F	PPL/WHT	889	Power Mirror Motor Feed - Right Vertical Motor - Down Direction
G	YEL	1496	Power Mirror Motor Feed - Common	G	YEL	1496	Power Mirror Motor Feed - Common

H	--	--	Not Used	H	--	--	Not Used
J	TAN	294	Power Door Lock Motor Feed - Unlock	J	TAN	294	Power Door Lock Motor Feed - Unlock
K-L	--	--	Not Used	K-L	--	--	Not Used
M	BRN	2409	Fuse Output - Interior Park Lamps	M	BRN	2409	Fuse Output - Interior Park Lamps
N	--	--	Not Used	N	--	--	Not Used
P	ORN	2267	Fuse Output - Heated Mirror Element	P	ORN	2267	Fuse Output - Heated Mirror Element
R	DK GRN	117	Speaker Return - Right Front	R	DK GRN	117	Speaker Return - Right Front
S	LT GRN	200	Speaker Feed - Right Front	S	LT GRN	200	Speaker Feed - Right Front

C610 (Body Harness to RH Front Door Harness) (Envoy Only)

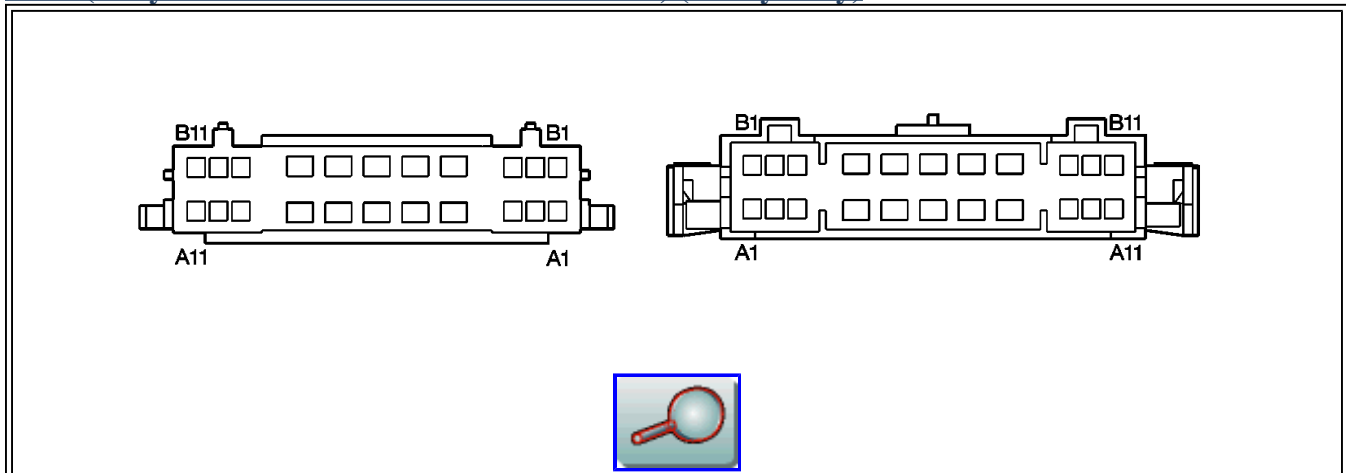

Connector Part Information		<ul style="list-style-type: none"> 15317325 22-Way F Global Technology 150, 280 Series (BLK) 		Connector Part Information		<ul style="list-style-type: none"> 15317322 22-Way M Global Technology 150, 280 Series (BLK) 	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A1	YEL	1496	Power Mirror Motor Feed - Common	A1	YEL	1496	Power Mirror Motor Feed - Common
A2	TAN	294	Power Door Lock Motor Feed - Unlock	A2	TAN	294	Power Door Lock Motor Feed - Unlock
A3	BRN	2409	Fuse Output - Interior Park Lamps	A3	BRN	2409	Fuse Output - Interior Park Lamps
A4	BLK	1050	Ground	A4	BLK	1050	Ground
A5	ORN	2267	Fuse Output - Heated Mirror Element	A5	ORN	2267	Fuse Output - Heated Mirror Element
A6	LT BLU	166	Power window Master Switch Output - Right	A6	LT BLU	166	Power window Master Switch Output - Right

			Front Window - Up				Front Window - Up
A7	TAN	167	Power Window Master Switch Output - Right Front Window - Down	A7	TAN	167	Power Window Master Switch Output - Right Front Window - Down
A8	LT GRN	262	Door Key Lock Cylinder Switch Signal - Driver	A8	LT GRN	262	Door Key Lock Cylinder Switch Signal - Driver
A9	ORN	54	Door Jamb Switch Signal - Passenger	A9	ORN	54	Door Jamb Switch Signal - Passenger
A10	RED/WHT	881	Power Mirror Motor Feed - Right Horizontal Motor - Right Direction	A10	RED/WHT	881	Power Mirror Motor Feed - Right Horizontal Motor - Right Direction
A11	PPL/WHT	889	Power Mirror Motor Feed - Right Vertical Motor - Down Direction	A11	PPL/WHT	889	Power Mirror Motor Feed - Right Vertical Motor - Down Direction
B1	DK GRN	117	Speaker Return - Right Front	B1	DK GRN	117	Speaker Return - Right Front
B2	LT GRN	200	Speaker Feed - Right Front	B2	LT GRN	200	Speaker Feed - Right Front
B3	ORN	840	Fuse Output - Battery	B3	ORN	840	Fuse Output - Battery
B4-B5	--	--	Not Used	B4-B5	--	--	Not Used
B6	DK BLU	1307	Power Window Master Switch Output - Lockout	B6	DK BLU	1307	Power Window Master Switch Output - Lockout
B7-8	--	--	Not Used	B7-8	--	--	Not Used
B9	WHT	194	Power Door Lock Relay Feed - Unlock Coil	B9	WHT	194	Power Door Lock Relay Feed - Unlock Coil
B10	LT BLU	195	Power Door Lock Relay Feed - Lock Coil	B10	LT BLU	195	Power Door Lock Relay Feed - Lock Coil
B11	GRY	295	Power Door Lock Motor Feed - Lock	B11	GRY	295	Power Door Lock Motor Feed - Lock

<- Back

Forward ->

Document ID# 417444
1998 Chevrolet/Geo Blazer - 2WD

Print