
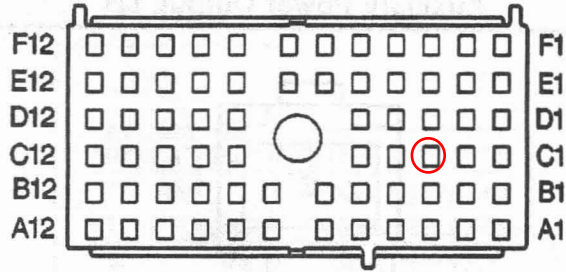


Body Relay Block

Body Relay Block (cont'd)

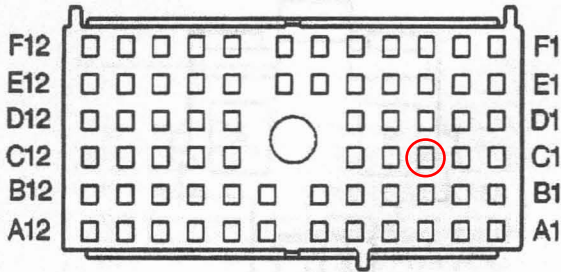

365994


365994

Connector Part Information		<ul style="list-style-type: none"> <li>• 12193905</li> <li>• 68-Way <b>F Metri-Pack 280 Series</b>, Flex Lock (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
A1	BRN/WHT	379	Cruise Control Clutch Pedal Switch Output
A1	BRN/WHT	379	Cruise Control Clutch Pedal Switch Output
A2	ORN	40	Fuse Output - Battery
A3	—	—	Not Used
A4	ORN	40	Fuse Output - Battery
A5	ORN	40	Fuse Output - Battery
A6	BLK/WHT	451	Engine Control Module Ground
A7	LT BLU	195	Power Door Relay Feed - Lock Coil
A7	LT BLU	195	Power Door Relay Feed - Lock Coil
A8	—	—	Not Used
A9	LT BLU	195	Power Door Relay Feed - Lock Coil
A10	BLK	552	Sensor Return
A10	BLK	552	Sensor Return
A11	YEL	10	Headlamp Switch Output (Except Envoy)
A11	ORN	3640	Fuse Output - Battery (Envoy)
A12	—	—	Not Used (Except Envoy)
A12	WHT	352	Headlamp Relay Feed - Coil (Envoy)
B1	ORN	1440	Fuse Output - Battery (w/ Auto A/C)
B2	BRN/WHT	379	Cruise Control Clutch Pedal Switch Output
B2	BRN/WHT	379	Cruise Control Clutch Pedal Switch Output
<b>B3</b>	DK GRN	1001	Fuse Output - <u>Retained Accessory Power</u>
B4	BLK/WHT	451	Engine Control Module Ground

Connector Part Information		<ul style="list-style-type: none"> <li>• 12193905</li> <li>• 68-Way <b>F Metri-Pack 280 Series</b>, Flex Lock (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
B4	BLK/WHT	451	Engine Control Module Ground
B5	BLK/WHT	451	Engine Control Module Ground
B6	BLK/WHT	451	Engine Control Module Ground
B7	BLK/WHT	451	Engine Control Module Ground
B8	—	—	Not Used
B9	GRY	295	Door Lock Actuator
B9	GRY	295	Door Lock Actuator
B10	BLK	552	Sensor Return
B10	BLK	552	Sensor Return
B11	LT BLU	195	Power Door Relay Feed - Lock Coil
B12	BLK	1850	Ground (Except Envoy)
B12	BLK/WHT	1969	High Beam Headlamp Relay Output - Coil
C1	—	—	Not Used
C2	WHT	156	Courtesy Lamp Output (w/Auto A/C)
C3	DK GRN	1001	Fuse Output - Retained Accessory Power (Pickup)
C4	DK BLU	1393	Interior Lamp Relay Output - Coil
C5	ORN	1732	Electronic Control Unit Output - 12 Volt Inadvertent Load Control
C6-C7	—	—	Not Used
C8	BLK	1850	Ground
C9	GRY	295	Power Door Lock Motor Feed - Lock
C10	—	—	Not Used
C11	LT GRN/BLK	592	Daytime Running Lamp Relay Output - Coil (Except Envoy)



Body Relay Block (cont'd)

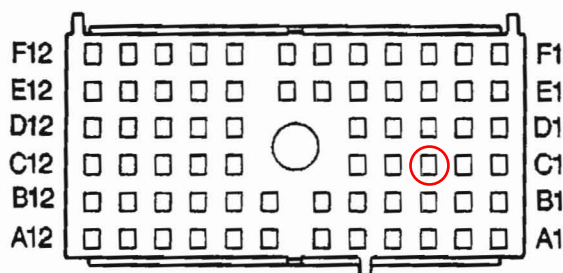


365994

365994

Connector Part Information		<ul style="list-style-type: none"> <li>• 12193905</li> <li>• 68-Way <u>F Metri-Pack</u> 280 Series, Flex Lock (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
C11	BLK/WHT	1969	High Beam Headlamp Relay Output - Coil (Envoy)
C11	BLK/WHT	1969	High Beam Headlamp Relay Output - Coil (Envoy)
C12	—	—	Not Used (Except Envoy)
C12	LT BLU	1346	Headlamp Relay Output - N.O. Contact (Envoy)
D1	—	—	Not Used
D2	BRN	4	Ignition Switch Output - Accessory
<b>D3</b>	DK GRN	1001	Fuse Output - <u>Retained Accessory Power</u> (Utility)
D4	WHT	156	Courtesy Lamp Output
D5-D7	—	—	Not Used
D8	TAN	294	Power Door Lock Motor Feed - Unlock
D8	TAN	294	Power Door Lock Motor Feed - Unlock
D9	BLK	1850	Ground (Utility)
D10	WHT	194	Power Door Lock Relay Feed - Unlock Coil (Utility)
D11	BLK/WHT	56	Trunk Release Motor Feed
D11	BLK/WHT	56	Trunk Release Motor Feed
D12	BLK/WHT	56	Trunk Release Motor Feed
E1	RED	542	Fuse Output - Battery
E2	BLK	755	Delayed Accessory Bus Relay Output - Coil - Accessory Relay
E3	BRN	4	Ignition Switch Output - Accessory
E4	WHT	156	Courtesy Lamp Output

Body Relay Block (cont'd)

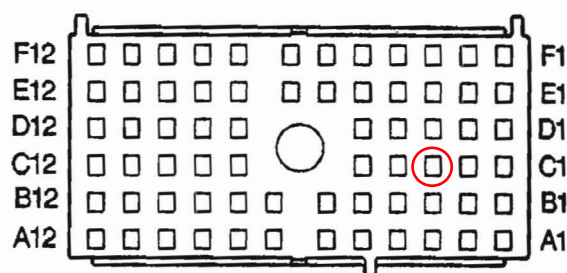

365994

Connector Part Information		<ul style="list-style-type: none"> <li>• 12193905</li> <li>• 68-Way <u>F Metri-Pack</u> 280 Series, Flex Lock (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
E5	ORN	1732	Electronic Control Unit Output - 12 Volt Inadvertent Load Control
E5	ORN	1732	Electronic Control Unit Output - 12 Volt Inadvertent Load Control
E6	LT BLU	74	Park Lamp Switch Output
E6	LT BLU	74	Park Lamp Switch Output
E7	—	—	Not Used
E8	WHT	194	Power Door Lock Relay Feed - Unlock Coil
E9	—	—	Not Used
E10	TAN	694	Driver Door Actuator
E11	LT GRN	1391	Driver Door Unlock Relay
E12	ORN	840	Fuse Output - Battery
F1-F2	—	—	Not Used
F3	DK BLU	75	Delayed Accessory Bus Relay Output - Common Contact - Accessory
F4	GRY/BLK	690	Courtesy Lamp Relay Output - Coil
F5	—	—	Not Used
F6	WHT	1080	Park Lamp Relay Output - Coil
F7	ORN	240	Fuse Output - Battery
F8	WHT	194	Power Door Lock Relay Feed - Unlock Coil
F9	ORN	1740	Fuse Output - Battery
F10	ORN	840	Fuse Output - Battery (Utility Only)
F11	—	—	Not Used
F12	ORN	840	Fuse Output - Battery (Utility Only)